OHM ELECTRIC COOL CABI

RoHS

取扱説明書

天井取付型

OCA-S300AC-A220-CN

OCA-S700AC-A220-CN

OCA-S1100AC-A220-CN

OCA-S1700AC-A220-CN

⚠ 注意

・ご使用になる前に必ずお読みください。
・いつも側に置いてお使いください。

≪目次≫

１．安全に関するご注意……２
２．制御盤への取付け方法……３～６
３．配線……７～８
４．運転……８～１３
５．アラーム・安全機能……１４～１５
６．メンテナンス……１５～１７
７．仕様……１８～２１
８．保証期間……２２
９．フロン回収について……２２
１０．廃棄について……２２

オーム電機株式会社

1．安全に関するご注意

● このクーラは制御盤用クーラです。本来の目的以外では、絶対に使用しないでください。
● ご使用になる前に「安全に関するご注意」をよくお読みの上、正しくお使いください。
● 取扱説明書に示した注意事項は、安全に関する重大な内容を記載していますので必ず守ってください。
表示と意味は次のようになっています。

⚠危険	取扱いを誤った場合、使用者が死亡または重傷を負う危険が切迫して生じることが想定される場合
⚠注意	取扱いを誤った場合､使用者が損害を負う危険が想定される場合および物的損害のみが想定される場合

「図記号」の意味は次のようになっています。

	絶対にしてはいけない「禁止」を意味します。		「回転物注意」を意味します。
	気をつけていただく「注意喚起」を意味します。		「感電注意」を意味します。
	必ず実施していただく「強制」を意味します。		

⚠危険	
	通電中は端子台に触らないでください。

⚠注意	
	通電中は前面カバーを外さないでください。ファン回転部に指や異物を入れないでください。 作業は電源を切り、ファンが停止してから行ってください。 →ケガの原因になります。
	屋外での使用はできません。
	引火性ガス、腐食性ガス、油煙、絶縁を悪くするチリ等が発生または充満する場所では使用できません。 →寿命の低下、損傷の原因になります。
	振動・衝撃のある場所では使用できません。
	本体の改造・修理は絶対にしないでください。また、修理をする場合はメーカーにご相談ください。
	冷却回路に密封されている冷媒や油は、環境保護のため専門的な処理が必要です。 廃棄処理をする場合、必ず専門の処理業者によって処理をしてください。
	クーラを設置する際、必ず周囲は円滑な空気循環が確保されている場所に設置または取付けてください。 →冷却能力が低下します。
	クーラを運搬する場合、必ず傾斜させないで垂直になる様に運搬してください。 また、制御盤に取付けた状態での運搬は絶対にしないでください。
	周囲温度が＋20℃～＋50℃で、周囲湿度が 85%RH 以下（非結露）の範囲で必ず使用してください。
	クーラを保管する時は、必ず横および逆さにせず、周囲温度が＋70℃を越すような環境では保管しないでください。
	クーラが納入された時、その梱包状態が損傷していないか確認してください。 →梱包の損傷は、クーラの故障の原因につながりますので、損傷を受けたクーラは絶対に使用しないでください。
	フィルタは、付属のものを使用してください。 →目の細かなフィルタを使用すると、放熱効率が下がり、冷却能力の低下・故障の原因になります。
	クーラは､お子様や身体に何らかの障害を持つ方､又はクーラに関する知識の無い方のご使用はお避けください。ただし、クーラに関する知識を有する者の監視の下、あるいはご使用に関する教育を受けている場合は、この限りではありません。

2．制御盤への取付け方法

2－1　取付けに関するご注意

⚠ 危険

クーラを制御盤へ取付けるときは、感電防止のため制御盤自体への電源供給を停止させてください。

⚠ 注意

クーラの設置には、付属品以外のものは使用しないでください。
→故障やケガの原因になります。

取付面(パネルカット)は、規定の寸法で加工してください。

クーラの取付けは、図のように必ず水平・垂直（±2°）に取付けてください。
→クーラの安定動作を図り、クーラで除湿した水をスムーズに排出させるためです。

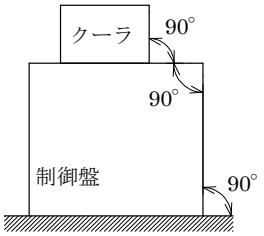

クーラの設置は、円滑な空気循環を確保し、他のユニットまたは壁と200mm 以上離して設置してください。
また制御盤内の空気循環が、必ず妨げられないようにしてください。
上記が守られないと、空気循環が悪くなり、冷却能力の低下や結露が生じます。

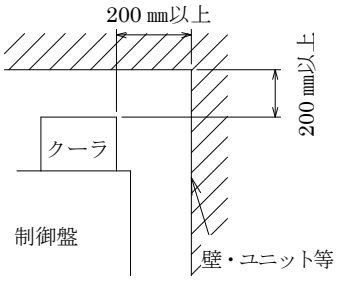

クーラの使用電源は、必ず銘板に表記してある指定定格電圧を使用してください。
また、クーラへの電源取入れ口には、必ず適切なブレーカを介して接続し、漏電による感電防止のため、アース線は必ず接地してください。

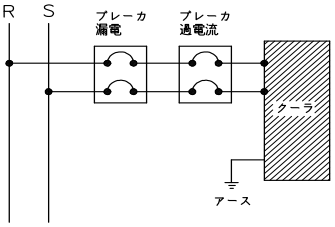

クーラの設置には電気工事が必要です。専門業者にご相談ください。
→配線等の設置工事に不備があると感電や火災の原因となります。

クーラを設置後、コンプレッサの保護のため、必ず 30 分以上経過してから通電、運転を開始してください。

設置する制御盤の気密性の確保（シーリング）を充分に行ってください。
→気密性が不充分であると結露が生じ、冷却効果が低下します。

制御盤へ取付面(パネルカット)を加工する際は、キリ粉が盤内機器に入らないよう布等でカバーしてから作業を行ってください。

ショートサーキットについて

クーラ冷風吹出口付近に制御盤内の機器や障害物がある場合、冷風がそれにあたりクーラの吸込口へ直接戻ってしまうことがあります（ショートサーキット）。
この場合、制御盤内に冷気が行き渡らず、盤内機器の故障の原因となります。
また、クーラの運転にも負荷がかかり、過電流やクーラの故障の原因となります。
クーラ運転時にショートサーキットが確認された場合は、整風板の取付けや、撹拌用ファンを設置するなどして冷風のショートサーキットを防止してください。

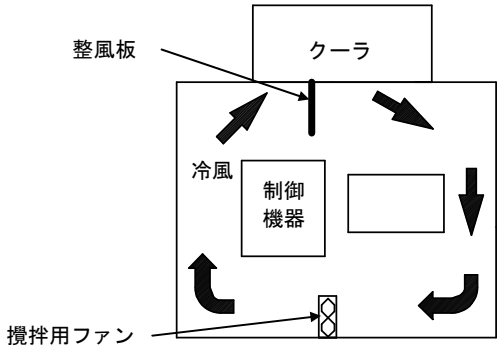

２－２　取付け手順

①各機種の盤外取付けパネルカット図（P.5）に従って、開口部を取付け面に加工してください。
②クーラ底面に付属のパッキンを貼ってください。（下記設置方法参照）
③付面（パネルカット）に合わせてクーラを設置してください。
④取付穴に付属の取付ボルトを盤外側より差し込んでください。（機種により本数が異なります。）
⑤盤内からワッシャ、ナットを使用して、確実に固定してください。
⑥制御盤の気密性を確保する為に、必要に応じてシーリングを行ってください。
⑦付属の「アラーム説明シール」を見やすい位置へ貼付けてください。

設置方法

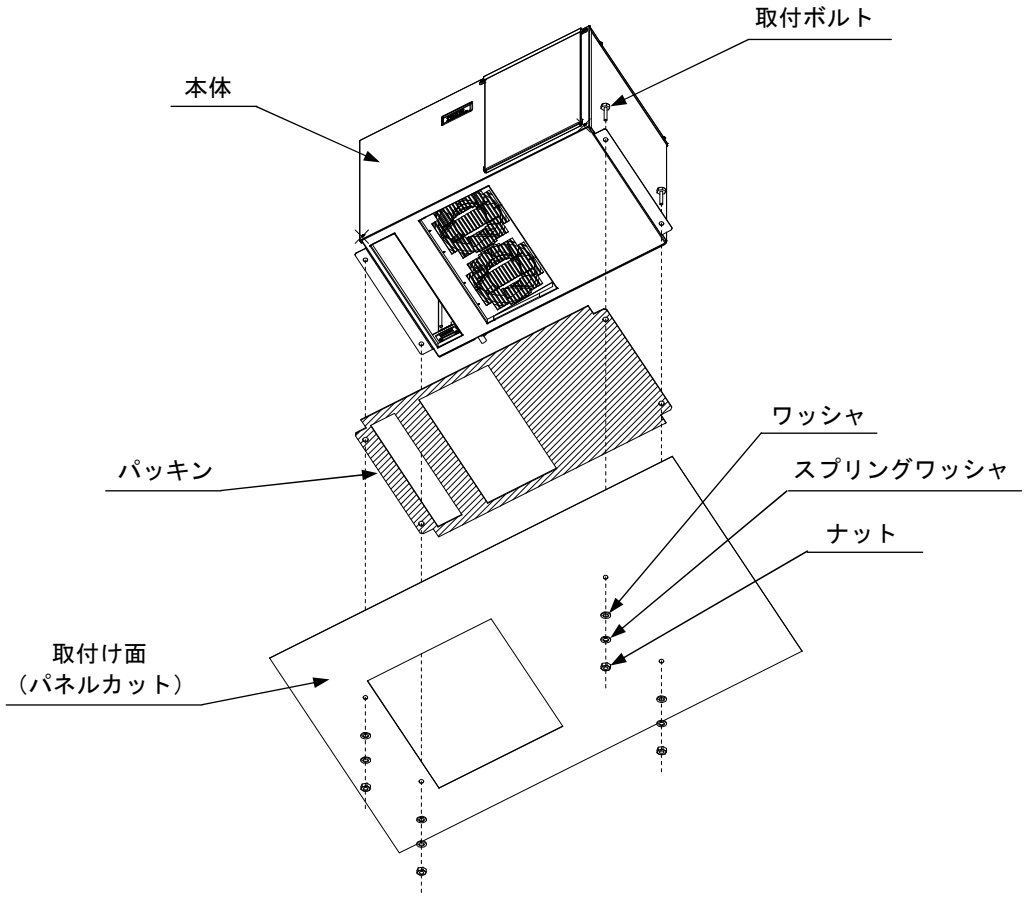

アラーム説明シール

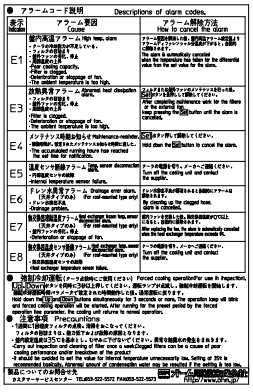

⚠注意

OCA-S700AC、OCA-S1100AC、OCA-S1700AC は上面に
アイボルト取付用ナットが２箇所あります。アイボルトを使用して吊り上げる場合には必ず２箇所を使用して均等に吊り上げてください。
１箇所のみで吊り上げるとクーラが故障、破損する可能性があります。

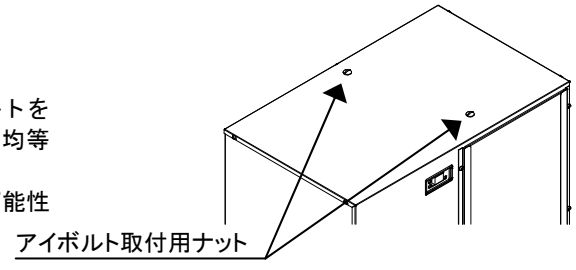

●盤外取付パネルカット図　＜盤外から見た図＞

OCA-S300AC-A220-CN	OCA-S700AC-A220-CN
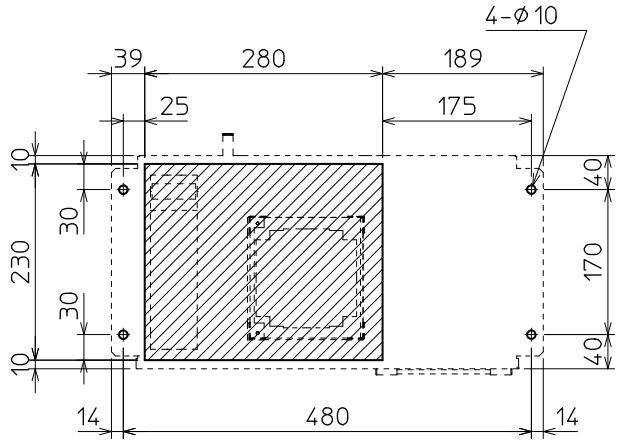	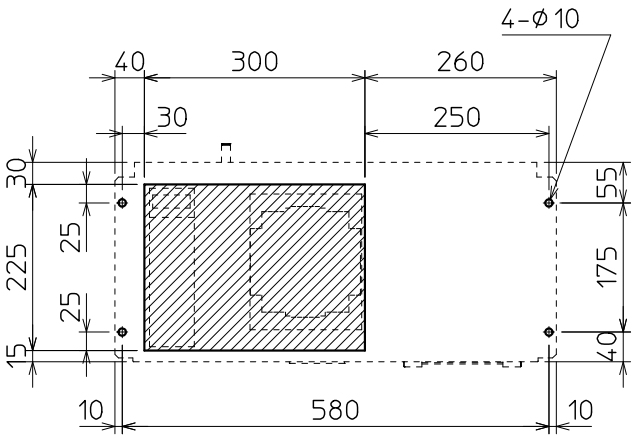
OCA-S1100AC-A220-CN	**OCA-S1700AC-A220-CN**
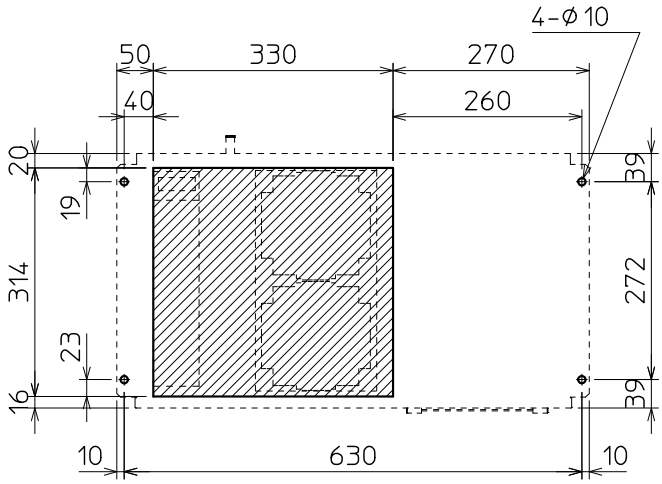	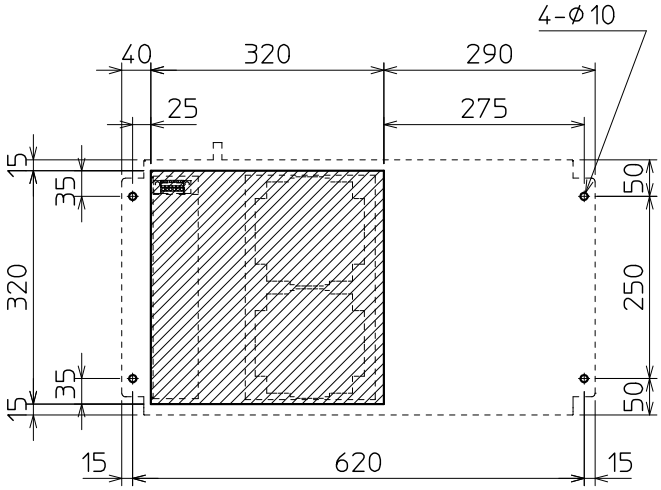

２－３　ドレンホースの取付け

クーラで除湿され発生した水は、ドレンホースを通して流れます。
ドレンホースは以下の注意点を守り、正しく取付けてください。

⚠ 注意

正しい取付けをしないと、クーラで除湿され発生した水がドレンホースを流れず、クーラ内の水受けよりオーバーフローして、クーラ内または盤内に水が浸入します。

・ドレンパイプにドレンホースを差し込む際は抜けないように根元まで差し込んでください。ドレンホースの先端とドレンパイプの接合部が緩い場合はホースバンドを使用し、確実な固定を行ってください。

・２本のドレンパイプを連結して使用しないでください。

・制御盤の角には付属のＬ継手を使用して、折れのないようにしてください。

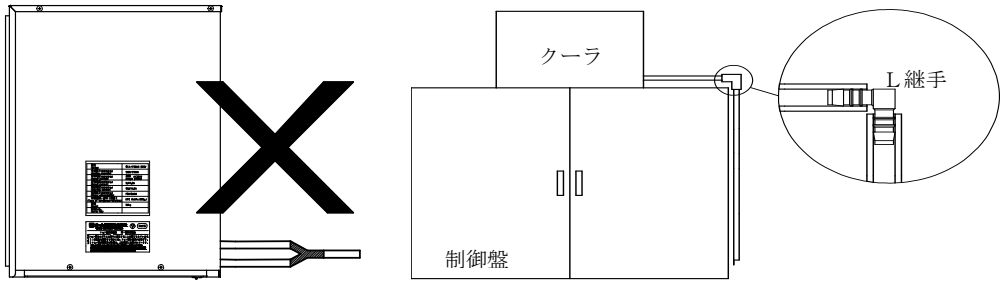

・ドレンホースは折り曲げたり、巻いたりしないで必ず直線になるように取付けてください。

・ドレンホースは、クーラ本体のドレンパイプの位置より高くならないようにしてください。

・ドレンホースの先端は、曲げないでまっすぐ下に向けてください。

・ドレンパイプの口元より横方向 50cm 以内で下におろすようにしてください。

・設置上どうしても横方向に 50cm 以上の引き回しが必要な場合は、必ず下り勾配にて取付けてください。

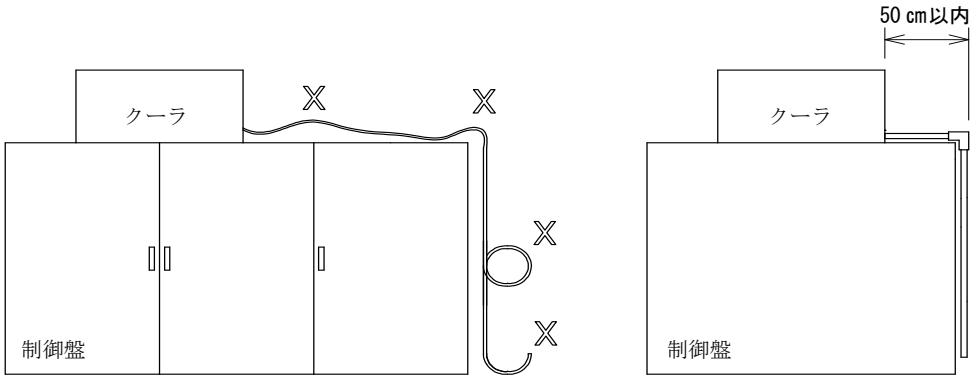

注意）ドレンパイプに無理な力を加えないでください！

・ドレンホースの先端が必ずドレン水に浸からない長さにしてください。

・ドレン水があふれ出ないように湿度の高い日などは必ずこまめに捨ててください。

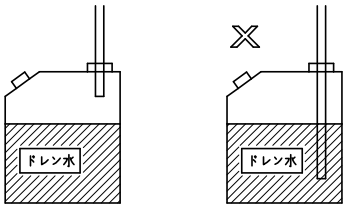

３．配線

⚠ 注意

・クーラの設置・配線は、設置する国の規則に従ってください。
・電圧は銘板の表示電圧に従ってください。
・クーラの許容電圧は表示電圧の±10%です。電圧変動時も許容電圧内におさまるよう、電源容量に注意してください。
・アース（Ｅ）は必ず接地してください。
・通電前に使用電圧、配線、接地に問題がないことを確認してから通電してください。

３－１　配線方法（適合電線径　AWG24～12／0.2～2.5mm²）

①電線の被覆を 6～7mm剥いてください。
②マイナスドライバーにて端子台の「接続時押しボタン」を押し込んでください。
③電線差込口に電線を差し込んでください。
④マイナスドライバーを引いてください。
⑤電線が抜けないことを確認してください。
⑥圧着端子を使用する場合はフェニックス・コンタクト社製棒端子を使用してください。

◎端子台詳細

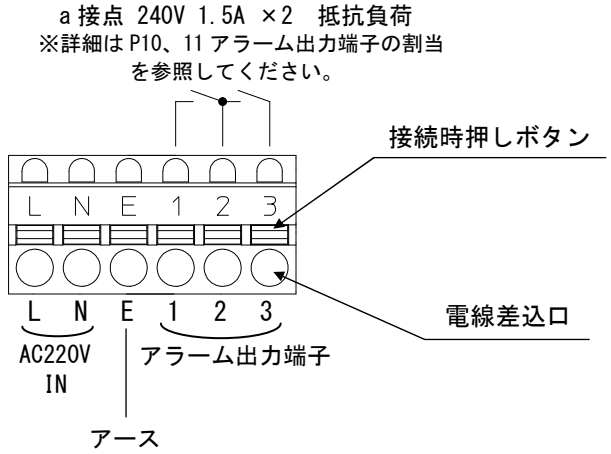

３－２　電気回路図（例：OCA-S1700AC）

※機種によりファンの数が異なります。

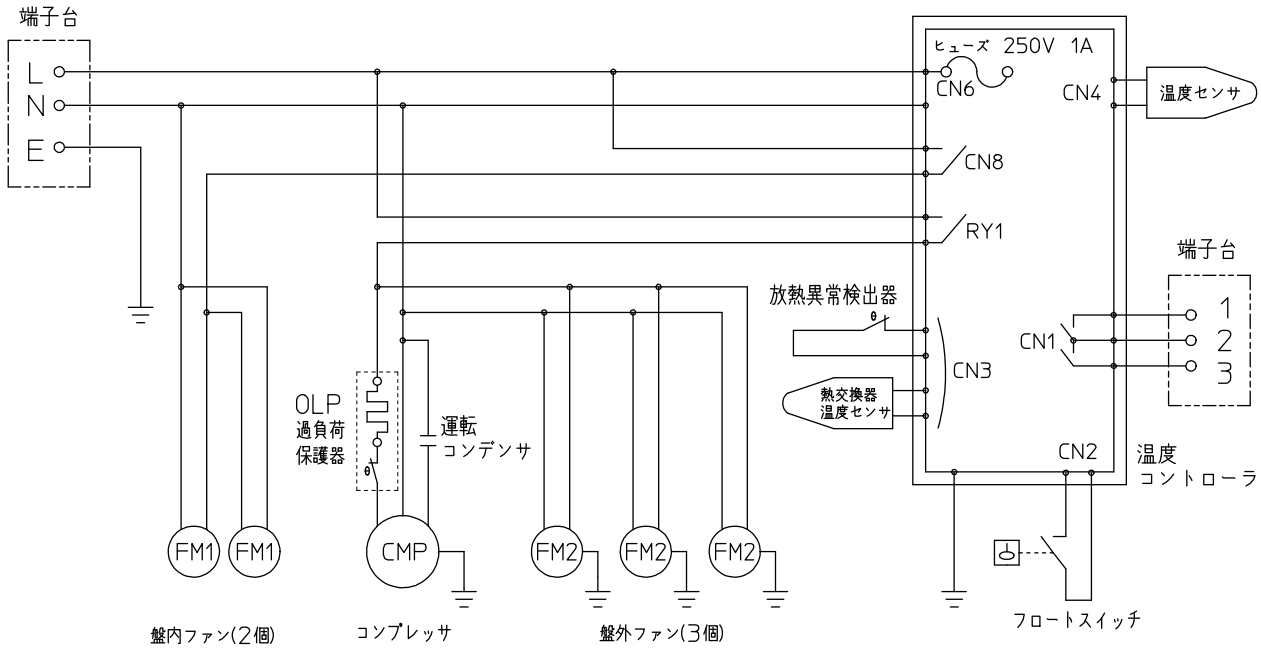

３－３　過電流保護について

⚠注意
クーラ専用の漏電ブレーカを必ず取付けてください。 → 専用の漏電ブレーカを入れないと、万が一漏電が発生した場合、制御盤自体の漏電ブレーカがトリップしてしまいます。

ご使用のクーラに合わせて選定してください。
・クーラは電源投入時および冷却運転開始時に約 1 秒間の始動電流が流れます。
この始動電流に誤動作することがなく、その後の過電流を遮断するブレーカを選定してください。
・クーラ専用ブレーカ容量は 15A 以下を推奨します。
・漏電ブレーカの定格感度電流は 30mA を目安にしてください。

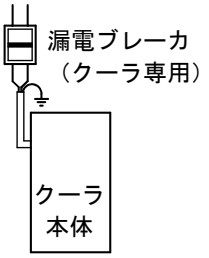

４．運転

４－１　運転に関するご注意

⚠注意
クーラを設置後、コンプレッサの保護のため、必ず 30 分以上経過してから通電、運転を開始してください。
コンプレッサの頻繁な ON／OFF は、故障の原因になり寿命を短くします。 1 時間に 6 回以上コンプレッサの ON／OFF を繰り返す様な運転は絶対しないでください。 頻繁な ON／OFF が起こる場合は、P.9 パラメータ設定のディファレンシャルの設定値を大きくしてください。
クーラの本体内に指を入れる事や、カバーを外したままでの運転は絶対しないでください。 →ケガの原因となります。
制御盤の扉を開放したままで、クーラの運転は絶対にしないでください。 →異常な結露および異常なドレン水の発生を招きます。また盤内に結露水が入る可能性があります。

４－２　操作パネル

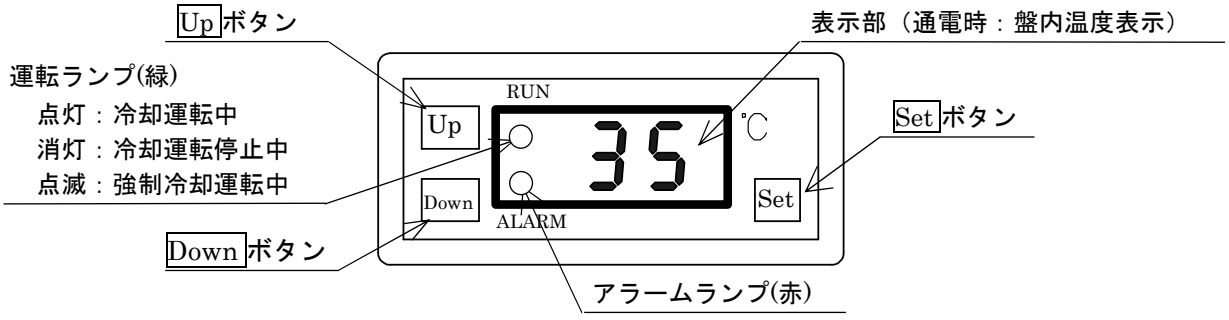

４－３　設定温度の変更

⚠注意
設定温度は＋35℃を基本とし、むやみに設定温度を下げないでください。 異常な結露および異常なドレン水の発生をまねきます。

② クーラの電源を投入してください。（表示部に現在の盤内温度が表示されます。）
②Set ボタンを押してください。（現在の設定温度が点滅にて表示されます。）
③Up、Down ボタンにて、ご希望の設定温度に変更してください。**（初期設定:35℃　設定温度範囲:30～45℃）**
④Set ボタンを押してください。（設定温度が変更され、通常運転に戻ります。）

４－４　強制冷却運転**（クーラ点検時等にご使用ください。）**
Up ボタンと Down ボタンを同時に 3 秒以上押してください。
運転ランプが点滅し強制冷却運転を開始します。強制冷却運転時間パラメータで設定された時間動作した後、通常運転に戻ります。**（強制冷却運転時間の初期設定は 30 秒です。）**

４－５　パラメータ設定

通常、パラメータは設定を変更する必要はありませんが、変更の必要がある場合には下記の方法で変更してください。

○現在の盤内温度が表示されている状態から、Set ボタンを 3 秒以上押してください。

以下の順序でパラメータが表示されます。Set ボタンを押すことにより、次パラメータへ移動します。変更したいパラメータを表示させ、Up ボタン・Down ボタンで設定値を変更し、Set ボタンを押すことによってパラメータの変更が決定されます。



・ディファレンシャル[表示：ｄＦ]　**初期設定：5℃**　設定範囲：3～10℃

説明：(設定温度-ディファレンシャル)の温度に達した場合、コンプレッサが停止します。

注意：このパラメータを変更する際には、1 時間に 6 回以上コンプレッサが ON／OFF を繰り返さない様な設定温度およびディファレンシャルにしてください。



・強制冷却運転時間[表示：Ｃｄ]　**初期設定：30 秒**　設定範囲：0～90 秒

Up　Down ボタンを同時に 3 秒以上押したときに、強制冷却運転を行う時間です。

・盤内高温アラーム温度[表示：ＡＬ]　**初期設定：45℃**　設定範囲：35～51℃

説明：盤内高温アラームが発生する温度です。



・盤内高温アラーム用ディファレンシャル[表示：ｄＡ]　**初期設定：2℃**　設定範囲：1～20℃

説明：盤内高温アラーム復帰用ディファレンシャルです。
(盤内高温アラーム温度-ディファレンシャル)の温度に達した場合、アラームが解除されます。



・メンテナンスお知らせ機能[表示：ＦＩ]　**初期設定：0**　設定範囲：0～99

説明：メンテナンスの時期をお知らせする機能です。
0：　メンテナンスお知らせ機能を使用しない。
1～99：　1 を 100 時間としメンテナンス時期をお知らせします。
（制御基板内部では、1 時間単位にて時間をカウントしています。）
例：99 設定⇒電源投入後 9900 時間後にメンテナンス時期をお知らせします。
（24 時間稼働の機械で約 412 日後）



・電源投入時に強制冷却運転の動作設定[表示：ＣＳ]　**初期設定：0**　設定範囲：0、1

説明：クーラの電源投入時に、強制冷却運転を行うかを設定します。
0：電源投入時に強制冷却運転しない。
1：電源投入時に強制冷却運転する。

・放熱異常時の冷却運転復帰方法の設定[表示：Ｐｒ]　**初期設定：0**　設定範囲：0、1

説明：放熱異常アラーム発生時の復帰方法を設定します。
0：手動復帰（アラーム解除方法は P.14「5-1 (2)」を参照してください。）
1：自動復帰（アラーム解除方法は P.14「5-1 (2)」を参照してください。）

注意：自動復帰に設定した場合、冷凍回路内の放熱異常検出器が復帰すると冷却運転を再開しますが、接点出力およびアラームコード表示はリセットされません。
放熱異常の原因が解消されないまま自動復帰を繰り返すと、クーラが故障する原因となりますので、お早めにメンテナンスを行ってください。

・メンテナンスお知らせ機能の出力設定[表示：Ｆｏ]　**初期設定：1**　設定範囲：0、1

説明：メンテナンスお知らせ時間に達した時、アラーム出力端子で OPEN・CLOSE 切替えの有無を設定します。出力端子の OPEN・CLOSE は次ページのアラーム出力端子の割当表を参考にしてください。
0：切替えをしない。
1：切替えをする。
※0 に設定した場合、メンテナンスお知らせ時間になってもアラーム出力端子からは出力されません。ただし、表示パネルには E４と表示されます。



・アラーム出力端子の割当設定[表示：ＡＳ]　**初期設定：0**　設定範囲：0～3

説明：アラームを検出すると、アラーム出力端子から出力されます。アラーム発生時のアラーム出力端子の割当を設定することができます。
0：アラーム出力の監視
1：冷却動作とアラーム出力の監視
2：アラーム出力時、電源再投入の必要性の監視
3：アラーム発生時、冷却運転継続の監視

※アラーム出力端子の割当設定の詳細は P.10、11 を参照してください。

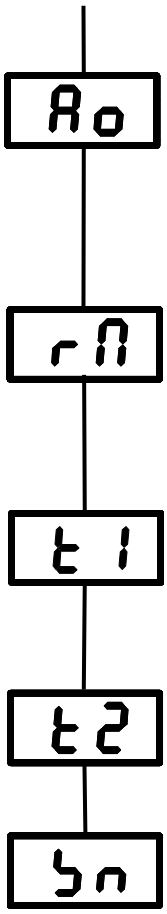

・アラーム出力端子の切替方法の選択[表示：Ａｏ] **初期設定：0** 設定範囲：0、1
説明：出力端子の OPEN・CLOSE の切り替えを反転させることができます。
0：アラーム出力端子の割当設定の通りに出力されます。
1：0 の時と逆の動作をします。ただしＡＳ：1 の時、端子 2-3 間には働きません。
※アラーム出力端子の割当設定の詳細は P.10、11 を参照してください。

・運転モードの設定[表示：ｒＭ] **初期設定：1** 設定範囲：0～3
説明：クーラの運転モードを設定します。
0：連続運転
1：省エネ運転①
2：省エネ運転②
3：省エネ運転③
※運転モードの詳細は P.12、13 を参照してください。

・省エネ運転③の冷却運転時間の設定[表示：ｔ１]
初期設定：7 設定範囲：7～60 分
説明：省エネ運転③に設定した時の冷却運転時間を設定します。
※ｒＭ：3 の時、表示されます。

・盤外ファン・コンプレッサの停止時間の設定 [表示：ｔ２]
初期設定：3 設定範囲：3～10 分
説明：コンプレッサが停止した後、再び動作できるまでの時間を設定します。コンプレッサの頻繁な ON／OFF を防ぐ為、この間は設定温度以上でも冷却運転を開始しません。

・ソフトウェアバージョンの表示[表示：Ｓｎ]
説明：コントローラのソフトウェアのバージョンを表示します。変更はできません。

○設定が終了しましたら、Set ボタンを 3 秒以上押してください。現在盤内温度表示に戻り、設定が記憶されます。
○パラメータ変更を行っているとき、30 秒間ボタンを押さなかった場合は設定が記憶されずに盤内温度表示にもどります。
再度パラメータ変更を行う場合は、Set ボタンを 3 秒以上長押ししてください。

４－６　アラーム出力端子の割当

アラームを検出すると、アラーム出力端子から出力されます。アラーム発生時のアラーム出力端子を設定することで様々な動作の監視をすることができます。この設定はパラメータの AS と Ao を変更することで機能します。
クーラの電源投入前は端子 1-2 間、端子 2-3 間がともに OPEN となっています。
電源投入後、出力端子が切替るまでに 0.8 秒のタイムラグがあります。

（１）アラーム出力の監視[AS：0] **【初期設定】**
各種アラームが発生した場合に出力が切り替わります。

（２）冷却動作とアラーム出力の監視[AS：1]
冷却動作を行っている場合と各種アラームの発生した場合に出力が切り替わります。

（３）アラーム出力時、電源再投入の必要性の監視[AS：2]
各種アラームが発生した場合、解除に電源を再投入する必要があるアラームと、自動復帰または手動復帰により解除するアラームを区別することができます。

（４）アラーム発生時、冷却運転継続の監視[AS：3]
各種アラームが発生した場合に冷却運転を継続するアラームと、停止するアラームで区別することができます。

アラーム出力端子の割当表[Ao：0]

AS	クーラの状態		端子 1-2 間	端子 2-3 間	機能
0	通常運転中		CLOSE	OPEN	アラーム出力の監視
	各種アラーム出力 ON		OPEN	CLOSE	
1	冷却動作中	各種アラーム出力 ON	CLOSE	CLOSE	冷却動作と アラーム出力の監視
		各種アラーム出力 OFF	OPEN	CLOSE	
	冷却動作停止中	各種アラーム出力 ON	CLOSE	OPEN	
		各種アラーム出力 OFF	OPEN	OPEN	
2	E1, E3, E4*, E6, E7 アラーム出力 ON	E5, E8, SE アラーム ON	CLOSE	CLOSE	アラーム出力時、 電源再投入の 必要性の監視
		E5, E8, SE アラーム OFF	OPEN	CLOSE	
	E1, E3, E4*, E6, E7 アラーム出力 OFF	E5, E8, SE アラーム ON	CLOSE	OPEN	
		E5, E8, SE アラーム OFF	OPEN	OPEN	
3	E1, E4*アラーム ON	E3, E5, E6, E7, E8, SE アラーム ON	CLOSE	CLOSE	アラーム出力時、 冷却運転継続の監視
		E3, E5, E6, E7, E8, SE アラーム OFF	OPEN	CLOSE	
	E1, E4*アラーム OFF	E3, E5, E6, E7, E8, SE アラーム ON	CLOSE	OPEN	
		E3, E5, E6, E7, E8, SE アラーム OFF	OPEN	OPEN	

※E4 アラームはＦｏ(P.9)：0 の時、出力されません。

アラーム出力端子の割当表[Ao：1]

AS	クーラの状態		端子 1-2 間	端子 2-3 間	機能
0	通常運転中		OPEN	CLOSE	アラーム出力の監視
	各種アラーム出力 ON		CLOSE	OPEN	
1	冷却動作中	各種アラーム出力 ON	OPEN	CLOSE	冷却動作と アラーム出力の監視
		各種アラーム出力 OFF	CLOSE	CLOSE	
	冷却動作停止中	各種アラーム出力 ON	OPEN	OPEN	
		各種アラーム出力 OFF	CLOSE	OPEN	
2	E1, E3, E4*, E6, E7 アラーム出力 ON	E5, E8, SE アラーム ON	OPEN	OPEN	アラーム出力時、 電源再投入の 必要性の監視
		E5, E8, SE アラーム OFF	CLOSE	OPEN	
	E1, E3, E4*, E6, E7 アラーム出力 OFF	E5, E8, SE アラーム ON	OPEN	CLOSE	
		E5, E8, SE アラーム OFF	CLOSE	CLOSE	
3	E1, E4*アラーム ON	E3, E5, E6, E7, E8, SE アラーム ON	OPEN	OPEN	アラーム出力時、 冷却運転継続の監視
		E3, E5, E6, E7, E8, SE アラーム OFF	CLOSE	OPEN	
	E1, E4*アラーム OFF	E3, E5, E6, E7, E8, SE アラーム ON	OPEN	CLOSE	
		E3, E5, E6, E7, E8, SE アラーム OFF	CLOSE	CLOSE	

※E4 アラームはＦｏ(P.9)：0 の時、出力されません。

４－７　運転設定

クーラは通電を開始すると、各運転モードで動作します。
初期設定ではクーラの設定温度 35℃、ディファレンシャル 5℃に設定してあります。
したがって、制御盤内の温度が 35℃でコンプレッサが動作、冷却を開始し、30℃で停止します。
運転モードは、連続運転、省エネ運転①、②、③の 4 モードから選択することができます。

運転の際の共通注意事項は以下となります。

・通電開始時に盤内の温度が盤内高温アラーム温度以上の場合には、ＡＳ、Ａｏの設定により、P.11 のアラーム出力端子の割当表に従って、アラームランプが点灯します。
・冷却動作が停止してから一定時間（初期設定：3 分）は、制御盤内の温度が設定温度まで上昇しても冷却動作を行いません。

（１）連続運転
盤内の温度が設定温度で運転し、ディファレンシャル温度で盤外ファン・コンプレッサが停止します。
盤内ファンは常時動作します。（　）内の表示は初期設定です。

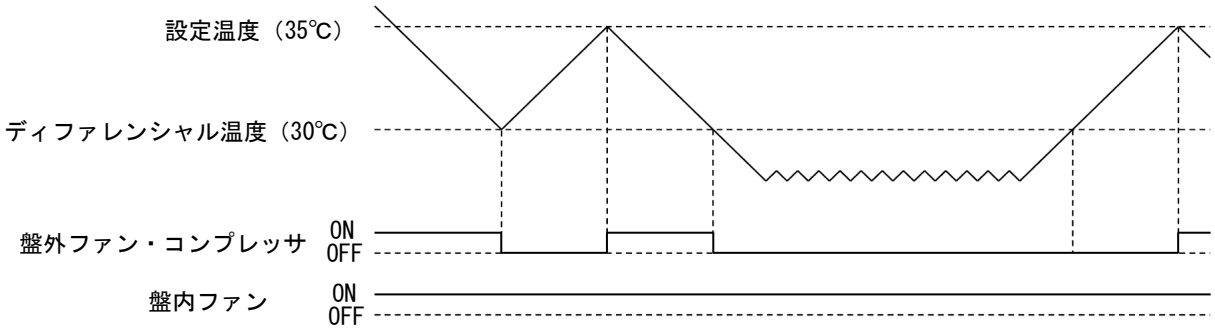

（２）省エネ運転①**【初期設定】**
盤内の温度がディファレンシャル温度よりも低くなると盤内ファンが 30 分に 1 回、30 秒間の送風運転を行います。この動作を行うことによって制御盤内の熱だまりを防止することができます。冬場など冷却運転をしていない場合、盤内ファンが間欠運転となることで省エネとなります。（　）内の表示は初期設定です。

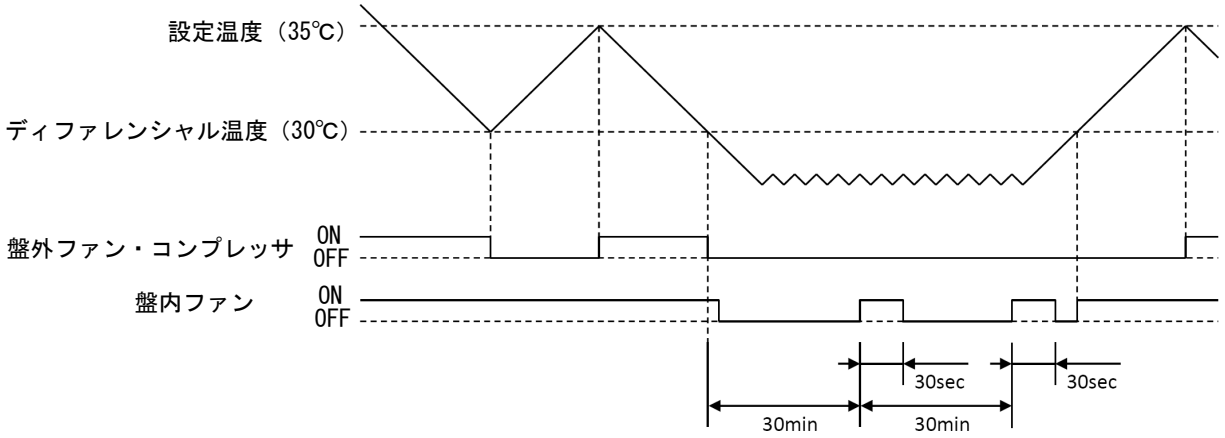

【注意】・盤内ファンは冷凍回路保護のため、冷却動作停止してから 5 分後に停止します。
・盤内の温度がディファレンシャル温度以上になると盤内ファンは連続動作します。

（３）省エネ運転②

盤内ファンの動作が冷却動作と連動します。

冬場など冷却運転をしていない場合、盤内ファンは停止することで省エネとなります。（　）内の表示は初期設定です。

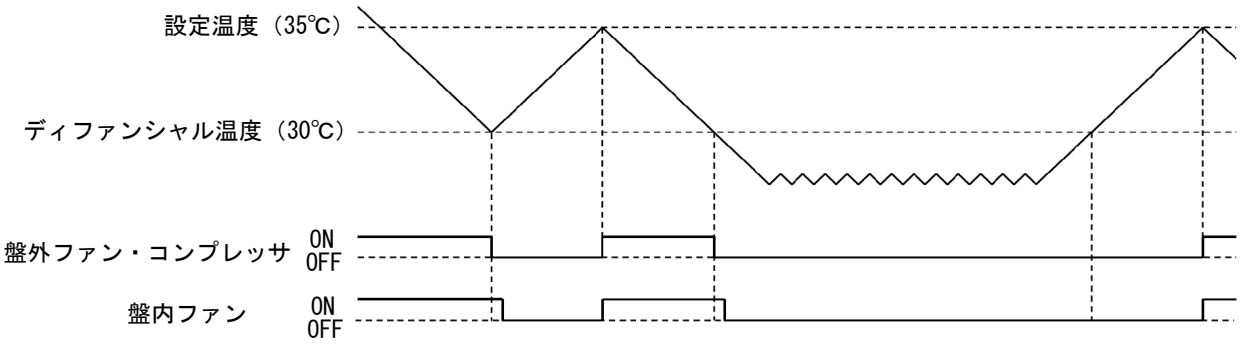

【注意】・盤内ファンが停止する事で空気が循環されないことにより、局所的な温度上昇(熱だまり)が発生する可能性があります。

・盤内ファンは冷凍回路保護のため、冷却運転停止してから 5 分後に停止します。

（４）省エネ運転③

盤内温度が設定温度以下になるがディファレンシャル温度まで下がらない場合に、冷却動作時間と停止時間を設け、一定のサイクルでＯＮ・ＯＦＦする事により、省エネとなります。パラメータ設定ｔ１とｔ２で冷却動作時間と停止時間を設定することができます。（　）内は初期設定です。

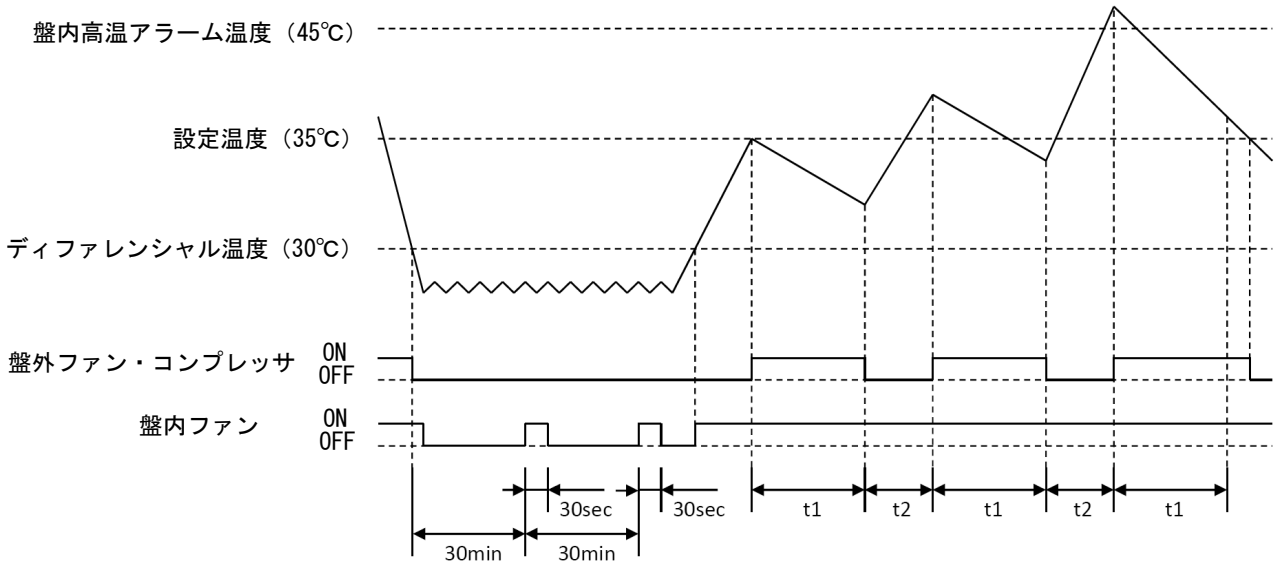

※盤外ファン・コンプレッサ間欠運転時の冷却動作時間（7 分）

※盤外ファン・コンプレッサの停止時間（3 分）

【注意】・コンプレッサを一定時間で強制的に動作停止させる為、盤内温度が設定温度よりも高くなる場合があります。

また、盤内発熱量が大きい場合、盤内温度が盤内高温アラーム温度以上になる場合があります。

・盤内温度の過上昇防止のため、設定した冷却動作時間で設定温度まで下がらない場合は、盤内温度が設定温度より低くなるまで冷却動作を継続します。

・盤内ファンは冷凍回路保護のため、冷却動作停止してから 5 分後に停止します。

・盤内の温度がディファレンシャル温度以上になると盤内ファンは連続動作します。

５．アラーム・安全機能

５－１　アラーム

（１）**Ｅ１**：盤内高温アラーム

盤内温度が 45℃（初期設定）になると、アラーム出力端子がＡＳ、Ａｏの設定により(P.11 のアラーム出力端子の割当表参照)出力する時、アラームランプが点灯します。表示部には現在の盤内温度とＥ１が交互に表示され、盤内温度の高温をお知らせします。この時、冷却運転は停止しません。

盤内の温度が 43℃（初期設定）以下になると、アラームランプは消灯し、表示部には盤内温度のみが表示されます。

（２）**Ｅ３**：放熱異常アラーム

フィルタやフィンの目詰まり、ファンモータの故障等によりクーラが放熱異常状態になると、冷凍回路内の放熱異常検出器が作動し、冷却運転を停止させます。この時アラーム出力端子がＡＳ、Ａｏの設定により(P.11 のアラーム出力端子の割当表参照）出力する時、アラームランプが点灯します。表示部には現在の盤内温度とＥ３が交互に表示され、放熱異常をお知らせします。

フィルタやフィンの清掃およびファンモータの交換を行った後、温度コントローラの Set ボタンを 3 秒以上長押しして、アラームを解除してください。クーラは通常運転を再開します。

（３）**Ｅ４**：メンテナンスお知らせ機能

クーラの積算運転時間が、設定されたメンテナンスお知らせ時間に達すると、アラーム出力端子がＡＳ、Ａｏ、Ｆｏの設定により(P.11 のアラーム出力端子の割当表参照)出力する時、アラームランプが点灯します。現在の盤内温度とＥ４を交互に表示して、メンテナンス時期をお知らせします。この時、冷却運転は停止しません。

フィルタなどのメンテナンスをおこなった後、Set ボタンを押してアラームを解除してください。

メンテナンスお知らせ時間の設定を変更した場合は、それまでの積算時間はリセットされ 1 時間よりカウントされます。

（４）**Ｅ５**：温度センサ断線アラーム

何らかの原因で内部温度センサが断線した場合は、冷却運転を停止させます。アラーム出力端子がＡＳ、Ａｏの設定により(P.11 のアラーム出力端子の割当表参照）出力する時、アラームランプが点灯します。表示部にはＥ５のみが表示されます。クーラの電源を切り、メーカーにご連絡ください。

（５）**Ｅ６**：ドレン水異常アラーム

ドレンホースの詰まり等により、ドレン水が排出されなくなると、ドレンパンに取付けられたフロートスイッチが作動し冷却運転を停止させます。アラーム出力端子がＡＳ、Ａｏの設定により(P.11 のアラーム出力端子の割当表参照）出力する時、アラームランプが点灯します。表示部には現在の盤内温度とＥ６が交互に表示され、ドレン水異常をお知らせします。

ドレンホースの詰まり等を直し、ドレン水が正常に排出されると、クーラは自動復帰により通常運転を再開します。

（６）**Ｅ７**：熱交換器凍結温度アラーム

フィンの目詰まり、盤内ファンの故障等により、冷却側の熱交換器が 0℃以下になった場合には、冷却運転を停止させます。アラーム出力端子がＡＳ、Ａｏの設定により(P.11 のアラーム出力端子の割当表参照)出力する時、アラームランプが点灯します。表示部にはＥ７と現在の熱交換器の温度を交互に表示され、熱交換器の凍結をお知らせします。

フィンの清掃および盤内ファンの交換を行った後、温度コントローラの Set ボタンを 3 秒以上長押しして、アラームを解除してください。クーラは通常運転を再開します。

（７）**Ｅ８**：熱交換器温度センサ断線アラーム

何らかの原因で冷却側の熱交換器温度センサが断線した場合は、冷却運転を停止させます。アラーム出力端子がＡＳ、Ａｏの設定により(P.11 のアラーム出力端子の割当表参照）出力する時、アラームランプが点灯します。表示部にはＥ８のみが表示されます。クーラの電源を切り、メーカーにご連絡ください。

（８）**ＳＥ**：システムエラー

メモリの故障により、パラメータの設定値が正しく読み込めない時に発生します。表示部にはＳＥのみが表示されます。クーラの電源を切り、メーカーにご連絡ください。

（９）**ｔＥ**：タイプエラー

メーカーにご連絡ください。

５－２　安全機能

本製品の安全機能として、異常電流や異常温度の際は運転を停止します。
その時、アラームはＥ１、またはＥ３が発生します。
またドレンパンに設けたフロートスイッチにより、ドレンホースが詰まり水位が高くなった場合には冷却運転を停止させ、過度のドレン水の発生を防ぎます。その時、アラームはＥ６が発生します。本クーラは二重ドレンパイプ構造になっており、１次ドレンパイプの詰まりなどにより水が排出されない場合でも２次ドレンパイプにて水を排出させるため、制御盤内に水が浸入することはありません。
また冷却側の熱交換器に設けた温度センサにより、ファンの故障等で熱交換器が凍結する温度に達した場合には冷却運転を停止させ、熱交換器の凍結を防ぎます。その時、アラームはＥ７が発生します。

６．メンテナンス

⚠ 注意	
❗	メンテナンスを行う時は、必ずクーラの電源を OFF にしてから作業を行ってください。
⚠	フィルタを交換する際は、弊社指定のフィルタを使用してください。 →目の細かなフィルタを使用すると、放熱効率が下がり、冷却能力の低下・故障の原因になります。
	子供にクリーニングやメンテナンスの作業をさせないでください。
	高圧洗浄機等を使用しての清掃はしないでください。

クーラの冷媒回路は製造時に必要な量の冷媒で満たされ、さらにリークテストおよびテスト運転をして出荷していますので、冷媒回路のメンテナンスの必要はありません。
空気が汚れている環境でフィルタを使用している場合は、1 週間に 1 度以上は点検・清掃をしてください。フィルタの目詰まりにより冷却能力が低下します。また最悪の場合、コンプレッサに負荷が掛かり、クーラが停止します。

６－１　フィルタのメンテナンス

前面パネルのガイドよりフィルタを外し、清掃・交換を行ってください。

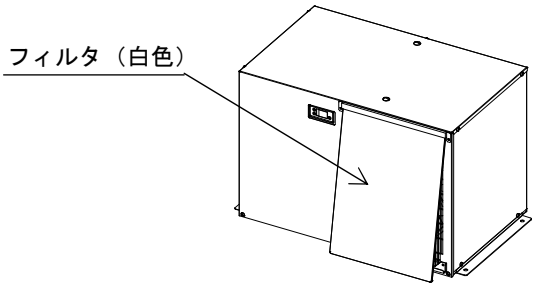

◎交換用フィルタ

フィルタ型式	適用機種
ＣＦ－Ｓ１（２枚入り）	OCA-S300AC、OCA-S700AC
ＣＦ－Ｓ２（２枚入り）	OCA-S1100AC
ＣＦ－Ｓ４（２枚入り）	OCA-S1700AC

６－２　盤外ファンの交換(例：OCA-S1100AC)

盤外ファンが故障したときは、以下手順でファンの交換を行ってください。

① 上面のアイボルト用ネジキャップを取り外してください。
② 前面カバーを取り外してください。(ネジ８箇所)
③ 盤外ファンを固定しているネジを２箇所取り外してください。
④ ファン電源コード、端子絶縁ゴム、アース線を外し、ファンを取り外してください。
⑤ 交換する新しいファンの端子部分に端子絶縁ゴムをはめ込み、アース線、ファン電源コードを取付けた後、ファンをクーラへ取付けてください。
（※ 取付ける際、電線の挟み込みが無いように注意してください。）
⑥ 前面カバーとアイボルト用ネジキャップを取付けてください。

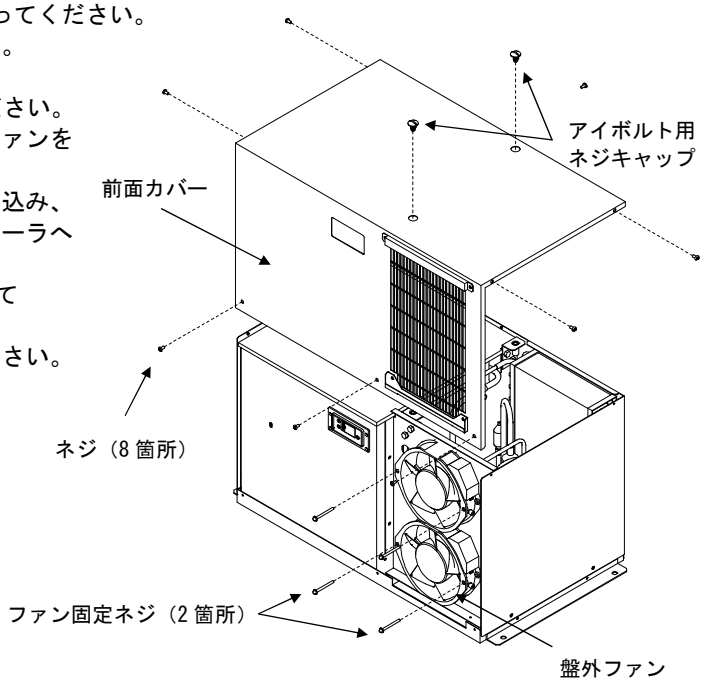

６－３　盤内ファンの交換(例：OCA-S1100AC)

盤内ファンが故障したときは、以下手順でファンの交換を行ってください。

① 上面のアイボルト用ネジキャップを取り外してください。
② 前面カバーを取り外してください。(ネジ８箇所)
③ フタを取り外してください。(ネジ３箇所)
④ 整風板を取り外してください。(ネジ２箇所)
⑤ 盤内ファンを固定しているネジを２箇所取り外してください。
⑥ ファン電源コードを外し、ファンを取り外してください。
⑦ 交換する新しいファンにファン電源コードを差し込んだ後、ファンをクーラへ取り付けて下さい。
（※ 取付ける際、電線の挟み込みが無いように注意してください。）
⑧ 整風板、フタ、前面カバー、アイボルト用ネジキャップの順に取付けてください。

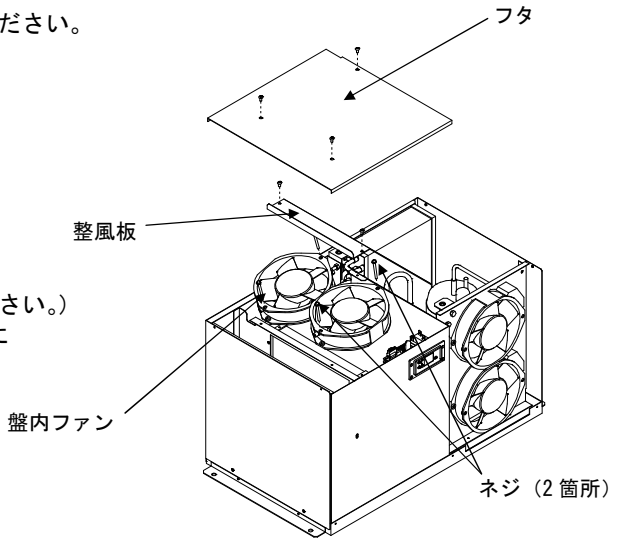

◎交換用ファン

適用機種	盤内ファン型式	盤外ファン型式
OCA-S300AC-A220-CN	FM-S300ACIN-A220-CN	FM-S300ACOUT-A220-CN
OCA-S700AC-A220-CN	FM-S700ACIN-A220-CN	FM-S700ACOUT-A220-CN
OCA-S1100AC-A220-CN	FM-S1100ACIN-A220-CN	FM-S1100ACOUT-A220-CN
OCA-S1700AC-A220-CN	FM-S1700ACIN-A220-CN	FM-S1700ACOUT-A220-CN

６－４　このような時には

現象	原因	対策
・盤内温度が上がりすぎる。 ・冷風が出ない。 ・盤内高温アラーム（Ｅ１） 放熱異常アラーム（Ｅ３） を表示している。	ａ．ブレーカが切れている。	ａ．ブレーカをＯＮにしてください。
	ｂ．設定温度より盤内温度が低い。	ｂ．設定温度と盤内温度を確認してください。
	ｃ．設定温度に冷却能力が追い付かない。	ｃ．設定温度を上げてください。 またはクーラを冷却能力が大きい物に換えてください。
	ｄ．周囲温度が高すぎる。	ｄ．周囲温度が＋50℃以上の環境では使用できません。
	ｅ．盤内温度が高すぎる。	ｅ．盤内温度が＋45℃以上での使用はできません。
	ｆ．フィルタが汚れている。	ｆ．フィルタを清掃してください。
	ｇ．盤外ファンが回っていない。	ｇ．設定温度と盤内温度を確認してください。ファンが故障している場合にはファンを交換してください。
	ｈ．盤内ファンが回っていない。	ｈ．P.8 強制冷却運転にて盤内ファンが回転するか確認してください。 回転しない場合は、ファンを交換してください。
	ｉ．ショートサーキットがおきている。	ｉ．P.3 を参考に、ショートサーキットを改善してください。
・盤内温度が下がりすぎる。	ａ．設定温度を下げすぎている。	ａ．設定温度を上げてください。
	ｂ．内部回路または温度センサの故障。	ｂ．メーカーにご連絡ください。
・ドレン水異常アラーム（Ｅ６）を表示している。	ドレン水が流れていかない。	ドレンホースに詰まりや折れがないかご確認ください。
・除湿する水が多い。	制御盤の気密性が悪い。	制御盤の隙間を埋めて、気密性を上げてください。
・Ｅ５を表示している。	内部温度センサの故障。	メーカーにご連絡ください。
・Ｅ７を表示している。	盤内ファンが回っていない。	ファンを交換してください。
・Ｅ８を表示している。	熱交換器温度センサの故障。	メーカーにご連絡ください。
・ＳＥを表示している。	メモリの故障	メーカーにご連絡ください。
・ｔＥを表示している。	－	メーカーにご連絡ください。

・使用中に異常が生じた場合には使用するのをやめ、電源を OFF にしてメーカーにご相談ください。
なお、ご相談される場合には、クーラの型式およびご購入時期をお知らせください。

６－５　簡易点検方法について

フロン排出抑制法では、圧縮機の電動機出力が 7.5kW 未満の第 1 種特定製品については、

年 4 回の簡易点検が義務付けられています。

簡易点検の方法は、冷却運転中または強制冷却運転(P8. 4-4 強制冷却運転を参考)を行って、

盤内冷気吐き出し口より冷風が出ていることを確認してください。

７．仕様

７－１　標準仕様

型式		OCA-S300AC-A220-CN	OCA-S700AC-A220-CN	OCA-S1100AC-A220-CN	OCA-S1700AC-A220-CN
冷却能力　※1		300W	600W	1050W	1550W
定格電圧		単相　AC220V～ 50Hz			
消費電流 ※2	定格	0.9A	2.3A	3.4A	3.9A
	最大	1.1A	2.6A	4.0A	4.8A
始動電流		3.0A	9.0A	13.8A	16.5A
消費電力 ※2	定格	200W	430W	655W	830W
	最大	230W	490W	785W	1025W
圧縮機 電動機出力		200W	300W	450W	568W
騒音（A 特性）		60dB	60dB	62dB	64dB
冷媒	種類、名称	HFC R134a		HFC R407C	
	封入量	190g	250g	460g	420g
地球温暖化係数		1430		1770	
外形寸法 W×H×D（mm）		450×255×250	550×332×270	600×350×350	590×447×350
本体質量		約 18.0kg	約 24.5kg	約 33.5kg	約 39.5kg

天井取付タイプ共通仕様

取付方法	天井取付型
使用周囲温度　※3	+20℃～+50℃
使用周囲湿度	85%RH 以下　結露無き事
温度設定範囲　※3	+30℃～+45℃（初期設定温度：35℃）
表示	盤内温度、アラームコード/運転ランプ/アラームランプ
機能	盤内高温異常検出、放熱異常検出、温度センサ断線検出 メンテナンス時期お知らせタイマー、点検時強制冷却運転機能 ドレン水オーバーフロー検出、エバポレータ凍結検出
外部出力	アラーム出力　1a 240V 1.5A×2 出力(COMMON 共通)
耐振動性	振動数 10～55Hz　振幅 0.15mm　掃引サイクル 10 回
保護等級	内部循環　IP54 相当
適合規格　環境対応	RoHS
塗装色	ベージュ（5Y7/1 相当）
制御基板ヒューズ定格	250V 1A

※1　盤外温度および盤内温度が+35℃の場合の公称冷却能力です。
※2　「定格」は盤外温度および盤内温度が+35℃の場合、「最大」は盤外温度+50℃、盤内温度が+35℃の場合の公称値です。
※3　温度範囲外では使用できません。

７－２　梱包内容

名称	OCA-S300AC-A220-CN	OCA-S700AC-A220-CN	OCA-S1100AC-A220-CN	OCA-S1700AC-A220-CN
クーラ本体	1台			
取付ボルト	M6：4本			M8：4本
ワッシャ	M6：4個			M8：4個
ナット	M6：4個			M8：4個
スプリング	M6：4個			M8：4個
ドレンホース	1本（5m）			
L継手	2個			
端子台	1個			
パッキン	1枚			
アラーム説明シール	1枚			
取扱説明書	1冊			

７－３　外形寸法図

OCA-S300AC-A220-CN

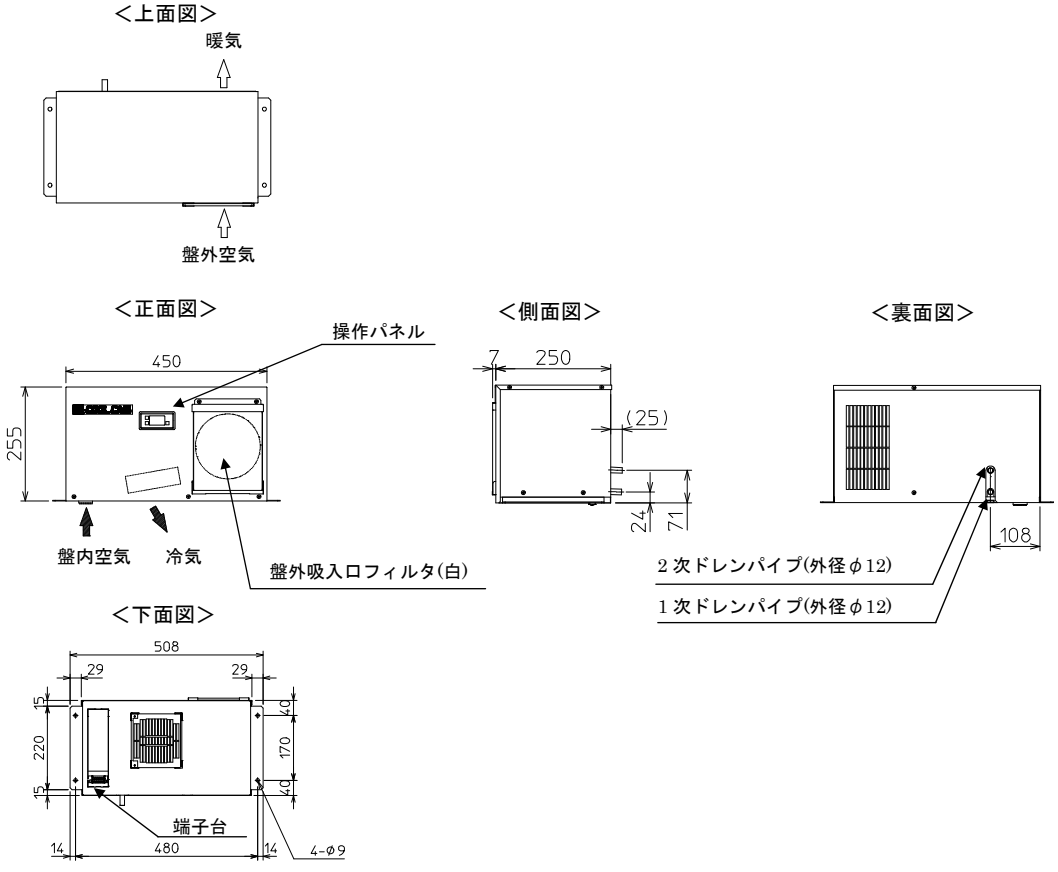

OCA-S700AC-A220-CN

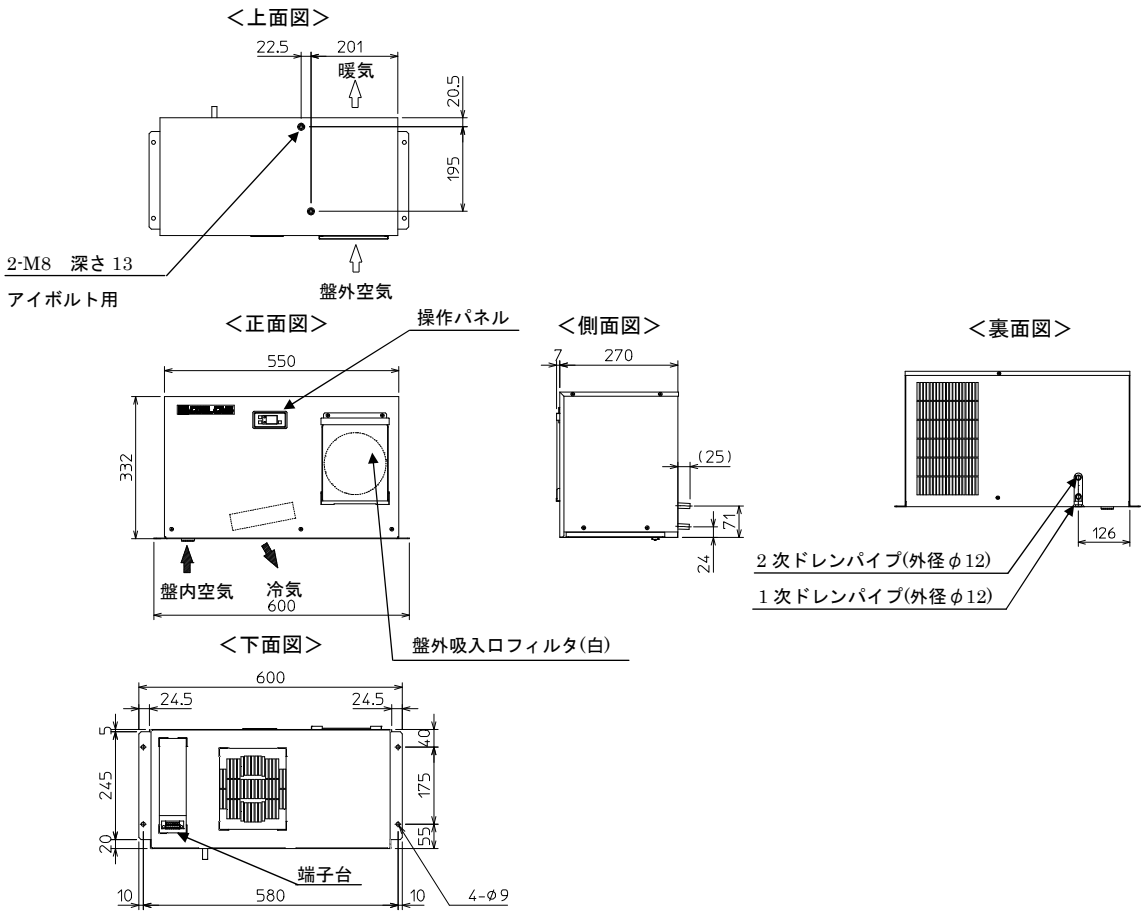

OCA-S1100AC-A220-CN

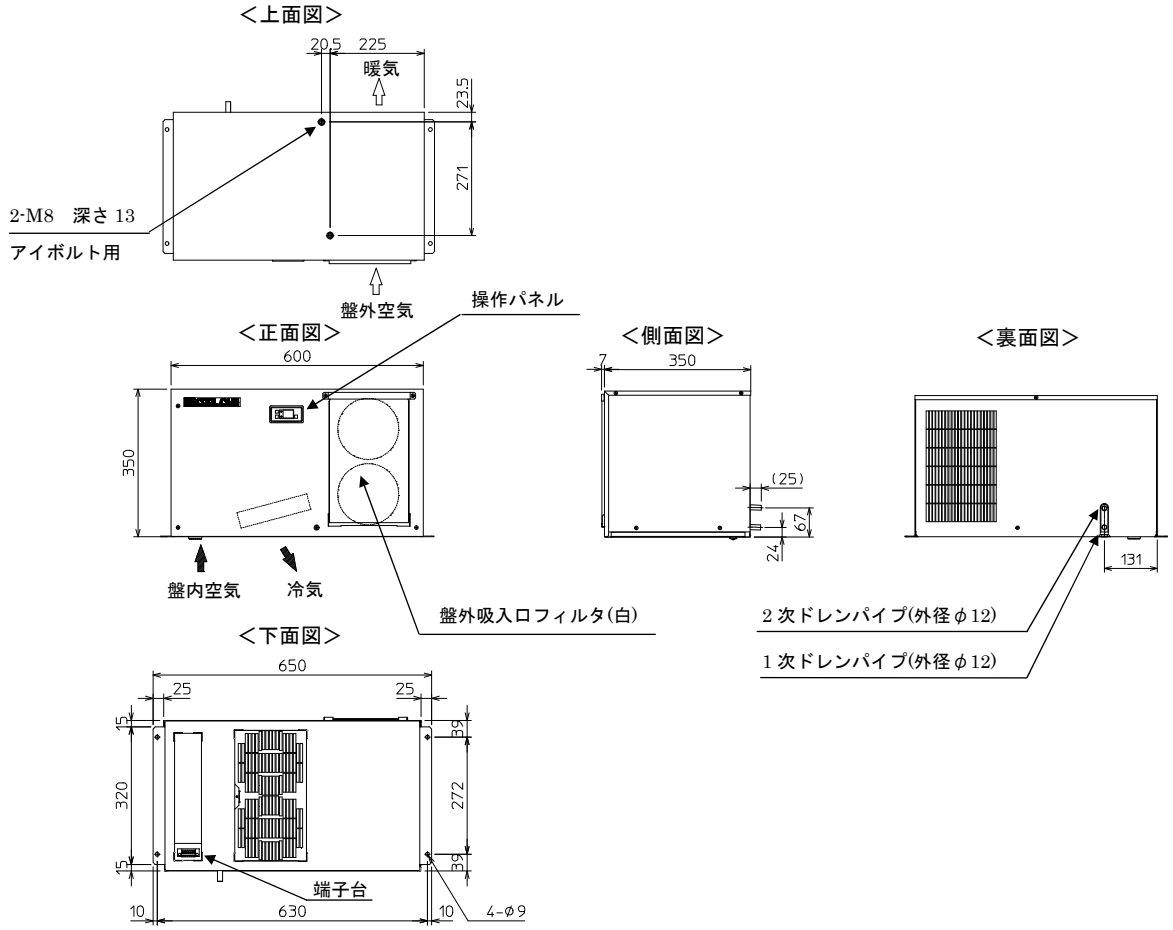

OCA-S1700AC-A220-CN

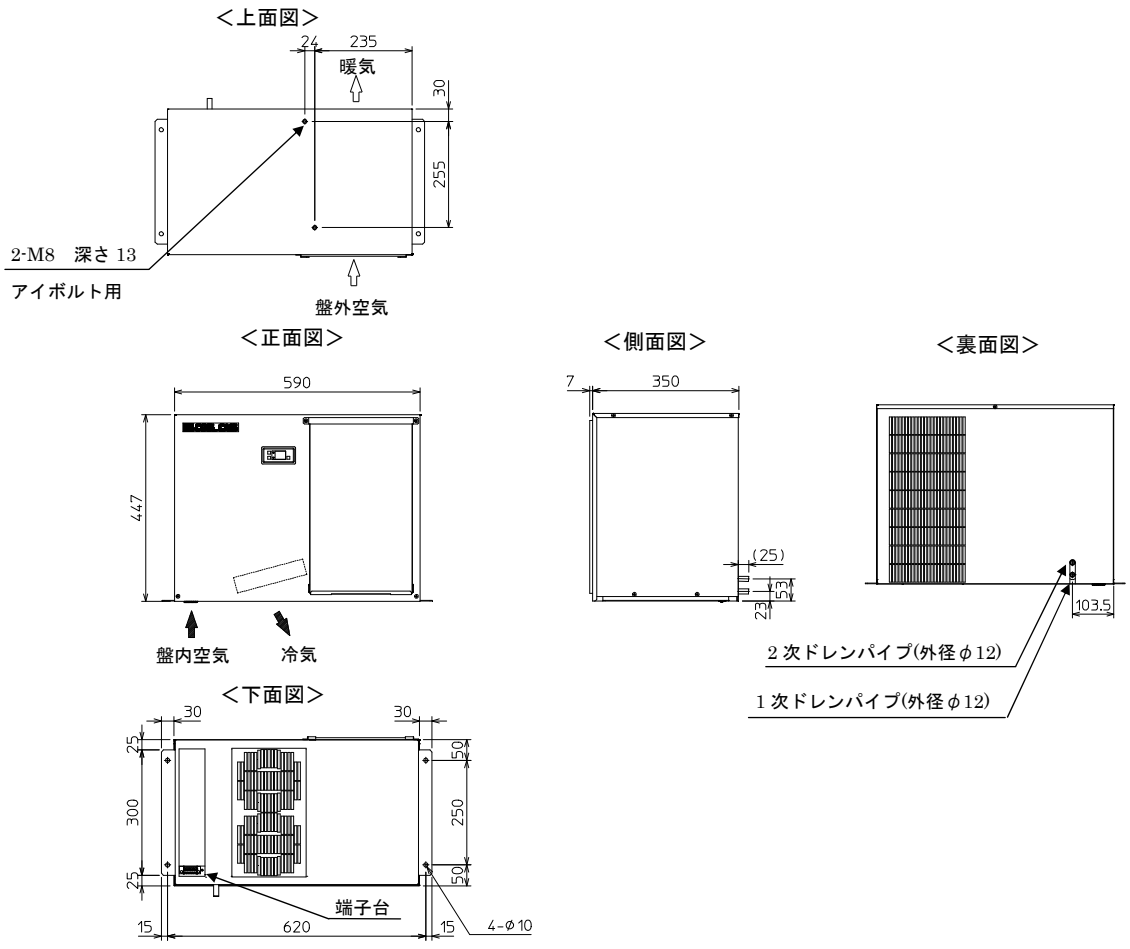

８．保証期間

メーカー出荷後、1 年間とします。
ただし、当社責任範囲外による故障は有償にて修理させて頂きます。

９．フロン回収について

盤用クーラには冷媒としてフロン類が使用されており、フロン回収・破壊法（平成 13 年　法律第 64 号）における第一種特定製品として扱われ、フロン類の回収が必要な場合には、改正フロン回収・破壊法（平成 19 年 10 月施行）に基づいた処理が必要となります。フロン回収・破壊法は、地球温暖化やオゾン層破壊の原因となるフロン類の大気中への排出を抑制するためのものですので、必ず守ってください。
盤用クーラの廃棄に伴うフロン類の回収に関する注意事項とフロン回収・破壊法（抜粋）は下記の通りです。お分かりにならない時は、メーカーにお問い合わせください。

■地球環境を保護するため、次のことが法律で定められていますので、必ず守ってください。
　・何人も、盤用クーラに封入されているフロンを、みだりに大気中に放出してはならない。
■盤用クーラの所有者は、廃棄の際には、以下のことが必要となります。
　①都道府県知事の登録を受けたフロン類回収業者にフロン類を引き渡すこと。
　②その際には、法律に基づき書面を交付すること。
　③フロン類の回収、破壊等に必要な費用を負担すること。
■冷媒番号および封入量は、盤用クーラ本体に貼ってある製品銘板に記載してあります。
■盤用クーラは特定家庭用機器再商品化法（家電リサイクル法）の適用商品ではありません。

□所有者の管理責任
■機器の点検
　盤用クーラは、簡易定期点検が必要です。
　日常点検：温度点検、外観点検
　年 4 回以上：異音、製品外観の損傷、腐食、さび、油にじみ、霜付きの確認
　尚、点検実施者の制限はございません。
■漏えい防止措置、修理しないままの充填の原則禁止
　冷媒漏えいが確認された場合、可能な限り速やかに漏えい箇所の特定・必要な措置を実施する。
　漏えいが確認された場合は、メーカまで速やかにご連絡下さい。
■点検等の記録
　上記で行われた点検を含め、機器の修理、フロンガスの充填・回収の履歴を記録・保存します。
　特に指定書式はありませんので、所有者の通常の点検記録簿に記入し保管下さい。
　盤用クーラの修理、フロンガスの充填の必要がある場合は、メーカまでご連絡下さい。

１０．廃棄について

盤用クーラを廃棄するときは、充てんされているフロンを回収した後、「廃棄物の処理及び清掃に関する法律」に準拠し、必ず専門の産業廃棄物処理業者に委託して処理してください。

OHM ELECTRIC オーム電機株式会社
http://www.ohm.jp/
本社／カスタマーサービスセンター
〒431-1304 静岡県浜松市北区細江町中川 7000-21
TEL：053-522-5572　　FAX：053-522-5573

第 1 版この取扱説明書の内容は 2015 年 4 月現在のものです。

OHM ELECTRIC COOL CABI

RoHS

Instruction Manual

Roof Mounting Type

OCA-S300AC-A220-CN
OCA-S700AC-A220-CN
OCA-S1100AC-A220-CN
OCA-S1700AC-A220-CN

Caution

Please read this brochure carefully before use and keep at hand for future reference.

≪Contents≫

1. Safety Precautions ····· 2
2. Mounting ····· 3-6
3. Wiring ····· 7
4. Operation ····· 8-13
5. Alarm／Safeguard ····· 14-15
6. Maintenance ····· 15-17
7. Specifications ····· 18-21
8. Warranty period ····· 22
9. Waste disposal ····· 22

OHM ELECTRIC CO., LTD.

1. Safety precautions

- This product is an industrial cooling unit for control panel. Do not use this for any other purposes.
- Be sure to read these precautions carefully before starting operation for proper use.
- All the warnings and cautions described herein must be observed in order to use the product safely.

The marks and their meanings shown in this manual are as follows.

Danger	Improper handling is likely to lead to death or serious bodily injury.
Caution	Improper handling is likely to lead to bodily injury and/or property damage.

The meanings of the symbols used in this brochure are as follows.

	Means “Strict prohibition”		This is to drawn attention for “Rotating body”
	This is to draw “Attention”		This is draw attention for “Electrical shock”
	Means “Obligatory action”		

Danger	
	Never touch the terminal board while the cooling unit is energized.

Caution	
	Never remove the front cover of the unit during operation. Do not put your fingers or foreign matters into rotating part of the fan. Always disconnect power and wait until the fans stop completely before starting work. Failure to them can result in injury.
	This product is for indoor use only.
	This product should not be used where inflammable gas, corrosive gas, oil fumes or dust which may affect insulation are contained in the air. Failure to this may result in short life or damage of the unit.
	Shocks and vibrations should be strictly avoided at the site of use.
	Never tamper or repair the main body. Please consult with your local supplier for repairing service.
	Disposal of refrigerant and oil sealed in the cooling circuit should be dealt with only by professional services.
	Ensure smooth air circulation at the site of installation of the product. Failure to this may degrade cooling performance of the unit.
	Keep upright position during transportation without tilt. Never transport it without dismounting from a control panel.
	The atmosphere of the site of use should be within the temperature range from +20℃ to 50℃ and humidity range 85%RH or less free from condensation.
	The product should not be placed sideways or upside down during storage. Storage temperature should not exceed +70℃.
	Check for damage on packaging when the product is delivered. Do not use the product if any damage is found. Any packaging damage may be a cause of malfunction.
	Avoid using other filters than enclosed. Use of fine filters will cause efficiency loss in heat releasing which leads to reduced cooling performance and/or breakdown of the unit.
	This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
	Children shall not play with the appliance.

2. Mounting

2-1 Caution

⚠ Danger

For prevention of electrical shock, power supply to the control panel should be disconnected before installation work.

⚠ Caution

For installation, do not use any parts other than originally supplied ones.
Failure to this may result in injury or breakdown of the cooling unit.

Cut out the mounting surface of the enclosure as specified in the drawing of page 5.

COOLCABI must be placed horizontally and perpendicularly within a tolerance of ±2° in order to keep stable operation of the unit and to make a smooth drainage.

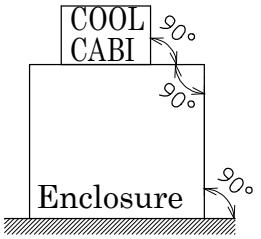

Locate the unit so as to assure good ventilation and distance of at least 200mm from the walls or other units.
Also, there should be no hindrance to the air circulation inside the control panel.
Failure to the above may result in poor cooling performance or condensation.

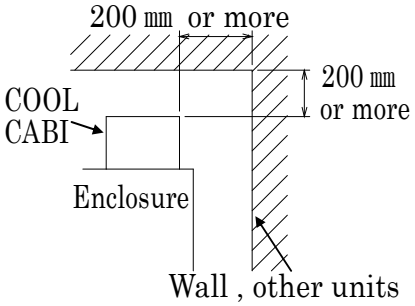

The supply voltage must be as specified on the rating plate of the unit.
Electrical connection should be made via appropriate circuit breakers as shown in the right.
Ground the wire without fail to prevent electrical shocks

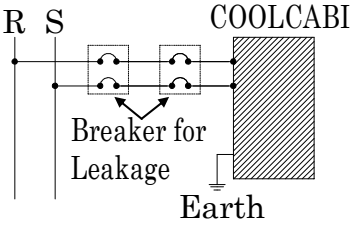

Electrical works required for installation of the unit must be done only by specialists.
Improper installation may result in electrical shocks or fires.

For protection of the compressor, wait at least 30 minutes after installation before connecting power to start operation.

Hermetically seal the control panel all round.
Inferior sealing may cause condensation which lead to poor cooling efficiency.

Put covers on the components inside the enclosure to protect them from cutting dust during installation work.

[Short circuit]

Electric components or other objects near the cool air outlet may disturb cool air circulation. If the cool air hit against them, it will directly return to the suction port without being distributed to the whole area in the enclosure. This causes not only troubles of the components but may negatively affect operation of the cooling unit which lead to overcurrent and product failure.
In case such short circuit is found during cooling operation, improve the environment by attaching rectifying plates or installing agitation fans as necessary.

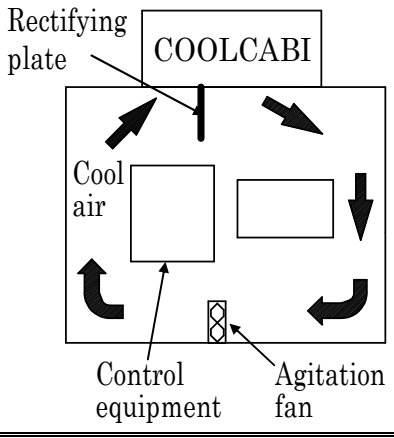

2-2 Mounting procedure

(1)Process the mounting surface to cut out the openings in accordance with the respective mounting cutout drawings in Page 5.
(2)Place the enclosed sealing plate on the bottom surface of the cooling unit.
(3)Align the unit with the mounting cutout.
(4)Insert the enclosed bolt into the mounting hole from outside of the unit.
(5)Set the washer, spring and then nut in the bolt and tighten the nut to securely fix the unit.
(6)To ensure keep the panel interior airtight, caulk the gaps completely, if any.
(7)Apply the enclosed "Alarm explanation sheet" to an appropriate place where readily visible.

Mounting works

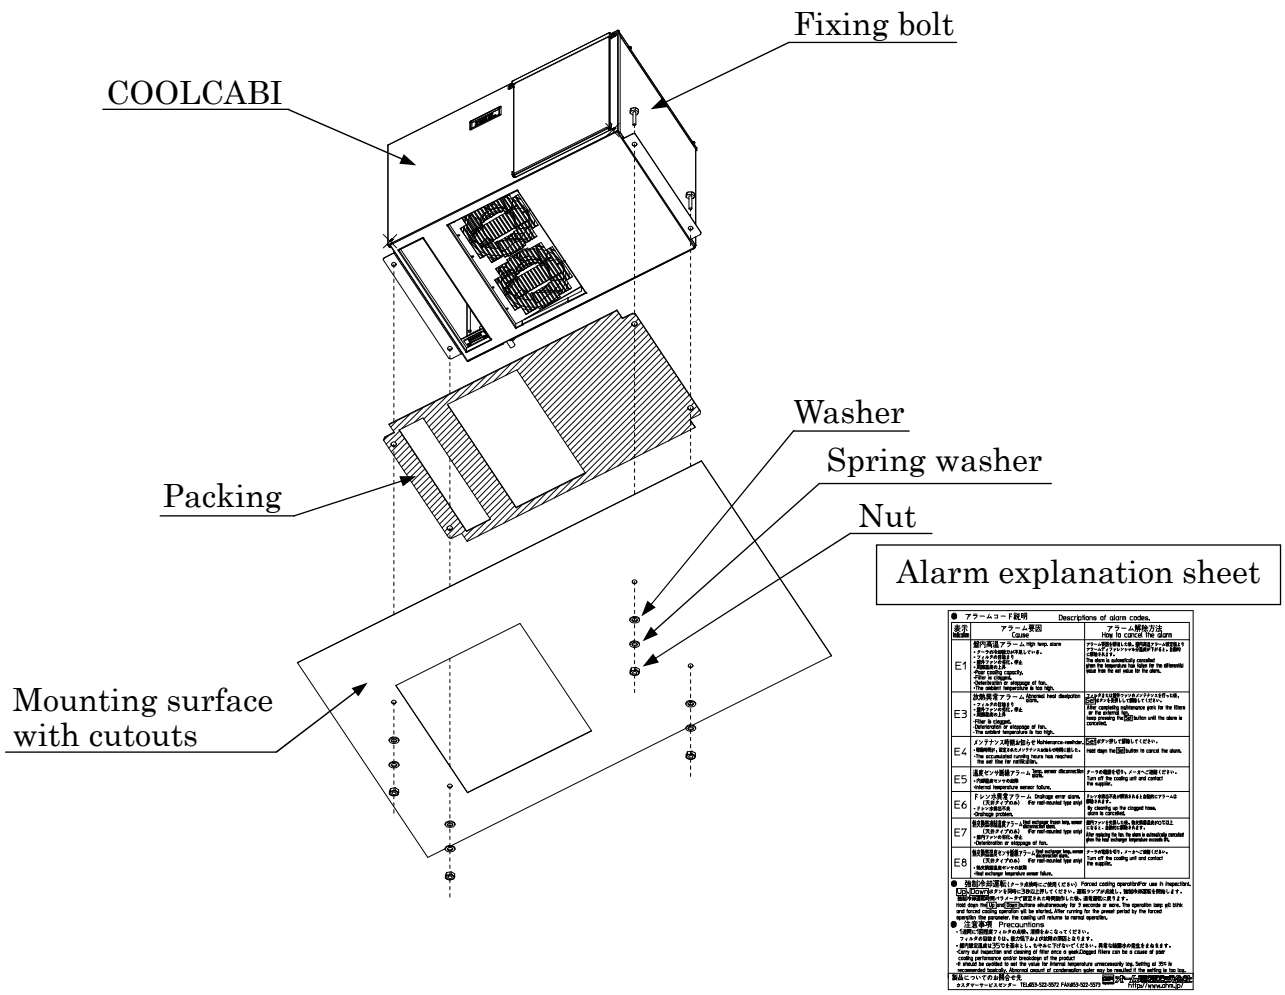

⚠ Caution

OCA-S700AC, OCA-S1100AC and OCA-S1700AC has two nuts on top for installation of eyebolts. Please lift up evenly using eyebolts whenever lifting up a cooling unit. Lifting up one side only may result in breakdown or damage of the product.

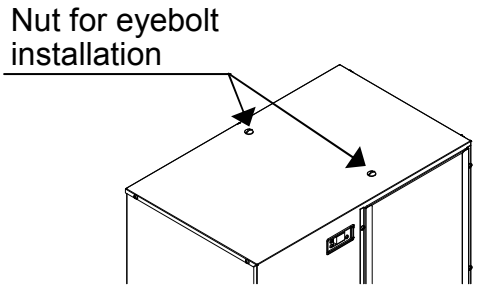

Cutouts < View from outside the panel >

OCA-S300AC-A220-CN

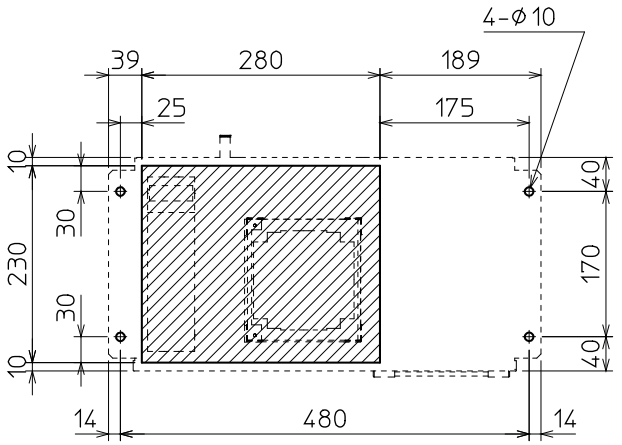

OCA-S700AC-A220-CN

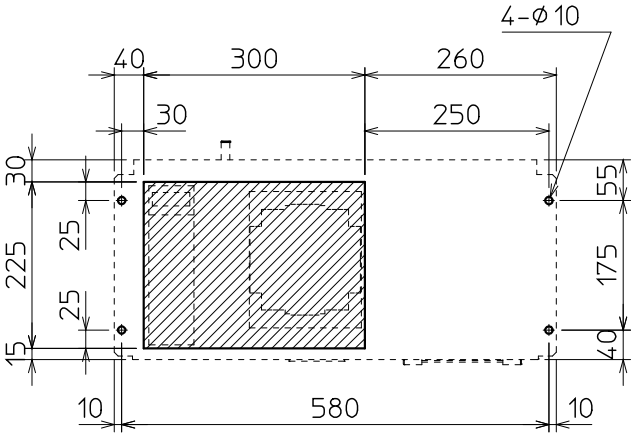

OCA-S1100AC-A220-CN

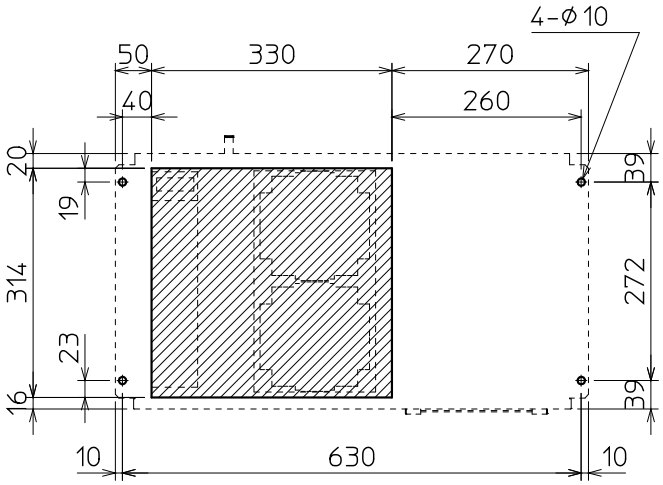

OCA-S1700AC-A220-CN

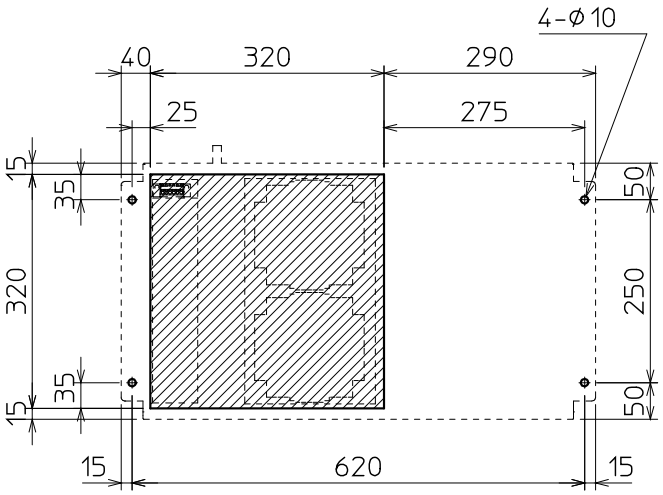

2-3 Attachment of drain hose

Moisture arisen from dehumidification by COOLCABI is discharged through a drain hose. Pay attention to the following notices in order to attach the drain hose properly.

⚠ Caution

If the drain hose is not attached properly, water collected in the drain catch inside the COOLCABI may overflow into the control panel interior.

- In case the joint of a drain hose and a drain pipe is not tight enough, use a hose band to fix the joint securely.
- To prevent a hose from coming off, insert it deep enough to a drain pipe.

Do not connect two drain pipes. Apply the enclosed L joint on the corner of the enclosure.

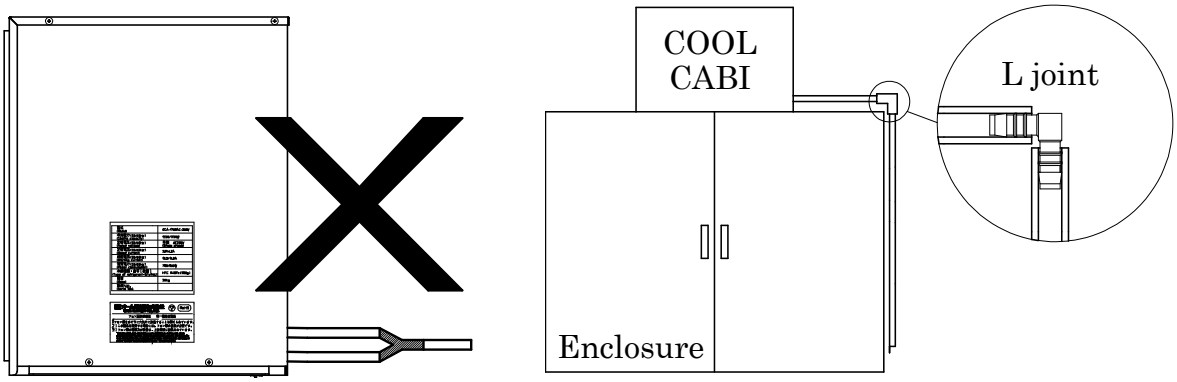

- Let a drain hose go directly downward without kinks and windings.
- Any part of a drain hose should not be higher than the level of a drain pipe of COOLCABI.
- The free end of a drain hose should be directly downward without bending.
- A drain hose should be directed downward within 50cm distance from a drain pipe end.
- In case a hose has to be routed crosswise over 50cm depending on the application, please give a slope as much as possible so as to ensure smooth drainage.

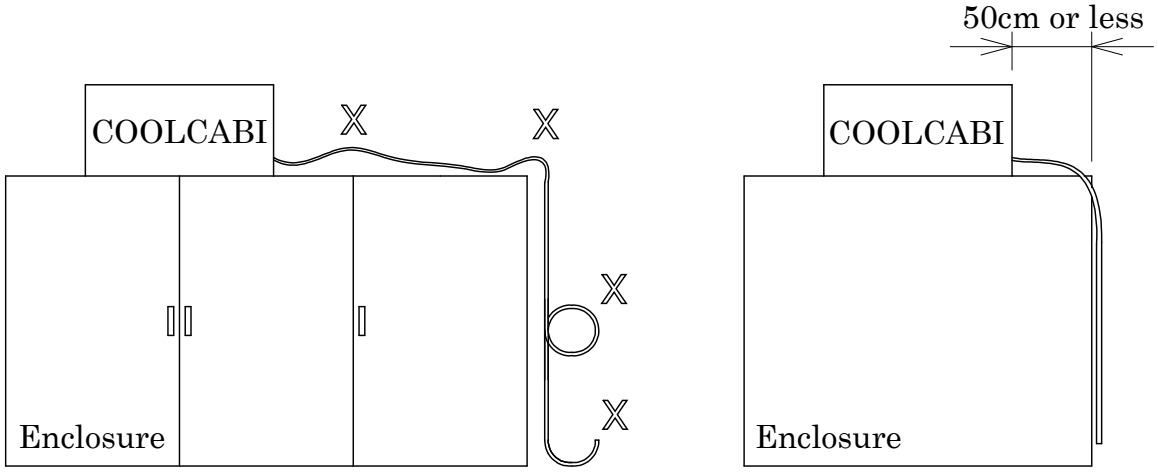

Attention: Do not put excessive force on drain pipe when working.

- Adjust the hose length so it end does not submerge in the container.
- Empty the container frequently especially on humid days.

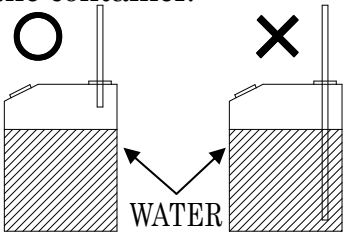

3. Wiring

⚠ Caution	
	- Please observe all the local regulations in installation of the cooler. - Supply voltage should be as specified on the rating plate. - Allowable power fluctuation is +/- 10% from the rated voltage. Pay attention the maximum fluctuation should be stayed within this range. - Make sure that grounding has been properly done. - Before electrifying the unit, make sure again that there is no problem in supply voltage, wiring connection and grounding.

3-1 Wiring procedure (Applicable wire range: AWG24 to 12 / 0.2 to 2.5m ㎡)

(1) Strip the wire by 6 or 7 mm.
(2) Push down the Push button with a flathead screwdriver.
(3) Insert a wire into the port.
(4) Release the screwdriver.
(5) Check that the wire is secured.
(6) For the application using crimp terminals,
the bar terminals made by Phoenix Contact.

a contact, 240V 1.5A x2 resistance load
Note: For details, please refer to the paragraph 4-6 in page 10,11

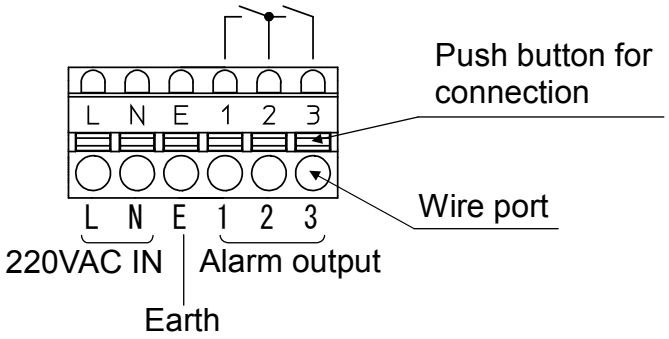

3-2 Circuit diagram (Ex. OCA-S1700AC)
※The number of fans differs according to the model.

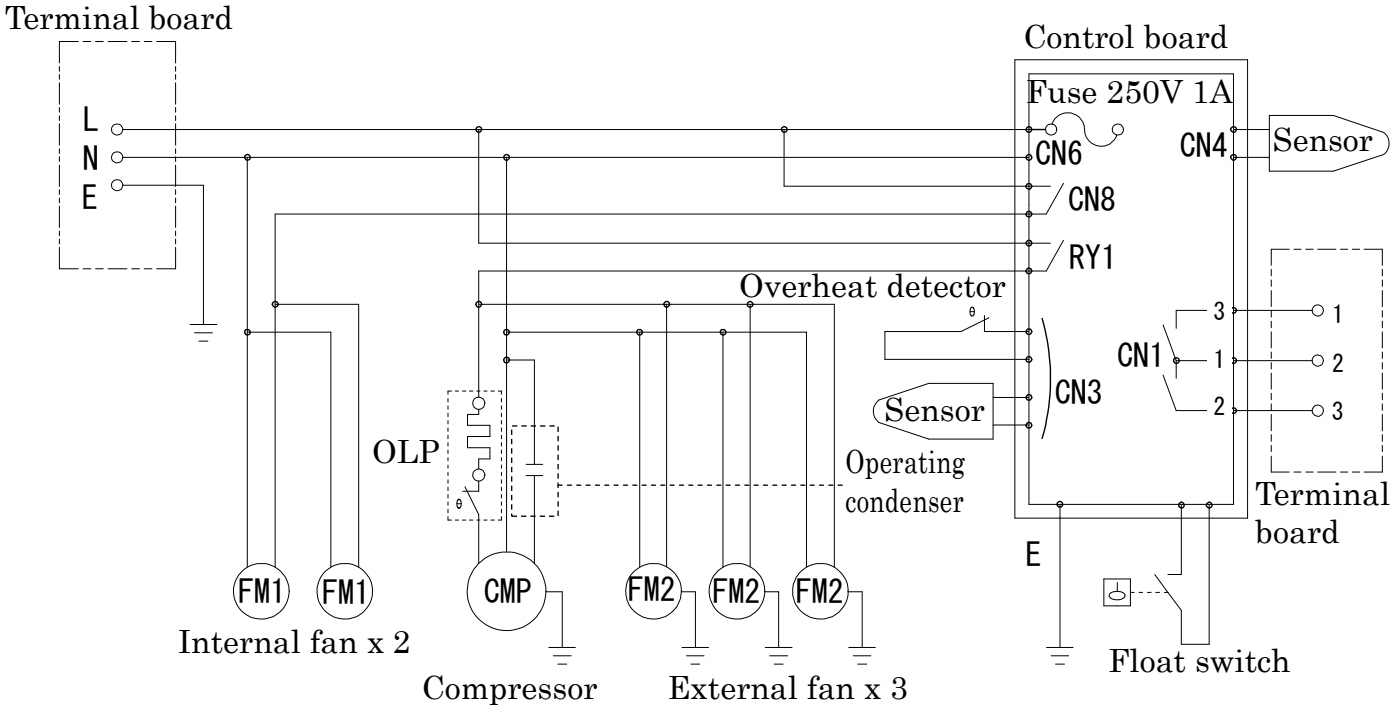

3-3 Overcurrent protection

⚠ Caution

Do not forget to fit an earth leakage breaker.
→ Failure to this may lead to tripping of the earth-leakage breaker for the enclosure in the event of electric leakage.

Selection of a breaker should be made so as to fit the type of the cooler.

a. With the input of power supply, or with the start of cooling operation, COOLCABI is subject to starting current for approx. 1 second. Therefore, the selection of an earth leakage breaker should be made so as to assure stable operation without affected by such current as well as providing effective protection against possible overcurrent thereafter.
b. It is recommended to use a circuit breaker with capacity not exceeding 15A for the COOLCABI's exclusive use.
c. For earth leakage breakers, use a reference value of 30mA for sensitivity rating as a guide of selection.

Earth leakage Breaker (For exclusive use of cooler)

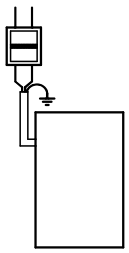

4. Operation

4-1 Caution

⚠ Caution

For protection of compressor, wait at least 30 minutes after installation of the unit and then turn on power to start operation.

Frequent switching on and off of a compressor may be a cause of trouble and shorten its lifetime. Never repeat ON/OFF more than 5 times within an hour. Turn up the differential value of the parameter setting (see Article 4 to 5) if frequent on-off occurs.

Never put your fingers into the unit or uncover the unit during operation. Failure to this may be a cause of injury.

Never operate COOLCABI leaving the control panel door open. Failure to this may lead to excessive condensation and drainage volume as well as creating the possibility to allow condensate to enter into the control panel interior.

4-2 Operation panel

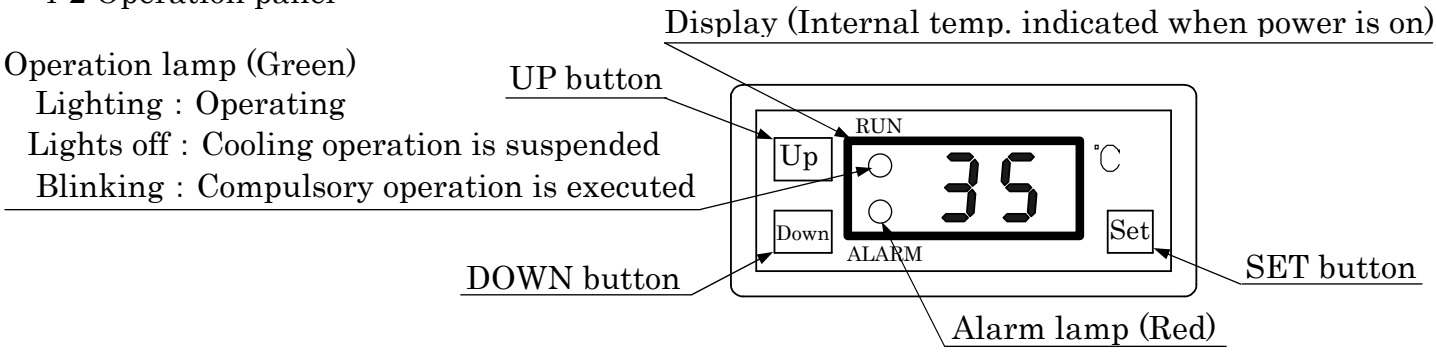

4-3 How to change the setting temperature

⚠ Caution

Setting temperature should be basically at 35℃. Avoid setting at an unnecessarily low value which may cause excessive condensation or drainage.

(1) Turn on the unit. The current internal temperature will be indicated on the display.
(2) Push the SET button. The current setting temperature will be flashed.
(3) Change the setting temperature by UP and DOWN buttons within the range from 30℃ to 50℃.
(4) Push the SET button. The setting temperature has now been changed and the unit restarts operation.

4-4 Compulsory cooling operation **(For inspection purposes)**

Press UP and DOWN buttons at the same time for 3 seconds or more.
The operation lamp will light and the unit will start compulsory cooling operation.
After a laps of the time set by parameter, the unit will return to normal operation mode.
Note: Factory setting for compulsory operation is 30 seconds.

4-5 Parameter setting

Normally, there is no need to change the setting of the parameters. If necessary, follow the procedures described below.

Push the SET button for more than 3 seconds in a status that the internal temperature is indicated.

The parameters are indicated in the following order. Press SET button to move to the next parameter. Display a parameter desired to be changed and set the value using UP and DOWN buttons. Set the parameter by pressing SET button.

- Differential **Initial setting : 5℃** Setting range: 3 – 10℃
This indicates the temperature difference against the setting temperature at which the compressor stops
Caution : Setting of the temperature and the differential value should be made so as to avoid repetition of compressor's on/off operation of more than 5 times in an hour.

- Compulsory cooling operation time **Initial setting: 30 sec**
Setting range : 0 – 99 sec
This indicates the time of compulsory operation time when UP and DOWN buttons are pressed for 3 seconds or more at the same time.

- High Temp. Alarm setting **Initial setting : 45℃**
Setting range: 0 – 99℃
This indicates the temperature at which High Temp. Alarm turns ON.

- Differential for Alarm **Initial setting : 2℃** Setting range : 1 – 20℃
This is a differential for setting High Temp Alarm.
AL – dA = the temperature at which the alarm turns off



- Maintenance-reminder **Initial setting: 0** Setting range : 0-99
This is the function to remind you maintenance works in a timely manner.
0 : This function is ineffective
1-99 : 1 means 100 hours. Notification period can be set between 100 to 9900 hours.
*Time measurement in the control board is made on an hour basis.
As an example, if this is set to 99, notification is made in 9900 hours after power input, which is nearly equivalent to 412 days for a unit in 24-hour operation.



- Compulsory cooling operation setting at power input
Initial setting: 0 Setting : 0 or 1
This is to set the compulsory operation when power connection is made.
0 : Compulsory operation at power input is effective
1 : Compulsory operation at power input is ineffective

- Setting for restoration method from abnormal heat radiation alarm.
Initial setting: 0 Setting : 0 or 1
Select 0 or 1 for setting manual or auto restoration from abnormal heat radiation alarm.
0 : Manual restoration
1 : Automatic restoration
Refer to "5. Alarm/Safeguard (2) in page 14" to clear the alarm.

Attention:
In case Auto restoration is selected, cooling operation will restart when the overheat detector in the refrigerant circuit is reset. However, the contact output and the alarm code indication will not be reset. Early maintenance is recommended. Repeated Auto restoration without solving the cause of problem may result in trouble of the product.



- Setting of maintenance timer **Initial setting: 1** Setting : 0 or 1
Set the contact output behavior at the set time for notification of maintenance work.
0 : Contact output is ineffective
1 : Contact output is effective

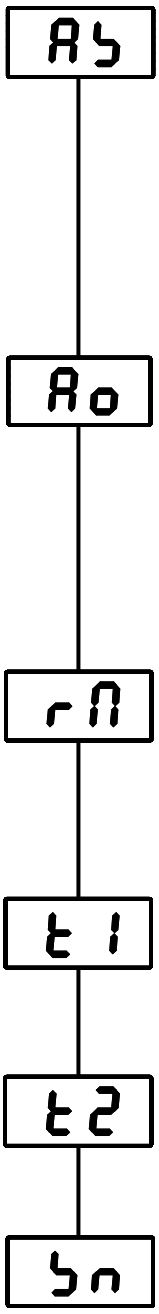

- Setting assignment of alarm output terminals
Initial setting: 0 Setting range : 0-3
Alarm output terminals output once an alarm is detected.
This is to assign the terminals for each alarm.
0 : Monitoring of alarm outputs
1 : Monitoring of cooling operation and alarm outputs
2 : Monitoring of need for power shutdown and restoration in the event of alarm output
3 : Monitoring of continued operation when an alarm occurs
Note: See page 10 and 11 for the details.

- Choice of switching method of alarm output terminals
Initial setting: 0 Setting : 0, 1-
This enables inversion of switching OPEN/CLOSE of output terminals.
0 : Output occurs as set in the assignment setting of alarm output terminals
1 : Reverse action to 0 occurs, however this does not effect between terminals 2 and 3 when AS setting is 1.

Note: See page 10 and 11 for the details.

- Setting of operation mode **Initial setting: 1** Setting range : 0-3
This is to set operation mode of COOLCABI.
terminals for each alarm.
0 : Continuous run
1 : Energy-saving mode 1
2 : Energy-saving mode 2 *Note: See page 12 and 13 for the details.*
3 : Energy-saving mode 3

- Setting of cooling operation time for energy saving mode 3
Initial setting: 7 Setting range : 7-60 minutes
This is to set the cooling operation time when energy-saving mode 3 is selected.
Note: This appears when rM is set at 3.

- Setting of shutdown time for external fan and compressor
Initial setting: 3 Setting range : 3-10 minutes
This is to set the time period for restarting the compressor after shutdown. For prevention of frequent ON/OFF of the compressor, cooling operation is suspended during the set period.

- Display of software version
This is to display the software version. Unable to change the setting.

When you finish the setting, press SET button for 3 seconds or more. The display shows the current internal temperature again and the setting is stored.
When no button is pressed for more than 30 seconds during parameter setting, the screen displays the internal temperature again. To continue parameter setting, keep pressing SET button for 3 seconds or more.

4-6 Assignment of alarm output terminals

Alarm output terminals output once an alarm is detected. By setting the alarm output terminals, monitoring of many different operations is enabled.
This setting functions by changing AS and Ao. Before supplying power to the cooling unit, both of terminals 1-2 and terminals 2-3 are open. The time lag between power input and the change-over of the terminals is 0.8 seconds.

(1) Monitoring of alarm output [AS:0] **[Initial setting]**
Change over the output in the event of alarm.

(2) Monitoring of cooling operation and alarm output [AS:1]
Change over the output when cooling operation is done and in the event of alarm

(3) Monitoring of need for power shutdown and restoration in the event of alarm output [AS:2] This helps to determine whether power shutdown and restoration is required to cancel the alarm, or automatic or manual reset is enabled without power shutdown.

(4) Monitoring of continued operation when an alarm occurs [AS:3]
This helps to determine whether or not to continue cooling operation.

Assignment table of Alarm output terminals [Ao : 0]

AS	Operation behavior of the cooling unit		Terminals 1-2	Terminals 2-3	Function
0	Normal operation		CLOSE	OPEN	Monitoring alarm outputs
	Alarm output ON		OPEN	CLOSE	
1	In cooling operation	Each alarm output ON	CLOSE	CLOSE	Monitoring cooling operation and alarm outputs
		Each alarm output OFF	OPEN	CLOSE	
	Cooling operation is stopped	Each alarm output ON	CLOSE	OPEN	
		Each alarm output OFF	OPEN	OPEN	
2	Alarms E1,E3,E4(*),E6,E7 output ON	Alarms E5,E8,SE ON	CLOSE	CLOSE	Monitoring the need for power shutdown and restoration in the event of alarm
		Alarms E5,E8,SE OFF	OPEN	CLOSE	
	Alarms E1,E3,E4(*),E6,E7 output OFF	Alarms E5,E8,SE ON	CLOSE	OPEN	
		Alarms E5,E8,SE OFF	OPEN	OPEN	
3	Alarms E1,E4(*) output ON	Alarms E3,E5,E6, E7,E8,SE ON	CLOSE	CLOSE	Monitoring the need for power shutdown and restoration in the event of alarm
		Alarms E3,E5,E6, E7,E8,SE OFF	OPEN	CLOSE	
	Alarms E1,E4(*) output OFF	Alarms E3,E5,E6, E7,E8,SE ON	CLOSE	OPEN	
		Alarms E3,E5,E6, E7,E8,SE OFF	OPEN	OPEN	

(*) Alarm E4 does not output when Fo is set at 0. (See page 9)

Assignment table of Alarm output terminals [Ao : 1]

AS	Operation behavior of the cooling unit		Terminals 1-2	Terminals 2-3	Function
0	Normal operation		OPEN	CLOSE	Monitoring alarm outputs
	Alarm output ON		CLOSE	OPEN	
1	In cooling operation	Each alarm output ON	OPEN	CLOSE	Monitoring cooling operation and alarm outputs
		Each alarm output OFF	CLOSE	CLOSE	
	Cooling operation is stopped	Each alarm output ON	OPEN	OPEN	
		Each alarm output OFF	CLOSE	OPEN	
2	Alarms E1,E3,E4(*),E6,E7 output ON	Alarms E5,E8,SE ON	OPEN	OPEN	Monitoring the need for power shutdown and restoration in the event of alarm
		Alarms E5,E8,SE OFF	CLOSE	OPEN	
	Alarms E1,E3,E4(*),E6,E7 output OFF	Alarms E5,E8,SE ON	OPEN	CLOSE	
		Alarms E5,E8,SE OFF	CLOSE	CLOSE	
3	Alarms E1,E4(*) output ON	Alarms E3,E5,E6, E7,E8,SE ON	OPEN	OPEN	Monitoring the need for power shutdown and restoration in the event of alarm
		Alarms E3,E5,E6, E7,E8,SE OFF	CLOSE	OPEN	
	Alarms E1,E4(*) output OFF	Alarms E3,E5,E6, E7,E8,SE ON	OPEN	CLOSE	
		Alarms E3,E5,E6, E7,E8,SE OFF	CLOSE	CLOSE	

(*) Alarm E4 does not output when Fo is set at 0. (See page 9)

4-7 Operation mode setting

Following to power connetion, COOLCABI starts operation in the each setting mode. Factory setting for the setting temperature is 35℃ with 5℃ differential, which means the compressor starts for cooling when the temperature inside the enclosure reached 35℃and stops at 30℃.Four operation modes of continuous run and three different energy saving mode are available.

Pay attention to the following matters in every operation mode.

- In case the internal temperature exceeds the high temperature alarm setting when power is turned on, the alarm lamp lights by the setting of AS and Ao according to the assignment table of alarm output terminals described in page 11.
- Cooling operation will not start for a certain period of time (initial setting: 3 min) after cooling operation has stopped even if the internal temperature goes up to the set temperature.

(1) Continuous run

Cooling operation starts at the set internal temperature and the external fan and the compressor will stop at the

set differential temperature. The internal fan does not stop. The values in the ( ) show the default setting.

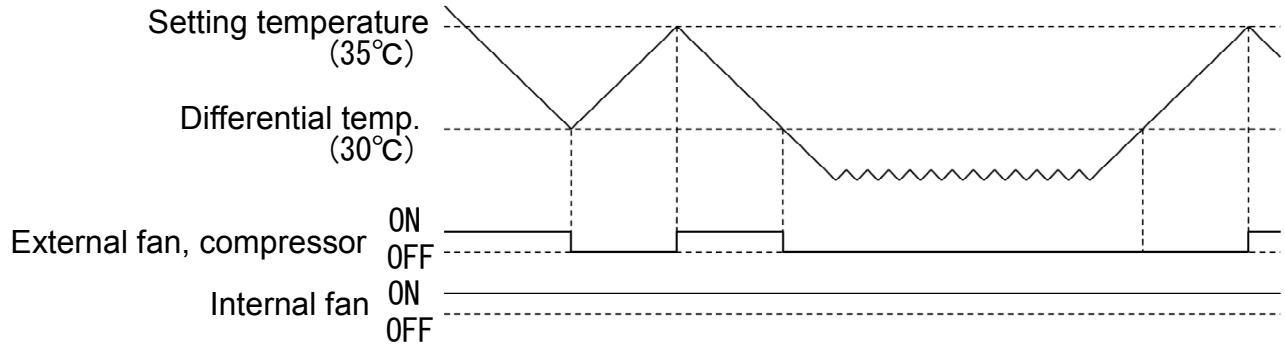

(2)Energy-saving mode 1【Default setting】

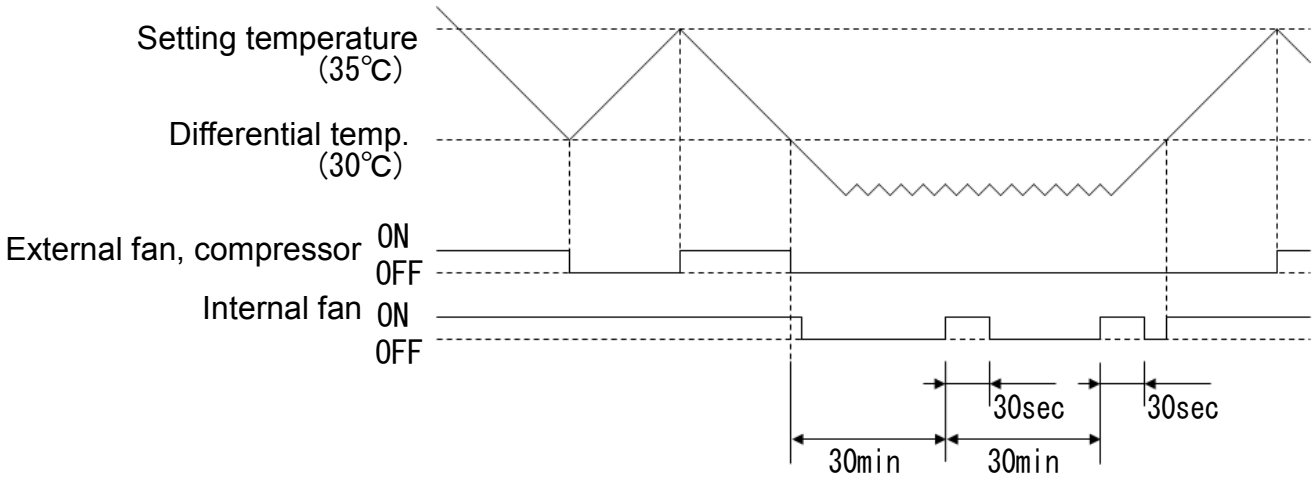

Note：
- For protection of the refrigerant circuit, the internal fan will not stop for 5 minutes after cooling operation has stopped.
- The internal fan runs continuously when the internal temperature exceeds the differential temperature.

(3)Energy-saving mode 2

The internal fan runs in conjunction with cooling operation.
Effective for energy saving when cooling operation is stopped under a low temperature like winter season. The values in the ( ) show the default setting.

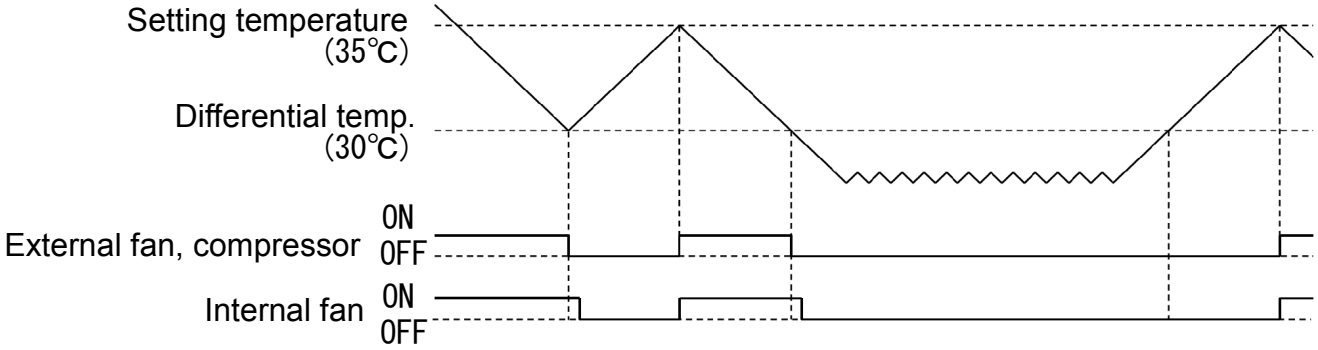

Note：
- There is a risk of creating hot spots because the air is not circulated by the internal fan.
- For protection of the refrigerant circuit, the internal fan will not stop for 5 minutes after cooling operation
- has stopped.

(4)Energy-saving mode 3

In case the internal temperature goes down below the set temperature but not reach the differential value, cooling operation and shutdown time take place by turns. Cooling and shutdown times are set by the parameters t1 and t2. The internal fan runs in conjunction with cooling operation.
The values in the ( ) show the default setting.

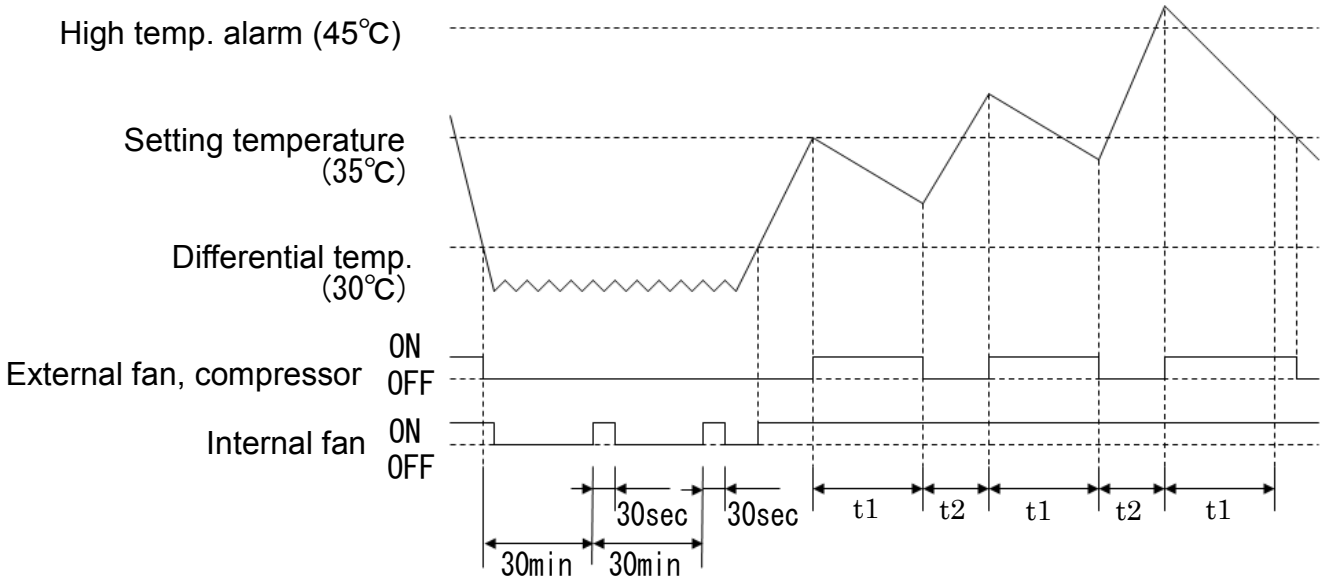

* Operation time of internal fan and compressor during intermittent operation (7 min.)
* Shutdown time of external fan and compressor (3 min.)

Note：
- The internal temperature can exceeds the set temperature because the compressor is forcibly stopped by the set time period. In case the heat value inside the enclosure is large, the internal temperature can even exceeds the high temp. alarm temperature value.
- For prevention of excessive temperature rise inside the enclosure, cooling operation will be continued until the internal temperature goes down below the set value if the internal temperature has not reached the set value during the set time period.
- For protection of the refrigerant circuit, the internal fan will not stop for 5 minutes after cooling operation has stopped.
- The internal fan runs continuously when the internal temperature exceeds the differential temperature.

5. Alarm/Safeguard

5-1 Alarm

(1) E1 : High Temp. Alarm

When the internal temperature reaches 45℃ (factory setting), the alarm output terminals will break and make contact as set in AS and Ao to light alarm lamp (See the assignment table of alarm output terminals in page 11). The display shows the current internal temperature and E1 by turns to indicate that the internal temperature is too high. Cooling operation will be continued.

When the internal temperature falls to 43℃(factory setting) or lower, the alarm output contact returns to the original state and the alarm lamp turns off.

(2) E3 : Radiation Error Alarm

If the cooling unit radiates too much heat due to some problems like clogged filters or fins or fan failure, the overheat detector in the refrigerant circuit is activated to stop cooling operation. The alarm output terminals will break and make contact as set in AS and Ao to light alarm lamp (See the assignment table of alarm output terminals in page 11). The display shows the current internal temperature and E3 by turns to indicate abnormal radiation.

Clean the filters and the fins or replace the fan and then press the SET button of the temperature controller for more than 3 seconds to cancel the alarm. The cooling unit will restart operation.

(3) E4 : Maintenance reminder

When the cumulative operating hour reaches the set value, the alarm output terminals will break and make contact as set in AS, Ao and Fo to light alarm lamp (See the assignment table of alarm output terminals in page 11). Current internal temperatures and E4 are displayed by turns to remind you to carry out maintenance work. Cooling operation will be continued.

After completion of maintenance of filter and others, press SET button to cancel the alarm.

Change of the parameter for this function makes the cumulative hours by that time zero and operating hours are counted anew.

(4) E5 : Temperature Sensor Disconnection Alarm

Cooling operation will stop in the event of disconnection of the internal temperature sensor for some reasons. The alarm output terminals will break and make contact as set in AS and Ao to light alarm lamp (See the assignment table of alarm output terminals in page 11). The display shows E5 only.

In the event of this failure, turn off the power immediately and contact your supplier.

(5) E6 : Drainage Error Alarm

If drainage is disturbed due to clogging in the hose or other problem, the float switch installed in the drain pan activates to stop cooling operation. The alarm output terminals will break and make contact as set in AS and Ao to light alarm lamp (See the assignment table of alarm output terminals in page 11). The alarm lamp (red) lights and display shows the current internal temperature and E6 by turns to notice drainage error. By eliminating the cause of problem, the cooling unit will automatically return to normal operation.

(6) E7 : Heat Exchanger Frozen Temp Sensor Alarm.

If the temperature of heat exchanger fin falls to 0℃, cooling operation will stop. The alarm output terminals will break and make contact as set in AS and Ao to light alarm lamp (See the assignment table of alarm output terminals in page 11). The display shows E7 and the current heat exchanger temperature by turns to notice freezing of it. Clean the fin unit or replace the fan and then press the SET button of the temperature controller for more than 3 seconds to cancel the alarm. The cooling unit will restart operation.

(7) E8 : Heat Exchanger Temp. Sensor Disconnection Alarm.

In the event of temperature sensor disconnection on cooling side by some reasons, cooling operation stops. The alarm output terminals will break and make contact as set in AS and Ao to light alarm lamp (See the assignment table of alarm output terminals in page 11). The display shows E8 only.

(8) SE : System Error

This error occurrs when the parmeters cannot be read correctly due to a memory fault. The display shows SE only.

In the event of this failure, turn off the power immediately and contact your supplier.

(9) tE : Type Error

Contact the supplier.

5-2 Safeguard

As a safeguard, this product is designed to stop operation under an abnormal current or temperature.

In this event, the alarm E1 or E3 will occur. If water level of the drain pan became too high due to clogging of the primary drain pipe, the float switch provided in the drain pan terminates cooling for prevention of excessive drain water. In this event, the alarm E6 will occur. This product has double pipe system to keep enclosure interior from accidental water entry. Even if the primary drain pipe fails to discharge water due to pipe clogging, the secondary pipe will compensate it.

When the temperature sensor provided in the heat exchanger on cooling side detects freezing temperature due to fan failure or other problems, cooling operation stops to prevent freeze-up of the heat exchanger. In this event, the alarm E7 will occur

6. Maintenance

⚠ Caution	
❗	Be sure to disconnect power before carrying out any maintenance work.
⚠	Use the specified filter for replacement. Use of fine filters will cause efficiency loss in heat releasing which leads to reduced cooling performance and/or breakdown of the unit.
	Cleaning and user maintenance shall not be made by children.
	The appliance shall not be cleaned with a water jet.

The cooling circuit of COOLCABI has been filled with a required amount of refrigerant, tested for leaks and subject to a trial run before delivery. Therefore, there is no need of maintenance for the circuit. Depending on the environmental condition at the site of use, check and clean the filter, if used, at least once a week. Clogging on filter may lead to deterioration in cooling performance, or at worst, may cause shutdown of the unit due to overloading on the compressor.

6-1 Filter cleaning/replacement

Detach the filter from the guide of the front panel to clean or replace.

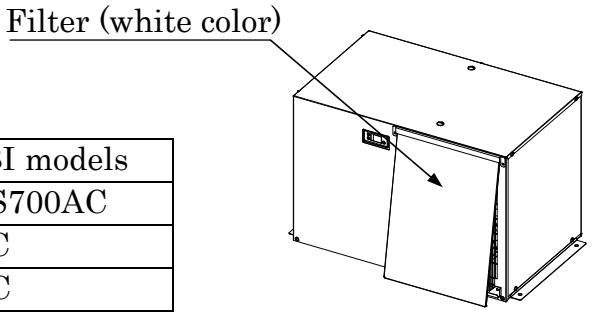

◎Replacement filter for external suction port

Model	Applicable COOLCABI models
CF-S1 (2 pcs./set)	OCA-S300AC,OCA-S700AC
CF-S2 (2 pcs./set)	OCA-S1100AC
CF-S4 (2 pcs./set)	OCA-S1700AC

6-2 Replacement of the external fan (Ex. OCA-S1100AC)

Fan replacement procedures are as follows.

1. Remove the screw caps for eyebolt on the top panel.
2. Detach the front cover by removing 8 screws.
3. Remove 2 screws from the external fan.
4. Remove the power cord, terminal insulation rubber and the ground wire to detach the fan.
5. Fit the terminal insulation rubber on the terminals so they get through the two slits provided in the rubber. Attach the ground wire, the power cord and then the cooling unit.
   Pay attention not to pinch the cables.
6. Put the front panel and the screw caps for eyebolt.

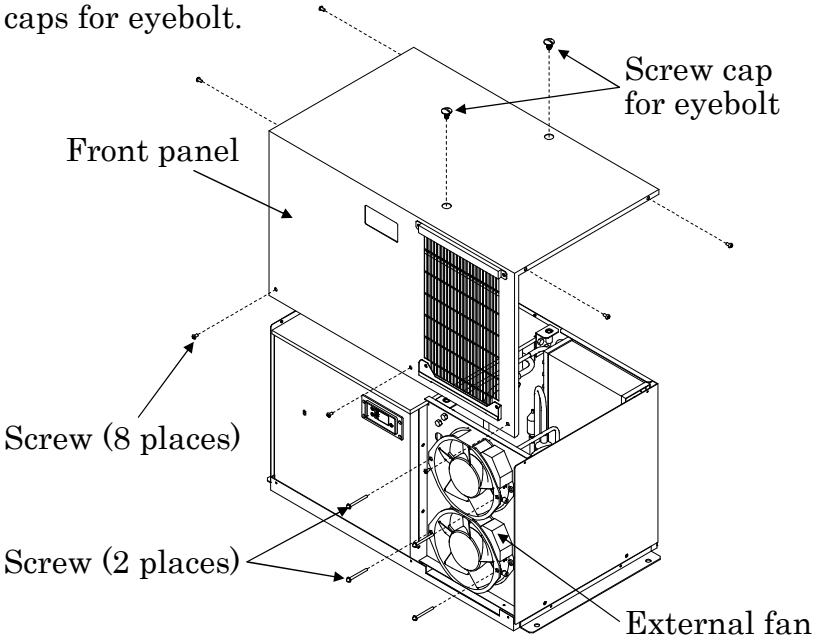

6-3 Replacement of the internal fan (Ex. OCA-S1100AC)

1. Remove the screw caps for eyebolt on the top panel.
2. Detach the front cover by removing 8 screws.
3. Detach the top cover by removing 3 screws.
4. Detach the airflow guide by removing 2 screws.
5. Remove the fan fixing screw.
6. Disconnect the power cord to detach the fan.
7. Insert the power cord to a replacement fan and then attach it to the cooling unit.
   Pay attention not to pinch the cables.
8. Attach the airflow guide, top cover, front cover and then the screw caps for eyebolt.

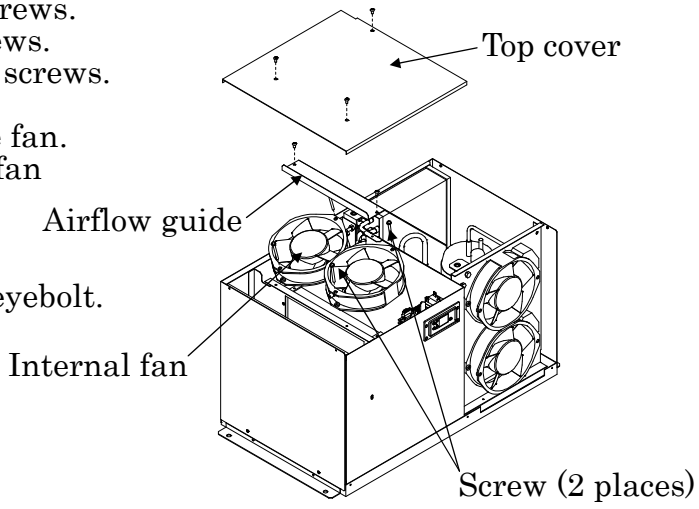

◎Replacement fan

Applicable COOLCABI models	Model	
	Internal fan	Internal fan
OCA-S300AC-A220-CN	FM-S300ACIN-A220-CN	FM-S300ACOUT-A220-CN
OCA-S700AC-A220-CN	FM-S700ACIN-A220-CN	FM-S700ACOUT-A220-CN
OCA-S1100AC-A220-CN	FM-S1100ACIN-A220-CN	FM-S1100ACOUT-A220-CN
OCA-S1700AC-A220-CN	FM-S1700ACIN-A220-CN	FM-S1700ACOUT-A220-CN

6-4 Troubleshooting

Failure	Cause	Remedy
- Internal temperature rises too much - Cool air is not blown out - Display shows High Temp. Alarm E1 or Radiation Error Alarm E3	a. Circuit breaker tripped b. Internal temperature is lower than the setting temperature. c. Less cooling capacity against the set value. d. Ambient temperature is too high e. Internal temperature is too high. f. Filter is dirty g. External fan is not running h. Internal fan is not running i. Poor air circulation	a. Turn on the breaker b. Check the temperature setting and the internal temperature. c. Set a higher value, or change the cooling unit with a one of higher capacity. d. This unit is unusable under a circumstance where the ambient temperature may exceed 50 ℃. e. This product cannot be used where temperature exceeds 45 ℃. f. Clean the filter. g. Check temperature setting and the internal temperature. In case of fan failure, replace the fan. h. To check whether the fan works properly, execute forcible cooling (See 4-4 of page 8). If it did not run, fan replacement is necessary. i. Remove the problem referring to the page 3.
- Fall in internal temperature is too much	a. Setting temp. is too low b. Failure in the internal circuit or the temperature sensor	a. Change the setting. b. Contact the supplier.
-Drainage error occurred. (Display shows E6)	Drainage is stagnant.	Check the drain hose for clogging or bending.
- Too much condensation	Control panel is not airtight enough	Seal gaps to improve airtightness
- Display shows E5	Built-in temperature sensor breakage	Contact the supplier.
- Display shows E7	Internal fan is not running	Replace the fan.
- Display shows E8	Heat exchanger temperature sensor failure.	Contact the supplier.
- Display shows SE	Memory breakage	Contact the supplier.
- Display shows tE		Contact the supplier.

Note: In case any problem is found during operation, turn off the power and stop using the product and contact your supplier providing information including the model and the purchasing date of your unit.

7. Specifications

7-1 Standard specification

Model		OCA-S300AC -A220-CN	OCA-S700AC -A220-CN	OCA-S1100AC -A220-CN	OCA-S1700AC -A220-CN
Cooling capacity *1		300W	600W	1050W	1550W
Rated voltage		Single phase 220VAC～ 50Hz			
Current consumption *2	Rated	0.9A	2.3A	3.4A	3.9A
	Max.	1.1A	2.6A	4.0A	4.8A
Starting current		3.0A	9.0A	13.8A	16.5A
Power consumption *2	Rated	200W	430W	655W	830W
	Max.	230W	490W	785W	1025W
Compressor motor output		200W	300W	450W	568W
Noise (Characteristic A)		60dB	60dB	62dB	64dB
Refrigerant	Type/ Designation	HFC 134a		HFC R407C	
	Amount	190g	250g	460g	420g
GWP		1430		1770	
Outer dimensions (WxHxD in mm)		450×255×250	550×332×270	600×350×350	590×447×350
Weight		16.0kg	24.5kg	33.5kg	39.5kg

Roof mounting type common specification

Type of mounting		Roof Mounting Type
Working temperature *3		+20℃ to +50℃
Working humidity		Not exceeding 85%RH, free from condensation
Setting temperature range *3		+30℃ to 45℃ (Initial setting: 35℃)
Display		Internal temperature, Alarm code/Operating lamp/ Alarm lamp
Function		Off-temperature alarm, Detection of abnormal heat dissipation, Detection of temperature sensor disconnection Drainage Error Alarm, Heat Exchanger Frozen Temp Sensor Alarm
External output		Alarm output, 1a 240V 1.5Ax2 Output (Common)
Vibration resistance		Vibratility 10-55Hz, Stroke 0.15mm, Sweep cycle 10 times
Protective category		Internal circuit : equivalent to IP54
Applicable standards	Environmental standard	RoHS
Body color		Beige（5Y7/1 corresponding）
Fuse rating of control board		250V 1A

Remarks) *1 Nominal value when temperatures both inside and outside the control panel is 35℃
*2 Values at 35℃ temperature both inside and outside are indicated in “Rated” and values at 50℃ outside and 35℃ inside are indicated in “Max.”.
*3 These products should not be used outside the temperature range.

7-2 A complete set of supply

Model	OCA-S300AC -A220-CN	OCA-S700AC -A220-CN	OCA-S1100AC -A220-CN	OCA-S1700AC -A220-CN
COOLCABI	1			
Fixing bolt	M6 : 4			M8 : 4
Washer	M6 : 4			M8 : 4
Spring washer	M6 : 4			M8 : 4
Nut	M6 : 4			M8 : 4
Drain hose	5m			
L joint	2			
Terminal board	1			
Packing	1			
Alarm explanation sheet	1			
Instruction manual	1			

7-3 Outline drawing

OCA-S300AC-A220-CN

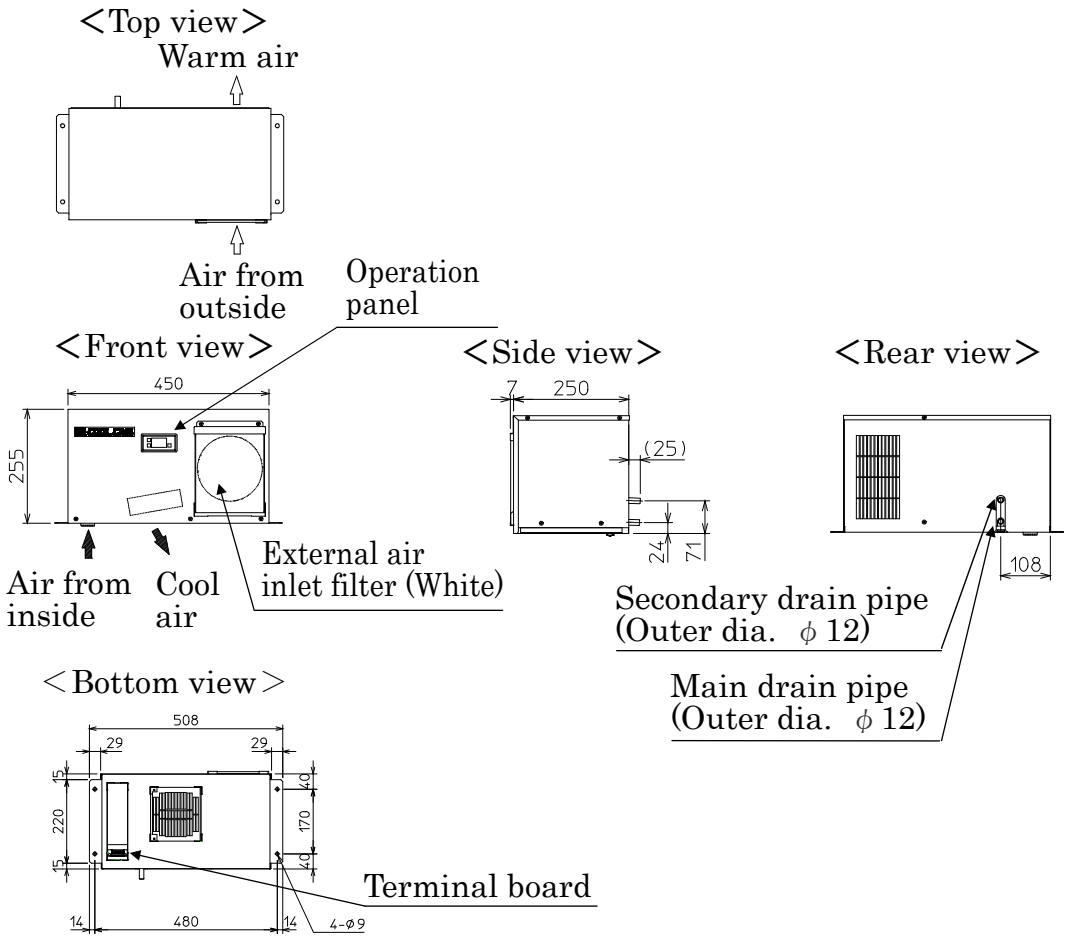

OCA-S700AC-A220-CN

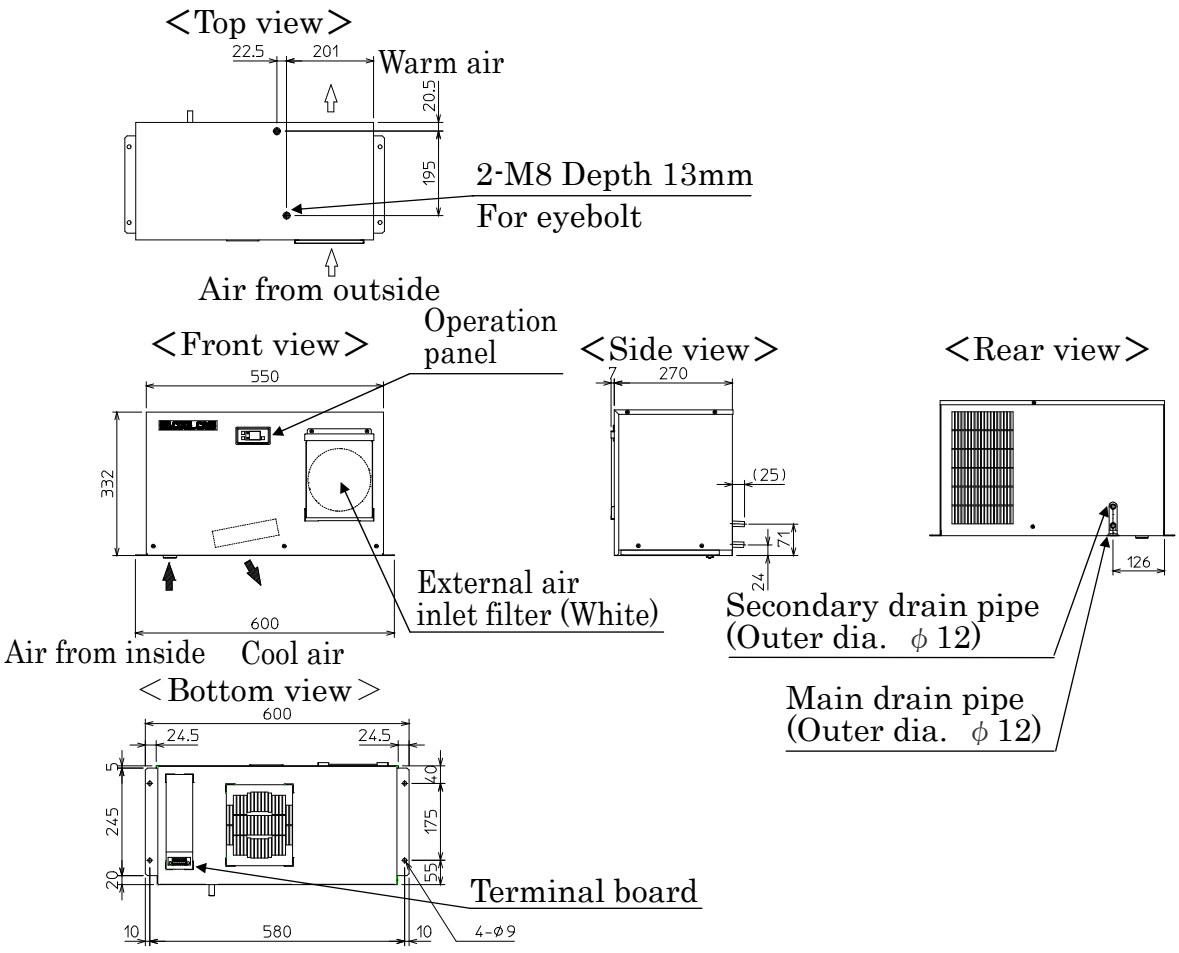

OCA-S1100AC-A220-CN

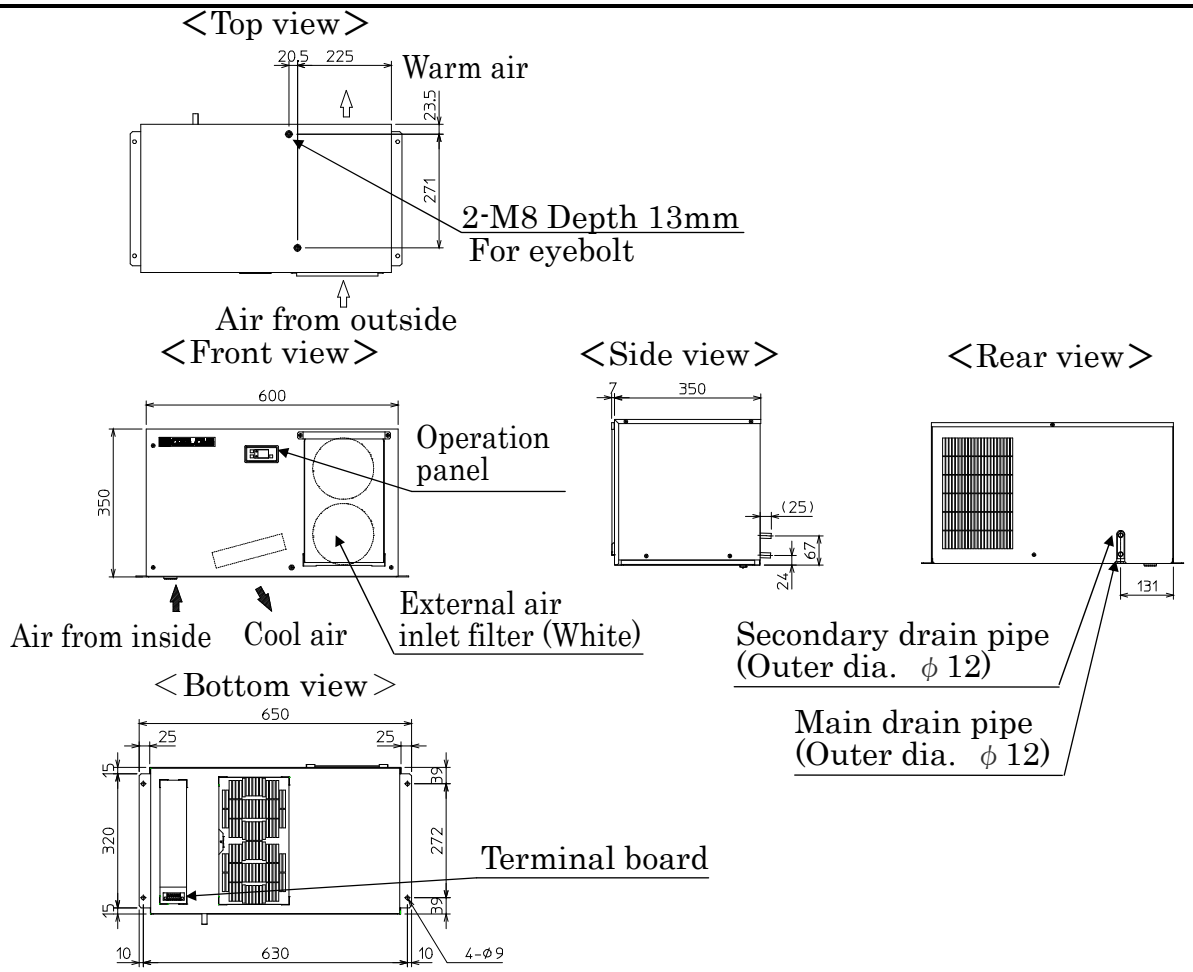

OCA-S1700AC-A220-CN

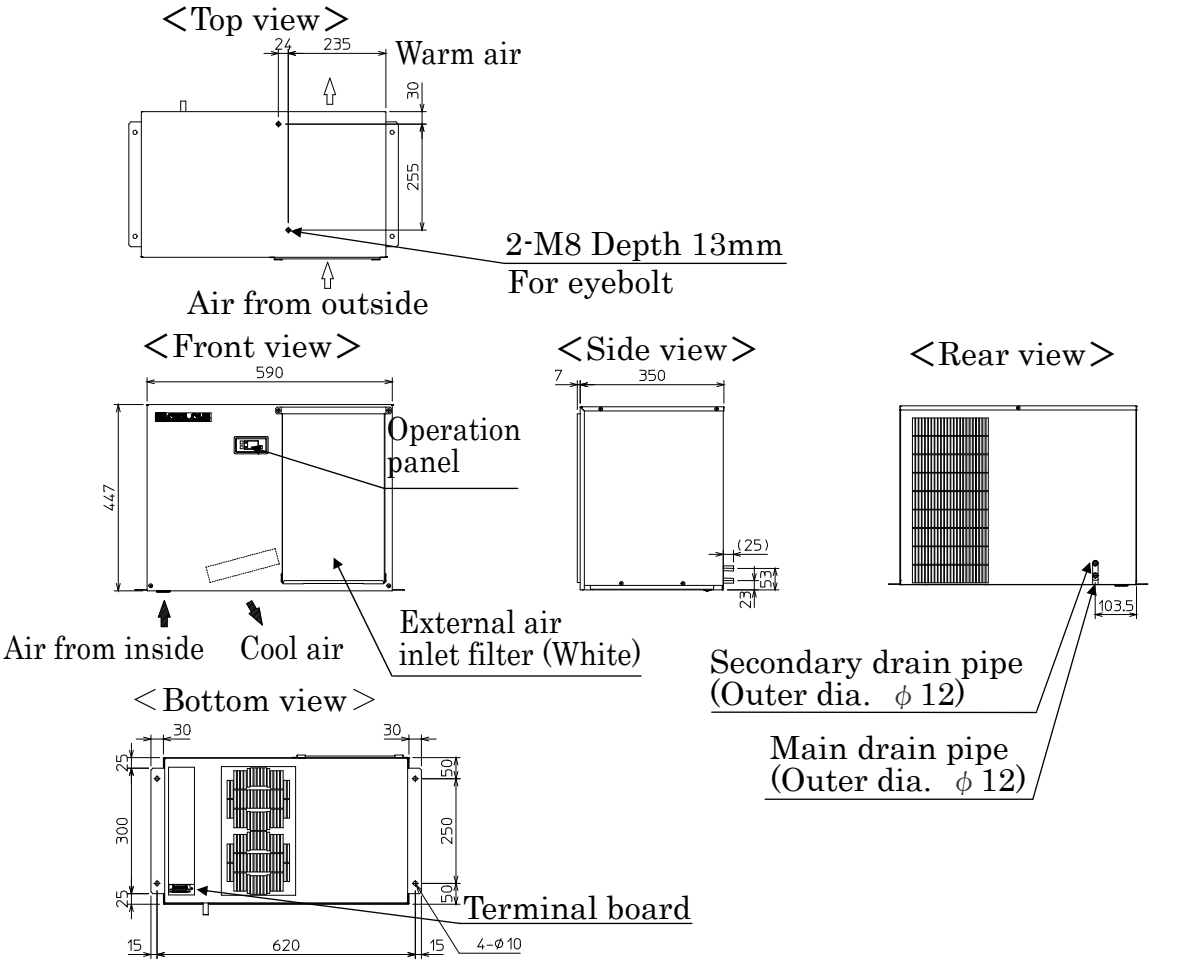

8. Warranty period

This product is covered with 1-year warranty from the date of shipment, provided that such warranty does not apply to damages malfunctions resulted from other than normal use.

9. Waste disposal

This products uses chlorofluorocarbon (HFC) as a refrigerant which requires special handling for its disposal. Please observe the applicable laws and regulations governing your country and local area and make a proper disposal by a professional waste disposal service.

■For the purpose of environmental protection, please observe the followings.
- Do not release the refrigerant sealed in the cooling circuit into the atmosphere.
- Recover the refrigerant properly when the product is disposed.
- Unnecessary refrigerant arisen from repairing work should be properly recovered without releasing into the atmosphere.

■Refrigerant number and its amount are stated in the rating plate on the unit.
■The recovery cost of refrigerant should be paid by the user.
■Recovery of the refrigerant should be done by an authorized waste disposer.

□Owner's management responsibility
■Check of equipment
The enclosure cooling unit needs simple regular inspection.
Daily checkup : Temperature and appearance
Regular checkup at least four times a year : Noise, damages on appearance,corrosion, rusting,oil stains, frost
There is no qualification limit for a person who carries out inspection.
■Prevention of filling refrigerant when leak is detected
In case any refrigerant leak was found, locate the leak point and take necessary actions as soon as possible.
No refrigerant filling should not be made until the problem resolves.
Please contact us immediately when such leak was found.
■Checkup and other records
All the records for checkup, repairing and filling/recovery of refrigerant should be stored.
Any format can be used for those records.
Please contact us for repairing and filling of refrigerant needs.

OHM ELECTRIC CO., LTD.
Main Factory: 7000-21, Nakagawa, Hosoe, Kita-Ku, Hamamatsu, Shizuoka 431-1304, Japan
TEL 81-53-522-5559 FAX 81-53-523-2361 http : //www.ohm.jp/
The contents of this manual is as of April, 2015.
COOLCABI Instruction Manual : The 1st edition

OHM ELECTRIC COOL CABI

RoHS

使用说明书

柜外顶端安装型

OCA-S300AC-A220-CN
OCA-S700AC-A220-CN
OCA-S1100AC-A220-CN
OCA-S1700AC-A220-CN

注意

- 使用之前，请务必阅读本说明书。
- 请将本说明书放在本机旁边，以随时查看。

≪目录≫

1．安全须知 …… 2
2．安装方法 …… 3～6
3．配线 …… 7～8
4．运行 …… 8～13
5．警报・安全功能 …… 14～15
6．维护与保养 …… 15～17
7．规格 …… 18～21
8．保修期间 …… 22
9．氟利昂的回收 …… 22

OHM ELECTRIC CO., LTD.

1．安全须知

● 本空调专用于冷却控制盘，严禁使用于此目的以外的其他用途。

● 使用本空调之前，请务必阅读「安全须知」并正确使用。

● 本说明书上的注意事项包括安全方面的重要内容，请务必遵守。

标志和内容是以下：

危险	操作失误时，可能会造成使用者死亡或者重伤的迫切危险。
注意	操作失误时，可能会给使用者引起损害或者造成物质损失。

「标志」所表示的意思如下。

绝对禁止。	注意旋转物。
请注意。	注意感应电压。
强制执行。	

危险	
	通电时，请勿碰触接线盒。

注意	
	通电时，请勿拆下前盖。请勿将手指或者异物插进扇叶旋转部位。 请先关好开关并停止风扇后再进行作业。 →否则，可导致意外损伤。
	请勿在屋外使用。
	请不要在发生或者充满易燃性气体、腐蚀性气体、油烟以及影响绝缘状态的灰尘等的地方使用。 →否则，可导致寿命低下、意外损伤。
	请勿在发生振动和冲击的地方使用。
	严禁改造和修理本体。万一需要修理的场合，请与生产厂家协商。
	为了环保，冷却回路里密封的制冷剂和油必须要经过专门处理。 废弃处理时，请务必由专门的处理单位进行处理。
	请将空调设置或安装在周围空气循环良好的场所。 →否则会导致冷却能力低下。
	搬运空调时，请不要倾斜，尽量保持笔直。 绝不要搬运已经安装在控制盘的状态下的空调。
	请在周围温度＋20℃～＋50℃，周围湿度 85%RH 以下的条件使用。
	请勿将空调平放或者倒置，更不要将空调放在超过＋70℃的环境中。
	货物到手后，请先确认包装是否完好无损。 →货物包装的损坏，也可能导致故障，因此一旦发现包装破损，请勿使用。
	请使用出厂时带有的过滤网。 →过密的过滤网，会降低放热效率，使冷却能力低下和引起故障。
	孩童/残障者/对空调知识不熟悉的人，必须在相关人士的监督下或者受过相关教育后，才能使用。

2．安装方法

2－1　安装时的注意事项

危险

安装空调时，为了防止触电，请切断控制盘的电源。

注意

安装空调时，请勿使用本机附带品之外的其他零部件。
→否则，会导致故障和意外损伤。

请按规定的尺寸对切割口进行加工。

安装空调时，请按右图水平・垂直安装（±2°）。
→确保空调的稳定运转并使得冷凝水顺利排出。

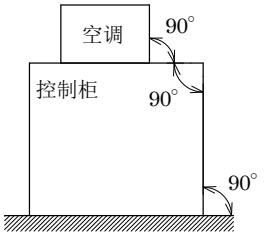

安装空调时，一定要安装在空气循环良好的地方，
并且要与其他装置或墙壁保持 200 米以上的距离。
一定不要阻碍控制盘内的空气循环。否则，空气循环不顺畅，会发生冷却能力低下和结露现象。

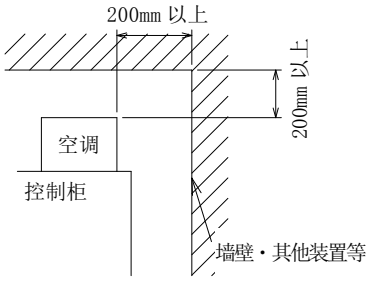

空调使用的电源，一定得采用铭牌上所标记的额定电压。
另外，接电时，一定要通过合适的断路器来接线。为了防止漏电触电，地线请务必接地。

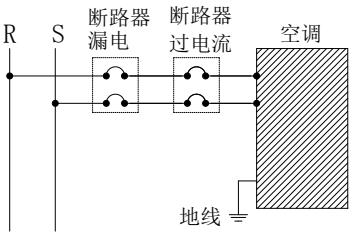

空调的安装，电工工作是必要的。请向专业人员进行咨询。
→接线等电工工作，稍有欠缺，就会导致触电和火灾。

安装好后，为了保护压缩机，请先等 30 分钟以上再开始通电并运转。

一定要确保控制盘的气密性良好。
→否则会产生结露并导致冷却效果低下。

加工控制盘的切割口时，为了防止粉末等进入控制盘内部，请用布等做好保护工作。

冷风短路现象
在空调冷风吹出口附近，如果控制盘内有其他机器或者障碍物时，冷风会顺而返回到吸入口（冷风短路现象）。
在此情况下，冷风就无法在控制盘内得到良好循环，会引起控制盘内的机器出现故障。
另外，空调的运行负荷加大，产生过电流，会导致空调发生故障。
确认如果发生了冷风短路现象，请安装整风板或者放置搅拌风扇来防止短路。

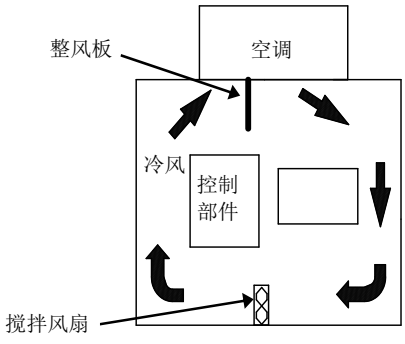

２－２　安装顺序

①请按第 5 页各型号盘外安装开口部位示意图在安装面板上进行切割加工。
②在空调底面粘贴附带的密封条。(请参照下列设置方法)
③请按照安装面板上的开口形状，安装空调。
④从控制柜外侧向安装孔里插入附带的安装螺栓。(请注意型号不同，螺栓数量也不同)
⑤请从控制柜内部使用垫圈和螺母，将空调和安装面板固定住。
⑥为确保控制盘的气密性，请根据需要适当的密封。
⑦请将随附的[警报指示牌]贴在容易看到的位置。

设置方法

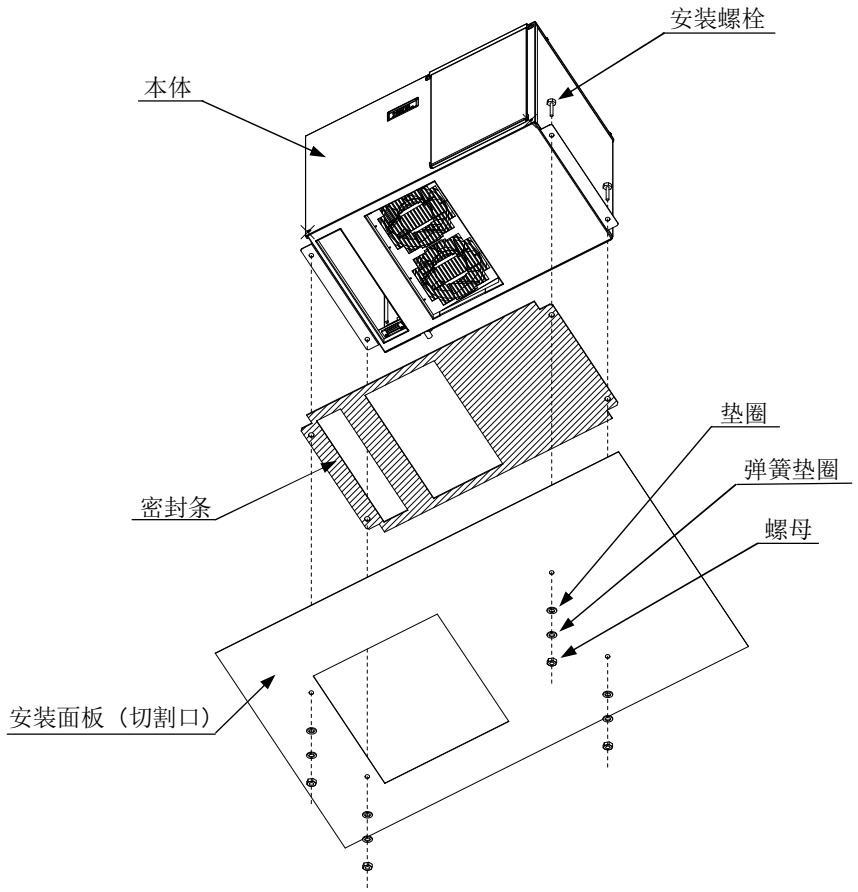

警报指示牌

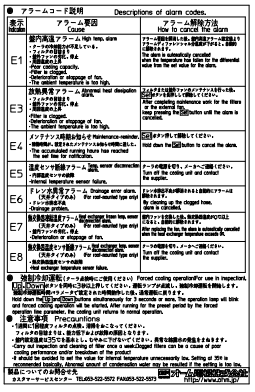

⚠ 注意

型号 OCA-S700AC、OCA-S1100AC、OCA-S1700AC 的上方顶部有带环螺栓用螺母。使用带环螺栓吊住的场合，请务必将两处均一平衡吊起。
仅一处吊起的话，空调有可能会发生故障以及破损。

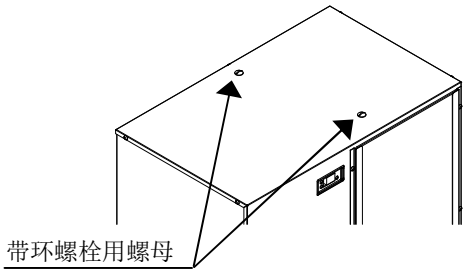

●控制柜外部安装切割口示意图　＜从控制柜外部来看＞

OCA-S300AC-A220-CN	OCA-S700AC-A220-CN
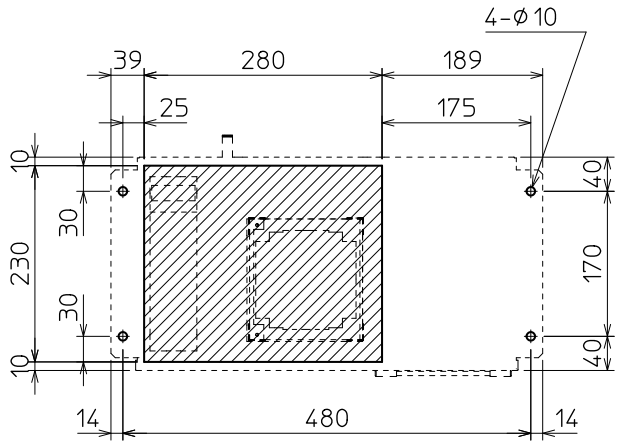	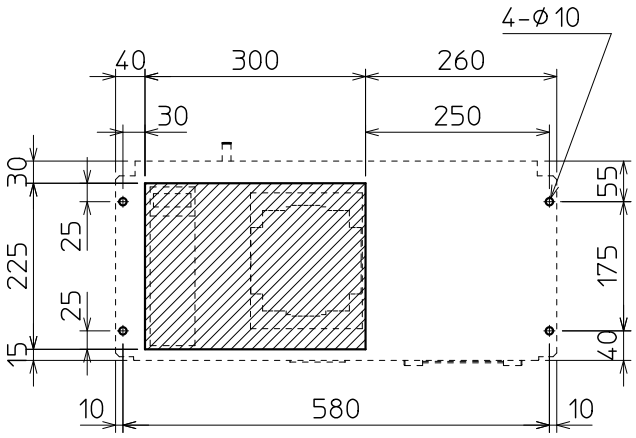
OCA-S1100AC-A220-CN	**OCA-S1700AC-A220-CN**
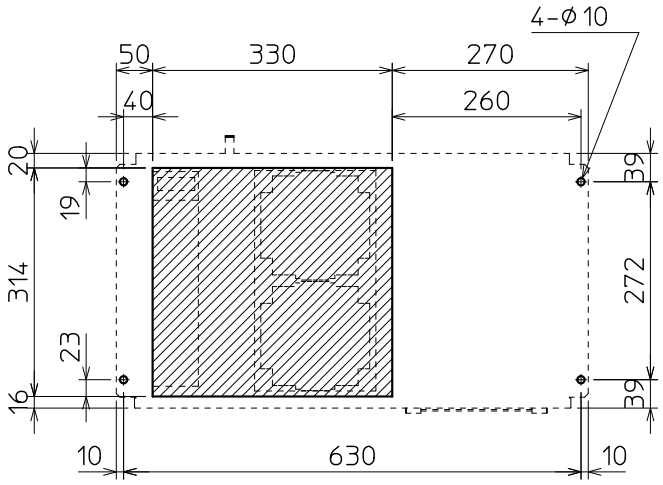	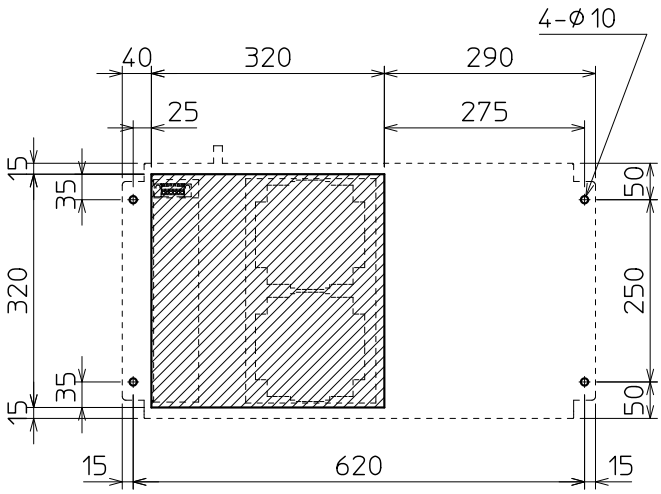

2－3　排水管的安装

经空调除湿而发生的废水，通过排水管排出。
请按照以下注意事项，正确安装排水管。

⚠ 注意

废水无法正常排出的话，就会从空调的接水盘里溢出来流到空调内或者控制柜内，请正确安装排水管。

- 将排水软管插入排水导管时，须用力插到里头，以免脱落。排水软管的前端和排水导管的结合部如果是松的状态，请使用绑带固定好。
- 不要将 2 根排水管连接起来使用。
- 控制柜的拐角处，请使用附带的 L 接头。

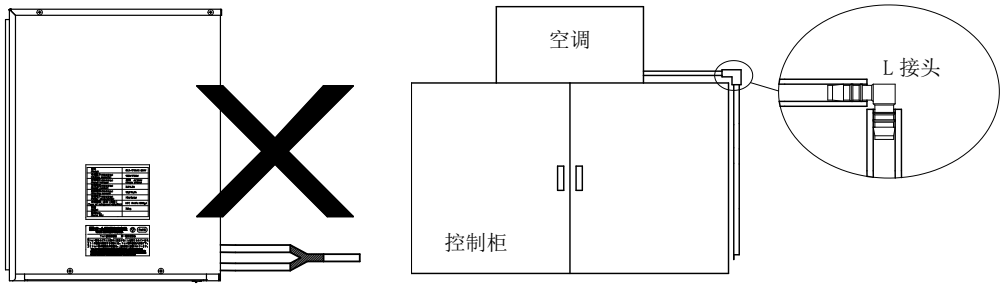

- 排水软管一定要保持笔直，不可弯曲盘绕。
- 排水软管不要高于排水导管的位置。
- 排水软管的前端，一定要笔直向下，不可弯曲。
- 从排水导管口处水平 50cm 以内的地方将排水软管放下。
- 如果非得 50cm 以上的场合，请一定设置成下坡走向。

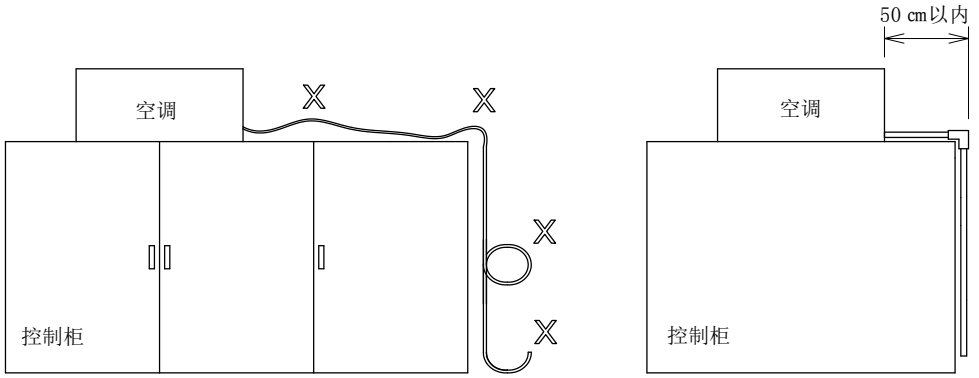

注意）请勿给排水导管施加过重压力！

- 排水软管的前端一定不要浸入水中。
- 湿度高的日子，请一定要频繁的倒掉废水，以免废水溢出。

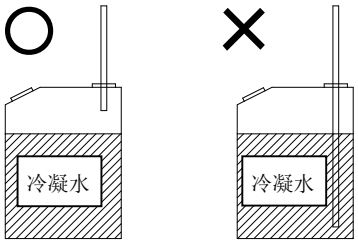

3．配线

⚠ 注意

- 空调的安装以及配线，请一定遵守国家规则。
- 电压要遵守标牌所示电压。
- 空调的允许电压为所示电压的±10%。电压变动要控制在允许电压之内，也要注意电源容量。
- （E）一定要接地线。
- 通电前，一定要确认使用电压，配线，接地是否正确。

3－1　配线方法（合适的电线直径　AWG24～12 / 0.2～2.5mm²）

① 请剥去 6～7mm 电线膜。
② 请用一字螺丝刀将端子台的「接续时按钮」按入。
③ 将电线插入「电线插入口」。
④ 拿出一字螺丝刀。
⑤ 请确认电线是否脱落。
⑥ 使用压着端子的场合，请使用 Phoenix Contact 公司生产的棒式端子。

a 接点 240V 1.5A ×2　电阻性负载
※详情请参照 P.11、12 警报出力端子的分配

◎端子台详图

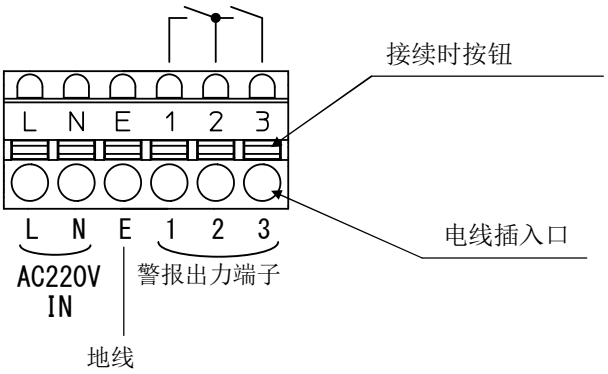

3－2　电路图（例：OCA-S1700AC）

※型号不同，风扇的数量也不同。

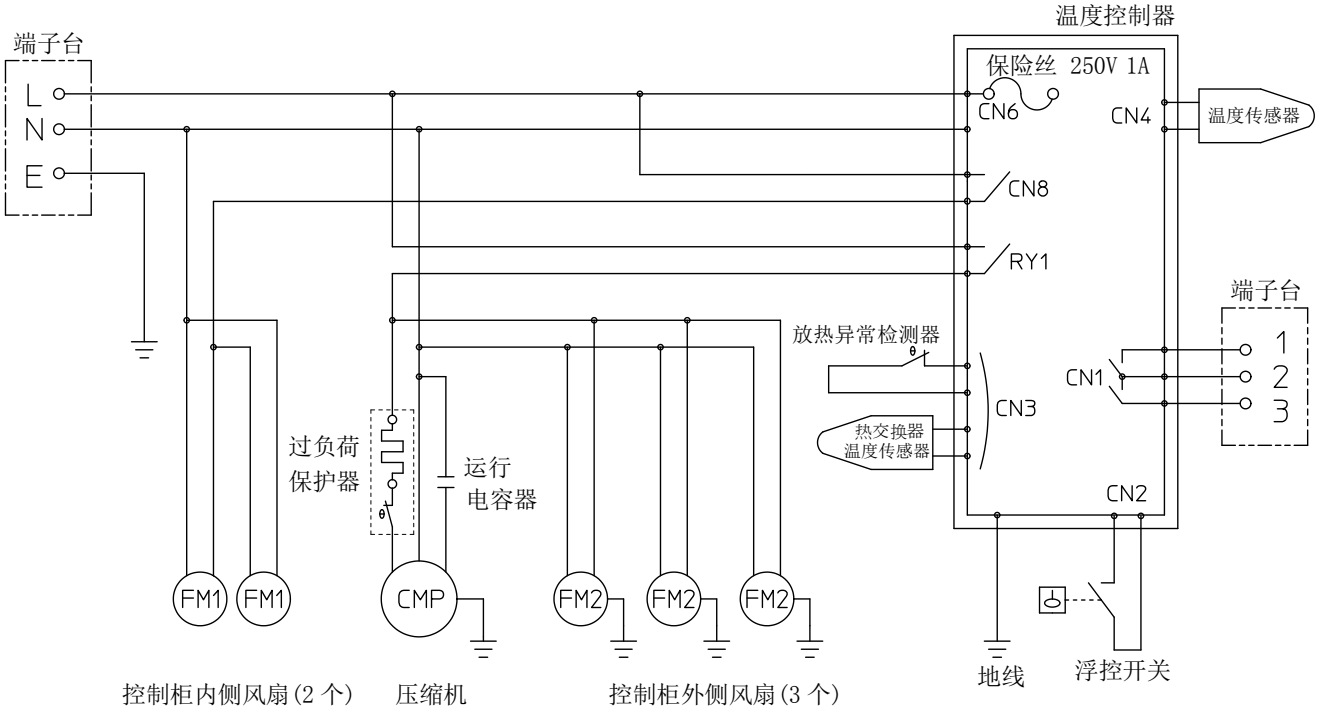

3－3　过电流保护

⚠注意

请使用空调专用的漏电断路器。

→ 如果不使用专用的漏电断路器，万一发生断路的场合，控制柜本身的漏电断路器就会断路。

请按照使用的空调型号选定合适断路器。

- 空调的电源投入以及冷却动作开始，大约有 1 秒钟的始动电流流动。这个始动电流并非是误动作，请选定能遮断在此之后的过电流的断路器。
- 请使用空调专用的漏电断路器（电流 15A 以下）。
- 漏电断路器的额定灵敏度电流请以 30mA 为标准。

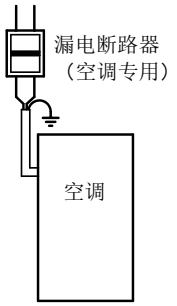

4．运行

4－1　运行时的注意事项

⚠注意

安装空调后，为保护压缩机，请先等 30 分钟以上再开始通电和运行。

压缩机频繁的 ON／OFF 会导致故障和缩短寿命。
请绝对不要对压缩机进行 1 小时 6 回以上的 ON／OFF 操作。
频繁地 ON／OFF 的场合，请将 P.10 参数设定中的温度差的设定值加大。

请勿将手指插入空调，并且拆下盖子后的运行也是绝对禁止的。
→会导致受伤。

开着控制柜的门时，空调的运行是绝对禁止的。
→会导致异常结露和异常的废水的产生。并且也有可能结露水进入控制柜内。

4－2　操作显示屏

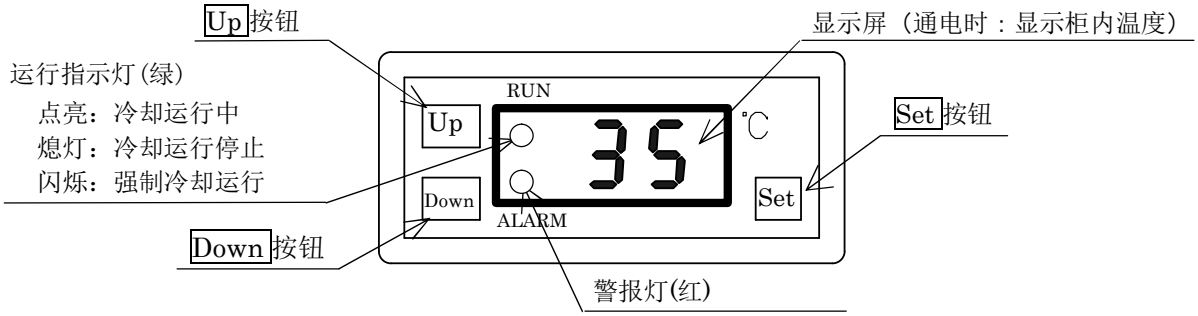

4－3　设定温度的变更

⚠注意

设置温度以＋35℃为标准，请勿擅自降低设定温度。
否则，会导致异常的结露以及异常的废水的产生。

①打开空调电源。（当前的控制柜内部温度就会显示。）

②按下按钮 Set。（当前的设定温度就会闪烁地表示。）

③按下按钮 Up、Down，可以变更所希望的设定温度。（初期设定:35℃　设定温度范围:30～45℃）

④按下按钮 Set。（设定温度被变更，回到控制柜内部温度表示页面。）

4－4　强制冷却运行（请在空调点检时使用。）

Up 和 Down 按钮要同时按下 3 秒以上。
运行指示灯闪烁，开始强制冷却运行。在强制冷却运行时间参数设定中所设置的时间过后，就会回到正常运行。（强制冷却运行时

间的初期设定为 30 秒。）

４－５　设置参数

通常，设置的参数不需要被变更，如果变更，请按下列方法进行。

○控制柜内部温度所表示的状态下，按住 Set 按钮 3 秒以上。

通过以下顺序，参数会被表示。按下 Set 按钮后，显示屏会移动到下一个参数画面。要更改的参数就会显示，通过按 Up 或者 Down 按钮来更改数值，最后按下 Set 按钮，即可完成参数更改。



・温度差[表示：ｄＦ]　初期设定：5℃　设定范围：3～10℃

说明：(设定温度-温度差)的温度的场合，压缩机就会停止

注意：变更参数时，请进行避免反复对压缩机进行每小时 6 回以上的 ON／OFF 等之类的温度设定和温度差设定



・强制冷却运行时间[表示：Ｃｄ]　初期设定：30 秒　设定范围：0～90 秒

Up　Down 按钮同时被按住 3 秒以上，即可进行强制冷却运行。



・控制柜内高温警报温度[表示：ＡＬ]　初期设定：45℃　设定范围：35～51℃

说明：控制柜内高温警报发生的温度。



・控制柜内高温警报用温度差表示[表示：ｄＡ]　初期设定：2℃　设定范围：1～20℃

说明：控制柜内高温警报重置用温度差。

(控制柜内高温警报温度-温度差）的温度的场合，警报就被解除。



・维护保养通知功能[表示：ＦＩ]　初期设定：0　设定范围：0～99

说明：通知维护保养时期。

0：　不使用维护保养通知功能。

1～99：　以 100 个小时表示 1 单位，通知维护保养时间。

（在控制电路板内部、以 1 小时为单位计算着时间。）

例：99 设定⇒插入电源 9900 小时后，通知我们到了维护保养的时间。

（24 小时工作的机械约 412 天后）



・插入电源后强制冷却运行的动作设定表示[表示：ＣＳ]　初期设定：0　设定范围：0、1

说明：空调的电源插入后，要设定是否进行强制冷却运行。

0：不进行强制冷却运行。

1：进行强制冷却运行。



・放热异常时的冷却运行重置方法的设定[表示：Ｐｒ]　初期设定：0　设定范围：0、1

说明：设定放热异常警报发生时的重置方法。

0：手动重置（警报解除方法请参照 P.15「5-1 (2)」。）

1：自动重置（警报解除方法请参照 P.15「5-1 (2)」。）

注意：设定为自动重置的场合，冷冻回路内部的放热异常检测器重置后，冷却运行就会进行，接点出力以及警报指示等就不能被重新设定。

在放热异常的原因没有被解决的情况下，反复进行自动重置，会导致空调发生故障。请尽早解决问题。

・维护保养通知功能的出力设定[表示：Ｆｏ]　初期设定：1　设定范围：0、1

说明：到了维护保养的通知时期，通过警报出力端子，可以设定是否进行 OPEN・CLOSE 的切换。

出力端子的 OPEN・CLOSE 切换可以参考下页的警报出力端子的分配表。

0：不进行切换。

1：进行切换。

※0 的场合，即便到了维护保养通知时间，也不会从警报出力端子进行出力。但是，控制显示屏会显示Ｅ４。



・警报出力端子的分配设定[表示：ＡＳ]　初期设定：0　设定范围：0～3

警报：一旦检测到警报，就会从警报出力端子进行出力。就能设定警报发生时的警报出力端子的分配。

0：警报出力的监视

1：冷却动作和警报出力的监视

2：警报出力时，再次插入电源必要性的监视

3：警报发生时，冷却运行继续的监视

※警报出力端子的分配设定的详情，请参照 P.10、11。

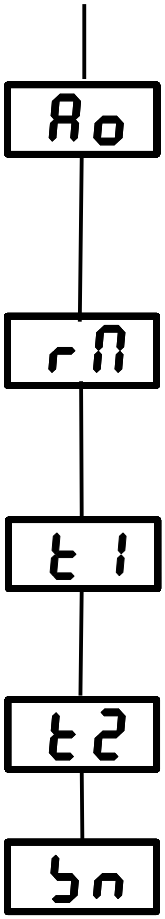

・警报出力端子切换的选择[表示：Ａｏ] 初期设定：0 设定范围：0、1
说明：可以颠倒设置出力端子 OPEN・CLOSE 的切换。
0：根据通常情况下的警报出力端子的分配设定来进行出力。
1：和 0 的状况相反。但是ＡＳ：1 的时候，端子 2-3 之间不起作用。
※警报出力端子的分配设定的详情，请参照 P.10、11。

・运行模式的设定[表示：ｒＭ] 初期设定：1 设定范围：0～3
说明：设定空调的运行模式。
0：连续运行
1：节能运行①
2：节能运行②
3：节能运行③
※运行模式的详情请参照 P.12、13。

・节能运行③的冷却运行时间的设定[表示：ｔ１]
初期设定：7 设定范围：7～60 分
说明：节能运行③时的冷却运行时间，可以被设定。
※ｒＭ表示为 3 的时候，才可被这样设定。

・控制柜外侧风扇・压缩机的停止时间的设定 [表示：ｔ２]
初期设定：3 设定范围：3～10 分
说明：压缩机停止后，到再次运行为止所经过的时间，可以被设定。为了防止压缩机频繁的 ON／OFF，在此期间，即便是设定温度以上，也不进行冷却运行。

・软件版本的表示[表示：Ｓｎ]
说明：控制显示屏内软件的版本被表示。无法变更。

○设定结束后，按住 Set 按钮 3 秒以上。就会返回到目前控制柜内温度表示状态，设定就会被存储。
○要进行参数设定变更的时候，如果不按住按钮 30 秒，设定就会在不被存储的状态下，返回到控制柜内部温度表示。
再一次进行参数设定变更的场合，需要按住 Set 按钮 3 秒以上。

４－６ 警报出力端子的分配

一旦检测出警报，就会从警报出力端子进行出力。通过设定警报发生时的警报出力端子，各种各样的运算指令就会被监视。
此设定会通过参数设定的 AS 和 Ao 的变更来得以实施。
空调的电源插入前，端子 1-2 之间以及端子 2-3 之间是 OPEN 的状态。
电源插入后，到出力端子切换为止，有 0.8 秒的时间间隔。

（１）警报出力的监视[AS：0] 【初期设定】
各种警报发生的场合，出力会被切换。

（２）冷却动作和警报出力的监视[AS：1]
冷却动作的场合以及警报发生的场合，出力会被切换。

（３）警报出力时，电源再次被插入的必要性的监视[AS：2]
各种警报发生的场合，再次插入电源的必要性的警报，以及自动重置或手动重置的解除警报，可以被区别开来。

（４）警报发生时，冷却运行继续的监视[AS：3]
各种警报发生的场合，继续冷却运行的警报，还是停止冷却运行的警报，可以被区别开来。

警报出力端子的分配表[Ao：0]

AS	空调的状态		端子 1-2 之间	端子 2-3 之间	作用和功能
0	通常运行中		CLOSE	OPEN	警报出力的监视
	各种警报出力 ON		OPEN	CLOSE	
1	冷却运行中	各种警报出力 ON	CLOSE	CLOSE	冷却动作和 警报出力的监视
		各种警报出力 OFF	OPEN	CLOSE	
	冷却动作停止中	各种警报出力 ON	CLOSE	OPEN	
		各种警报出力 OFF	OPEN	OPEN	
2	E1, E3, E4*, E6, E7, E6, E7, E6, E7 警报出力 ON	E5, E8, SE 警报 ON	CLOSE	CLOSE	警报出力时，再次插入 电源必要性的监视
		E5, E8, SE 警报 OFF	OPEN	CLOSE	
	E1, E3, E4*, E6, E7, E6, E7, E6, E7 警报出力 OFF	E5, E8, SE 警报 ON	CLOSE	OPEN	
		E5, E8, SE 警报 OFF	OPEN	OPEN	
3	E1, E4*警报 ON	E3, E5, E6，E7，E8，SE 警报 ON	CLOSE	CLOSE	警报出力时， 继续冷却运行的监视
		E3, E5, E6，E7，E8，SE 警报 OFF	OPEN	CLOSE	
	E1, E4*警报 OFF	E3, E5, E6，E7，E8，SE 警报 ON	CLOSE	OPEN	
		E3, E5, E6，E7，E8，SE 警报 OFF	OPEN	OPEN	

※E4 警报 F o (P. 9)：0 的时候，不进行出力。

警报出力端子的分配表[Ao：1]

AS	空调的状态		端子 1-2 之间	端子 2-3 之间	作用和功能
0	通常运行中		OPEN	CLOSE	警报出力的监视
	各种警报出力 ON		CLOSE	OPEN	
1	冷却运行中	各种警报出力 ON	OPEN	CLOSE	冷却动作和 警报出力的监视
		各种警报出力 OFF	CLOSE	CLOSE	
	冷却动作停止中	各种警报出力 ON	OPEN	OPEN	
		各种警报出力 OFF	CLOSE	OPEN	
2	E1, E3, E4*, E6, E7 警报出力 ON	E5, E8, SE 警报 ON	OPEN	OPEN	警报出力时，再次插入 电源的必要性的监视
		E5, E8, SE 警报 OFF	CLOSE	OPEN	
	E1, E3, E4*, E6, E7 警报出力 OFF	E5, E8, SE 警报 ON	OPEN	CLOSE	
		E5, E8, SE 警报 OFF	CLOSE	CLOSE	
3	E1, E4*警报 ON	E3, E5, E6, E7, E8, SE 警报 ON	OPEN	OPEN	警报出力时， 继续冷却运行的监视
		E3, E5, E6, E7, E8, SE 警报 OFF	CLOSE	OPEN	
	E1, E4*警报 OFF	E3, E5, E6, E7, E8, SE 警报 ON	OPEN	CLOSE	
		E3, E5, E6, E7, E8, SE 警报 ON	CLOSE	CLOSE	

※E4 警报Ｆｏ(P.9)：0 的时候，不进行出力。

４－７　运行设定

空调一旦通电，就会按照各运行模式来运行。
初期设定时，空调的设定温度为 35℃、温度差为 5℃。
因此，控制柜内部温度为 35℃时，压缩机运行，开始冷却，30℃时停止运行。
运行模式可从连续运行，节能运行①、②、③共 4 种模式中选择。

运行时的共通注意事项。

・通电开始后，控制柜内部温度达到控制柜内高温警报温度时，通过对ＡＳ、Ａｏ的设定，依据 P.12 的警报出力端子的分配表，警报灯点亮。
・冷却动作停止后的一定时间内（初期设定：3 分），控制柜内的温度即便上升到设定温度，冷却动作也不运行。

（１）连续运行
控制柜内的温度达到设定温度时，就会运行。达到(设定温度-温度差)的温度的场合，控制柜外侧风扇以及压缩机就会停止。控制柜内侧风扇则随时运行。（ ）内的表示为初期设定。

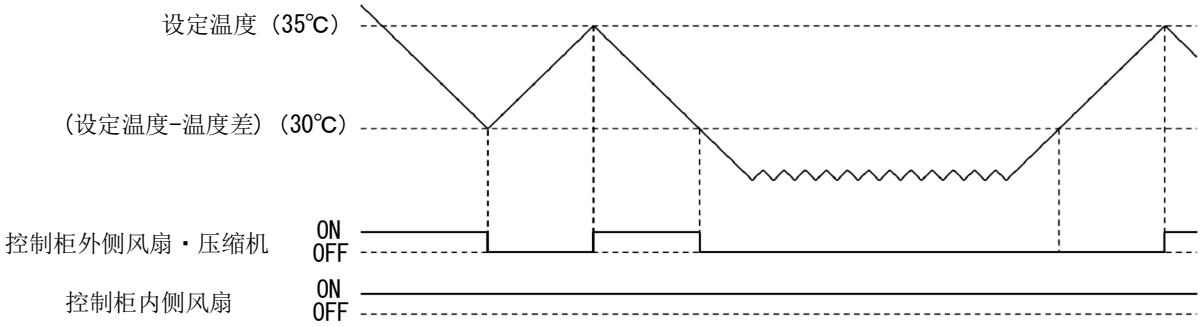

（２）节能运行①【初期设定】
控制柜内的温度比(设定温度-温度差)的温度低时，控制柜内侧风扇就会每 30 分钟 1 回，进行 30 秒的送风运行。这样可以防止控制柜内的热量堆积。尤其是在冬天不进行冷却运行的场合，控制柜内侧风扇的间歇运行，可以节能。（ ）内的表示为初期设定。

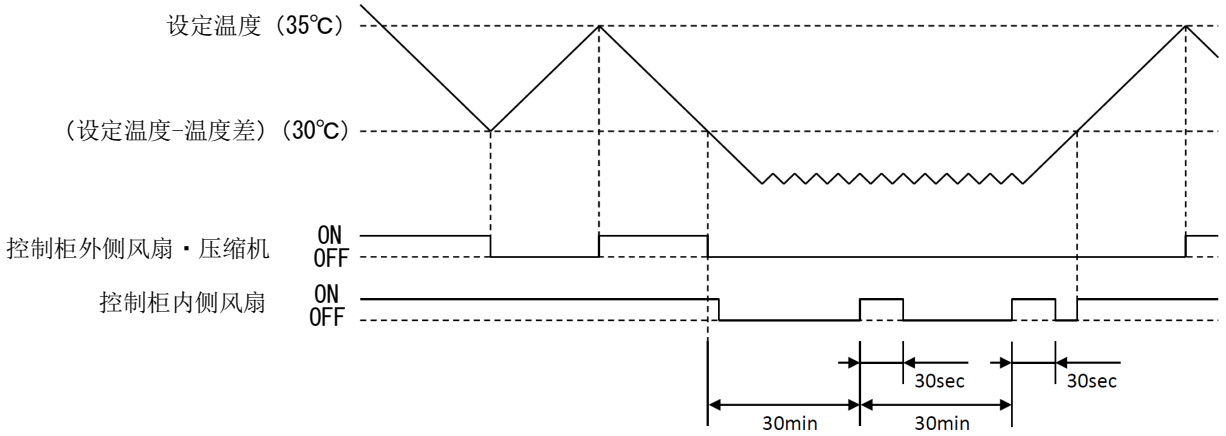

【注意】・为了冷冻回路的保护，冷却动作停止 5 分钟后，控制柜内侧风扇才停止。
・控制柜内的温度达到（设定温度-温度差）的温度时，控制柜内侧风扇会连续运行。

（３）节能运行②

控制柜内侧风扇的动作等同于冷却动作。

冬天不进行冷却运行的场合，柜内侧风扇的停止运行可以节能。（ ）内的表示为初期设定。

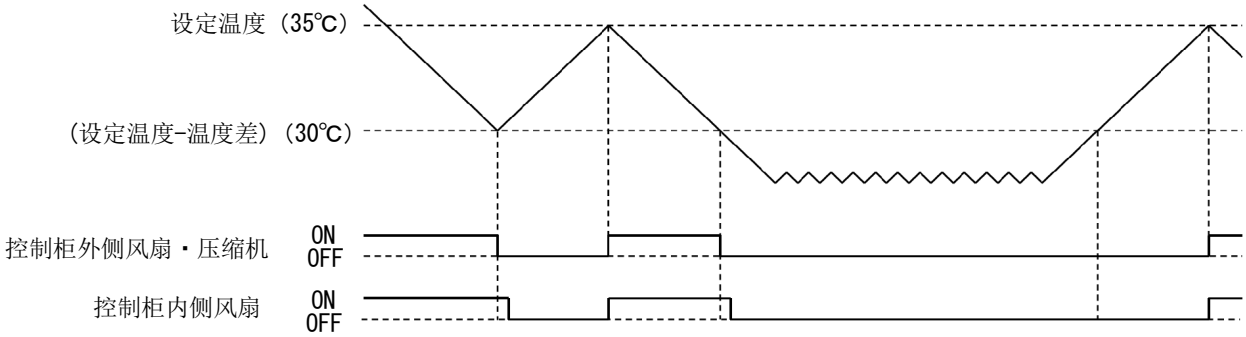

【注意】・控制柜内侧风扇停止，空气不循环的话，局部温度可能会有所上升。

・为了冷冻回路的保护，冷却运行停止 5 分钟后，控制柜内侧风扇才停止。

（４）节能运行③

控制柜内温度在设定温度以下，(设定温度-温度差)的温度以上的场合，设定冷却动作时间和停止时间，通过一定的循环使其ＯＮ・ＯＦＦ可以节能。参数设定 t1 为冷却动作时间，t2 为停止时间。（ ）内的表示为初期设定。

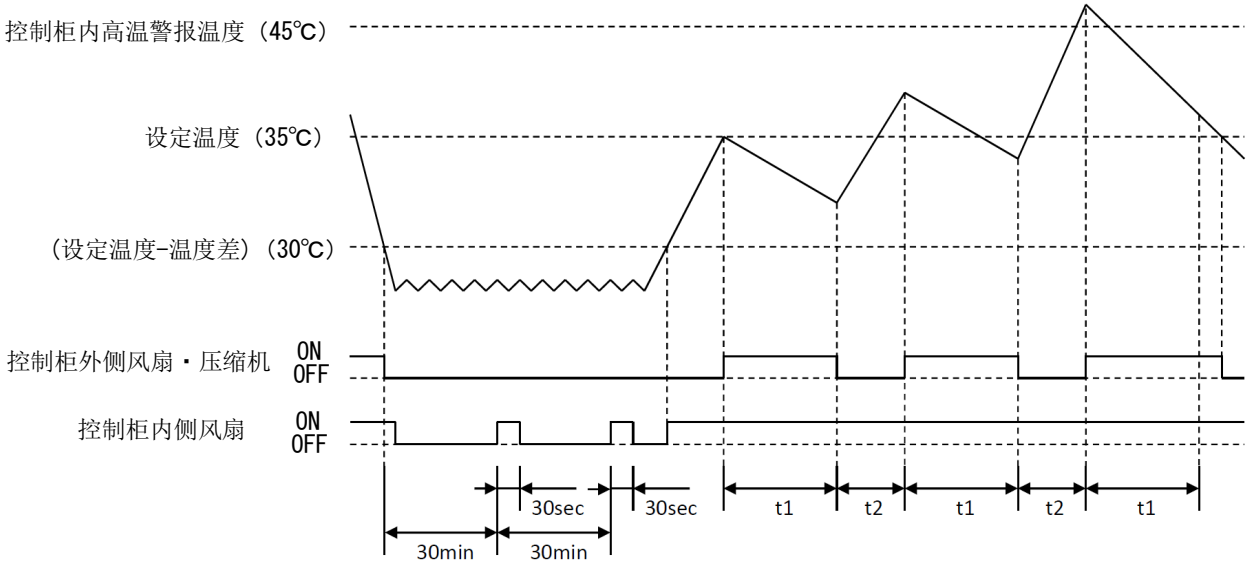

※控制柜外侧风扇・压缩机的间歇运行时的冷却动作时间（7 分）

※控制柜外侧风扇・压缩机的停止时间（3 分）

【注意】・一定时间内，由于强制停止压缩机，有时候控制柜内温度比设定温度要高。
而且，如果控制柜内发热量大的话，控制柜内温度有时候会达到控制柜内高温警报温度以上。

・为了防止控制柜内温度的过度上升，在设定的冷却动作时间下，无法下降到设定温度时，直到控制柜内温度比设定温度低为止，继续运行。

・为了冷冻回路的保护，冷却动作停止 5 分钟后，控制柜内侧风扇才停止。

・控制柜内的温度处在(设定温度-温度差)的温度以上，控制柜内侧风扇就会连续运行。

５．警报・安全功能

５－１　警报

（１）Ｅ１：控制柜内高温警报

控制柜内温度达到 45℃（初期设定）时，根据警报出力端子ＡＳ、Ａｏ的设定(请参照 P.12 警报出力端子的分配表)进行出力时，警报灯就会点亮。在显示屏上就会有目前控制柜内部温度和Ｅ１交替地被表示，来告知控制柜内部出现高温。此时，冷却运行不会停止。

控制柜内的温度达到 43℃（初期设定）以下时，警报灯就会熄灭，在显示屏上只有控制柜内部温度被表示。

（２）Ｅ３：放热异常警报

过滤网和散热片的堵塞，风扇发电机的故障等都会导致空调的放热异常，这时冷冻回路内的放热异常检测器就会运行，冷却运行则停止。根据警报出力端子ＡＳ、Ａｏ的设定(请参照 P.12 的警报出力端子的分配表) 进行出力时，警报灯就会点亮。在显示屏上就会有目前控制柜内部温度和Ｅ３交替地被表示，来告知放热异常。

进行过滤网和散热片的清扫，以及风扇发电机的交换后，按下 Set 按钮 3 秒以上就可以解除警报，空调再次开始正常运行。

（３）Ｅ４：维护保养通知功能

空调的累积运行时间达到事先设定的维护保养通知时间时，根据警报出力端子ＡＳ、Ａｏ、Ｆｏ的设定(请参照 P.11 的警报出力端子的分配表)进行出力时，警报灯就会点亮。在显示屏上就会有目前的控制柜内部温度和Ｅ４交替地被表示，来告知要进行维护保养。此时，冷却运行不停止。

进行过滤网等的维护保养之后，按住 Set 按钮就可以解除警报。

对维护保养通知时间的设定进行变更时，原来的累积运行时间就会被重新设定，并从第 1 个小时重新起算。

（４）Ｅ５：温度传感器断线警报

因某些原因使内部温度传感器造成断线时，冷却运行就会停止。根据警报出力端子ＡＳ、Ａｏ的设定(请参照 P.11 警报出力端子的分配表) 进行出力时，警报灯就会点亮。在显示屏上只有Ｅ５被表示。请关掉空调电源，并与厂家联络。

（５）Ｅ６：冷凝排水异常警报

由于排水软管的堵塞，冷凝水无法排出，安装在冷凝水托收盘的浮控开关就会动作，使得冷却运行停止。根据警报出力端子ＡＳ、Ａｏ的设定(请参照 P.11 警报出力端子的分配表) 进行出力时，警报灯就会点亮。在显示屏上就会有目前的控制柜内部温度和Ｅ６交替地被表示，来告知冷凝排水异常。

修理排水软管的堵塞，冷凝水正常排出的话，空调就会根据自动重置正常运行。

（６）Ｅ７：热交换器冻结温度警报

由于散热片的堵塞，控制柜内侧风扇的故障等，冷却侧的热交换器 0℃以下的场合，冷却运行就会停止。根据警报出力端子ＡＳ、Ａｏ的设定(请参照 P.11 警报出力端子的分配表) 进行出力时，警报灯就会点亮。在显示屏上就会有Ｅ７和目前的热交换器的温度交替地被表示，来告知热交换器的冻结。

清扫散热片以及交换控制柜内侧风扇后，按下 Set 按钮 3 秒以上就可以解除警报，空调再次开始正常运行。

（７）Ｅ８：热交换器温度传感器断线警报

因某些原因使冷却侧的热交换器温度传感器造成断线时，冷却运行就会停止。根据警报出力端子ＡＳ、Ａｏ的设定(请参照 P.11 警报出力端子的分配表) 进行出力时，警报灯就会点亮。在显示屏上只有Ｅ８被表示。请关掉空调电源，并与厂家联络。

（８）ＳＥ：系统错误

请关掉空调电源，并与厂家联络。

（９）ｔＥ：系统错误

请与厂家联络。

５－２　安全功能

作为本产品的安全功能，在异常电流和异常温度下，会停止运行。

此时，警报Ｅ１、或者Ｅ３会发生。

根据冷凝水托收盘的浮控开关，排水软管堵塞，水位过高的场合，就会停止冷却运行，防止过度的冷凝排水的排出。此时出现警报Ｅ６。我公司生产的空调是二重排水管构造，1 次排水管堵塞导致冷凝水无法排出的场合，则有 2 次排水管排出，冷凝水无法浸入到控制柜内。

冷却侧的热交换器带有温度传感器，由于风扇故障而导致热交换器达到冻结温度的场合，就会停止冷却运行，防止热交换器冻结。此时，警报Ｅ７就会发生。

６．维护保养

⚠ 注意	
❗	进行维护保养时，请务必先关掉电源，再进行作业。
⚠	更换过滤网时，一定要使用我公司指定的过滤网。 →如果使用过于密实的过滤网，会降低放热效率，导致冷却能力低下和引起故障。
	不要让小孩子做清洗和维护保养作业。
	不要用高压洗净机来进行清扫。

空调的制冷剂回路里已经在生产时填好了必要量的制冷剂，并且经检漏试验以及试运行合格后出厂，因此没有必要对制冷剂回路进行维护保养。

在空气污染的环境中使用过滤网的场合，请安排 1 周 1 次以上的点检和清洗。否则过滤网的堵塞会降低冷却能力。甚至压缩机受到过负荷而使空调停止运行。

６－１　过滤网的维护保养

取出过滤网，进行清扫或者交换。

◎交换用过滤网

过滤网型号	适用的空调型号
ＣＦ－Ｓ１（２个）	OCA-S300AC、OCA-S700AC
ＣＦ－Ｓ２（２个）	OCA-S1100AC
ＣＦ－Ｓ４（２个）	OCA-S1700AC

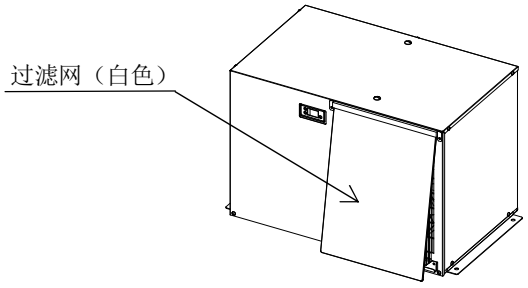

６－２　控制柜外侧风扇的交换(例：OCA-S1100AC)

控制柜外侧风扇发生故障时，请按以下顺序进行更换。

① 卸下空调上方的带环螺栓用螺丝帽。
② 取下前盖。(8 处螺丝)
③ 起下固定控制柜外侧风扇的两处螺丝。
④ 取下风扇的软线、地线、风扇端子部分的绝缘橡胶，卸下风扇进行交换。
⑤ 交换的新的风扇的端子部分一定要放入绝缘橡胶，接好地线，风扇软线之后，将风扇安装到空调上。
（※ 要注意风扇软线不要被夹压。）
⑥ 安装好前盖以及带环螺栓用螺丝帽。

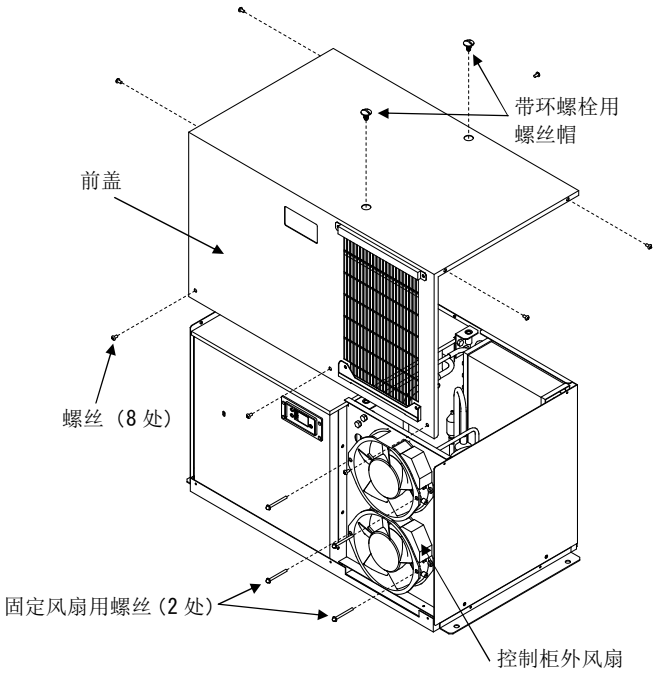

６－３　控制柜内侧风扇的交换(例：OCA-S1100AC)

控制柜内侧风扇发生故障时，请按以下顺序进行更换。

① 卸下空调上方的带环螺栓用螺丝帽。
② 取下前盖。(8 处螺丝)
③ 取下顶部盖子。(3 处螺丝)
④ 取下整风板。(2 处螺丝)
⑤ 起下固定控制柜外侧风扇的两处螺丝。
⑥ 取下风扇软线，更换风扇。
⑦ 将风扇电源线插入新的交换的风扇上，然后将风扇安装到空调上。
(※要注意风扇软线不要被夹压。)
⑧ 按照整风板，顶部盖子，前盖，带环螺栓用螺丝帽的顺序进行安装。

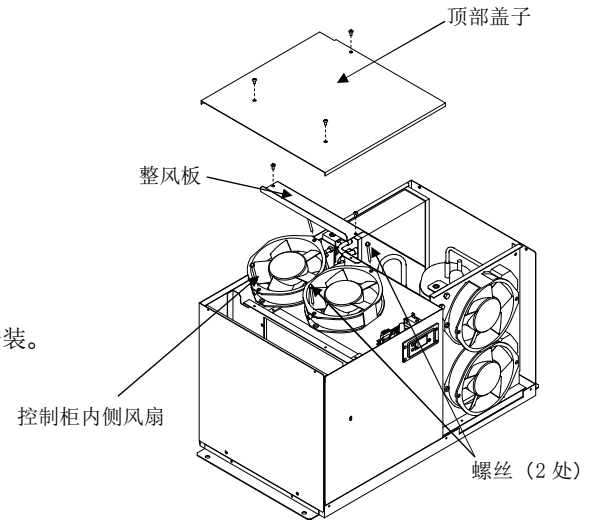

◎交换用风扇

适用的空调型号	控制柜内侧风扇型号	控制柜外侧风扇型号
OCA-S300AC-A220-CN	FM-S300ACIN-A220-CN	FM-S300ACOUT-A220-CN
OCA-S700AC-A220-CN	FM-S700ACIN-A220-CN	FM-S700ACOUT-A220-CN
OCA-S1100AC-A220-CN	FM-S1100ACIN-A220-CN	FM-S1100ACOUT-A220-CN
OCA-S1700AC-A220-CN	FM-S1700ACIN-A220-CN	FM-S1700ACOUT-A220-CN

６－４　故障原因和对策

現象	原因	対策
・控制柜内温度过高。 ・不出冷风。 ・控制柜内高温警报（Ｅ１） 放热异常警报（Ｅ３）	ａ．断路器被切断。	ａ．开通断路器（断路器 ON）
	ｂ．控制柜内温度低于设定温度。	ｂ．确认设定温度和控制柜内温度。
	ｃ．冷却能力跟不上设定问题。	ｃ．提高设定温度。 或者换成冷却能力更高的空调。
	ｄ．周围温度过高。	ｄ．周围温度＋50℃以上的环境下不可使用。
	ｅ．控制柜内温度过高。	ｅ．控制柜内温度＋45℃以上的环境下不可使用。
	ｆ．过滤网太脏。	ｆ．清扫过滤网。
	ｇ．控制柜外风扇不转。	ｇ．确认设定温度和控制柜内温度。 若风扇出现故障，请更换风扇。
	ｈ．控制柜内风扇不转。	ｈ．按照 P.8 强制冷却运行来确认控制柜内侧风扇是否在转。 若不转，请更换风扇。
	ｉ．出现短路。	ｉ．请参考 P.3 来改善短路现象。
・控制柜内温度过低。	ａ．设定温度过低。 ｂ．内部回路或者温度传感器的故障。	ａ．提高设定温度。 ｂ．与厂家联络。
・冷凝排水异常警报（Ｅ６）。	冷凝水无法正常排出。	请确认排水软管堵塞或者弯折。
・除湿之后产生过多水分。	控制柜的密闭性不好。	对控制柜上的缝隙处进行密封处理，提高密闭性。
・Ｅ５。	内部温度传感器的故障。	与厂家联络。
・Ｅ７。	控制柜内侧风扇不转。	更换风扇。
・Ｅ８。	热交换器温度传感器的故障。	与厂家联络。
・ＳＥ。	系统故障	与厂家联络。
・ｔＥ。	―	与厂家联络。

・使用中，如果发生异常，请停止使用，关掉电源并与厂家联络。
联络的时候，请告知空调的型号以及购买时期。

7．规格

7－1　标准规格

标准 AC200V 类型

型号		OCA-S300AC-A220-CN	OCA-S700AC-A220-CN	OCA-S1100AC-A220-CN	OCA-S1700AC-A220-CN
冷却能力　※1		300W	600W	1050W	1550W
额定电压		单相　AC200V～　50Hz			
消耗电流 ※2	额定	0.9A	2.3A	3.4A	3.9A
	最大	1.1A	2.6A	4.0A	4.8A
启动电流		3.0A	9.0A	13.8A	16.5A
消耗功率 ※2	额定	200W	430W	655W	830W
	最大	230W	490W	785W	1025W
压缩机 电动机输出功率		200W	300W	450W	568W
噪音		60dB	60dB	62dB	64dB
制冷剂	种类、名称	HFC R134a		HFC R407C	
	填入量	190g	250g	460g	420g
全球变暖系数值		1430		1770	
外形尺寸 W×H×D (mm)		450×255×250	550×332×270	600×350×350	590×447×350
本体重量		约 18.0kg	约 24.5kg	约 33.5kg	约 39.5kg

柜外顶端安装型规格

安装方法		柜外顶端安装
使用周围温度　※3		+20℃～+50℃
使用周围湿度		85%RH 以下　但是不得结露
温度设定范围　※3		+30℃～+45℃（初期设定温度：35℃）
表示		控制柜内温度、警报显示/运行灯/警报灯
功能		控制柜内高温异常检测、放热异常检测、温度传感器断线检测 维护保养同志时间、点检时强制冷却运行功能 冷凝水溢出检测、蒸发器冻结检测
外部输出		警报出力　1a 240V 1.5A×2 出力(COMMON)
耐振动性		振动频率 10～55Hz　振幅 0.15mm　扫描周期 10 回
保护等级		内部循环　IP54 相当
适用标准	环保支持	RoHS
涂装颜色		米色（5Y7/1 相当）
控制基板保险丝额定值		250V 1A

※1　控制柜外温度以及控制柜内温度+35℃时的公称冷却能力。
　　安装上风向调整百叶窗，冷却能力最大降低 5%。

※2　「额定」是控制柜外温度以及控制柜内温度+35℃的场合、「最大」是控制柜外温度+50℃、控制柜内温度+35℃的场合下的公称值。

※3　温度范围之外无法使用。

7－2　包装内容

名称	OCA-S300AC-A220-CN	OCA-S700AC-A220-CN	OCA-S1100AC-A220-CN	OCA-S1700AC-A220-CN
空调	1台			
安装螺栓	M6：4个			M8：4个
垫圈	M6：4个			M8：4个
螺帽	M6：4个			M8：4个
弹簧垫圈	M6：4个			M8：4个
排水软管	1根（5m）			
L接头	2个			
端子台	1个			
密封圈	1圈			
警报指示牌	1张			
使用说明书	1本			

7－3　外形尺寸图

OCA-S300AC-A220-CN

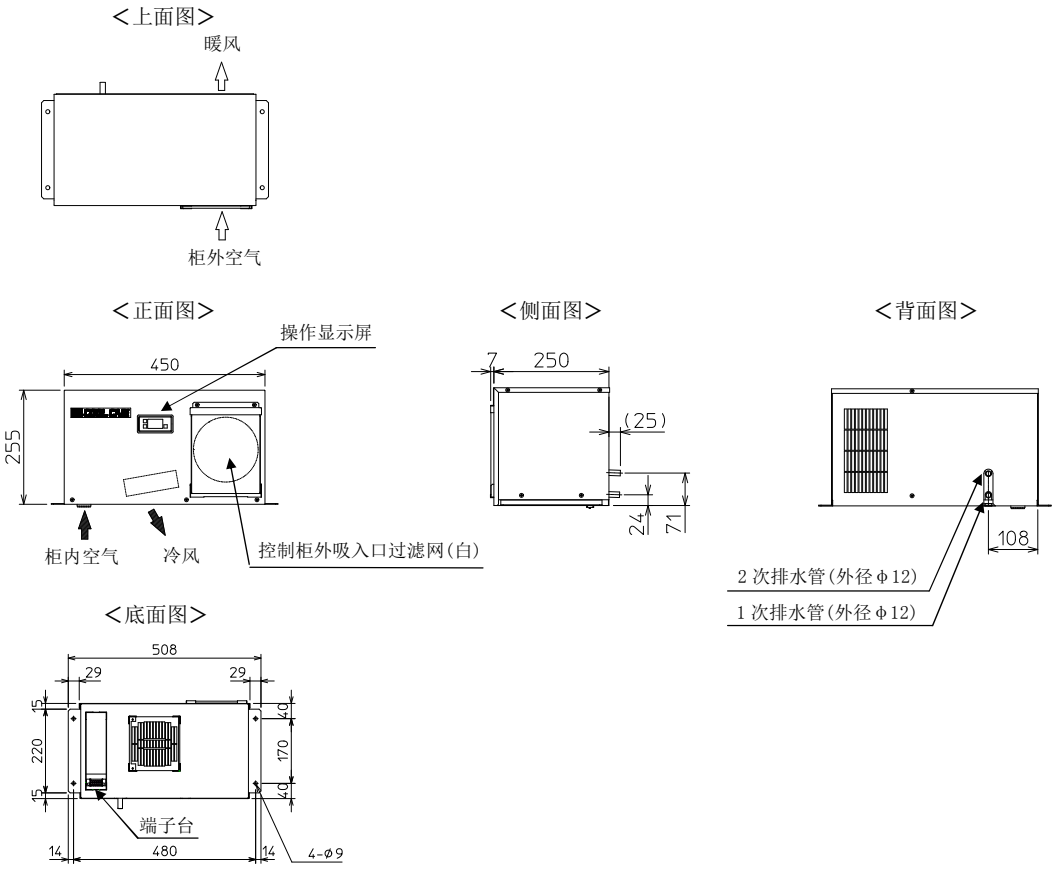

OCA-S700AC-A220-CN

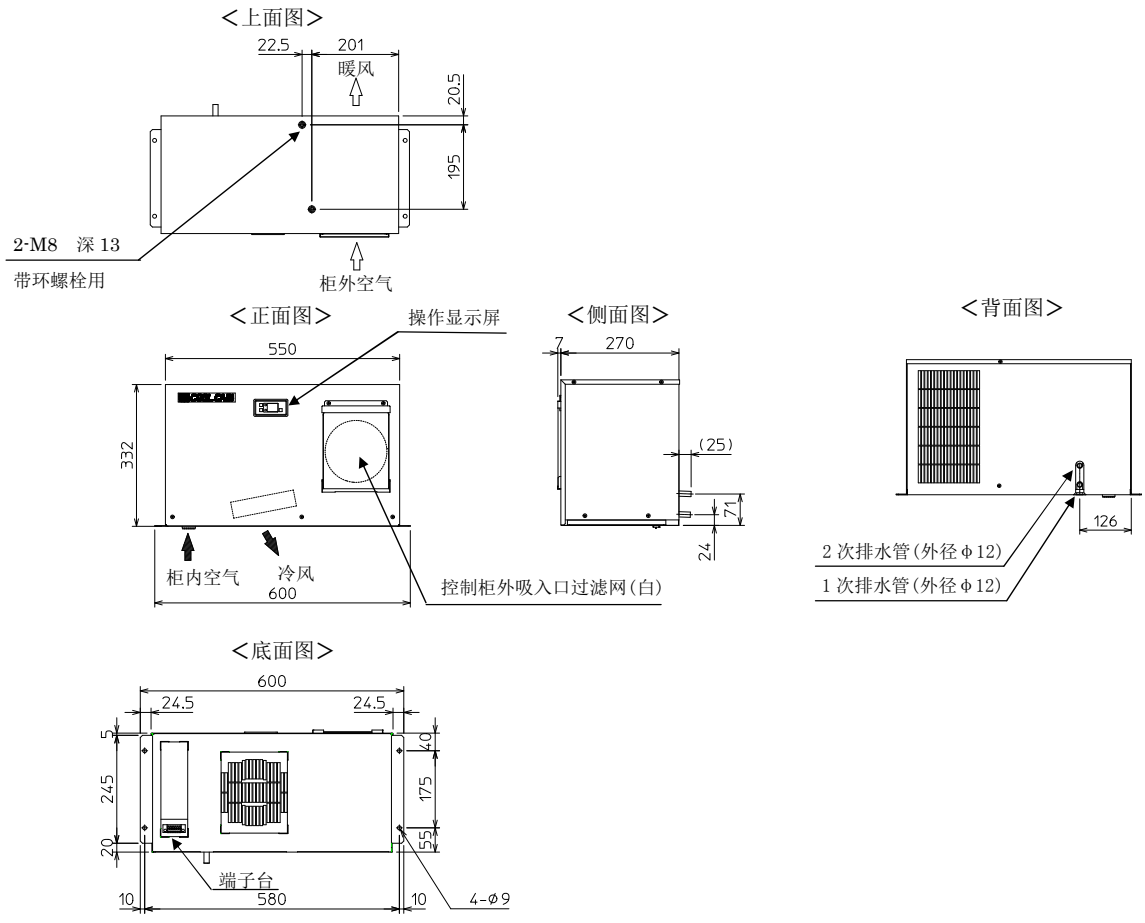

OCA-S1100AC-A220-CN

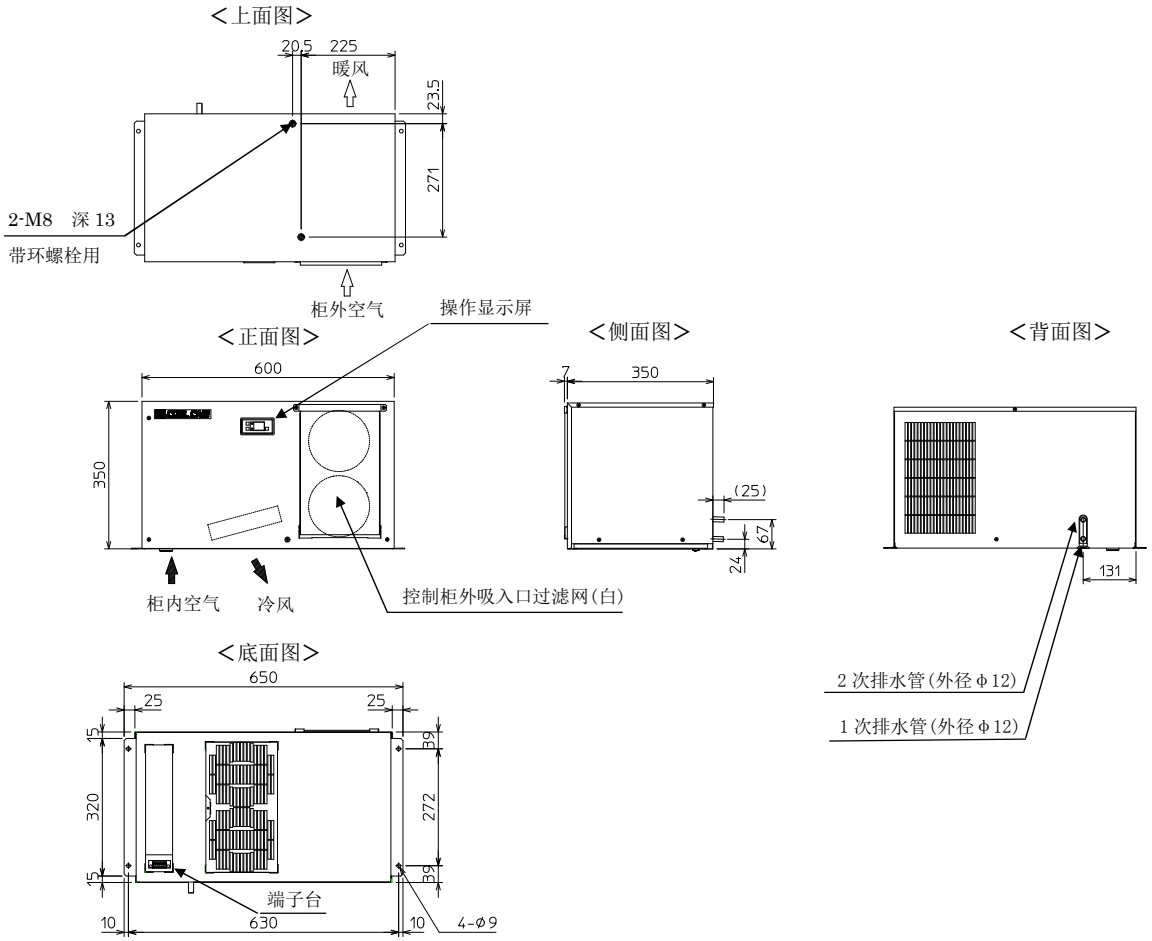

OCA-S1700AC-A220-CN

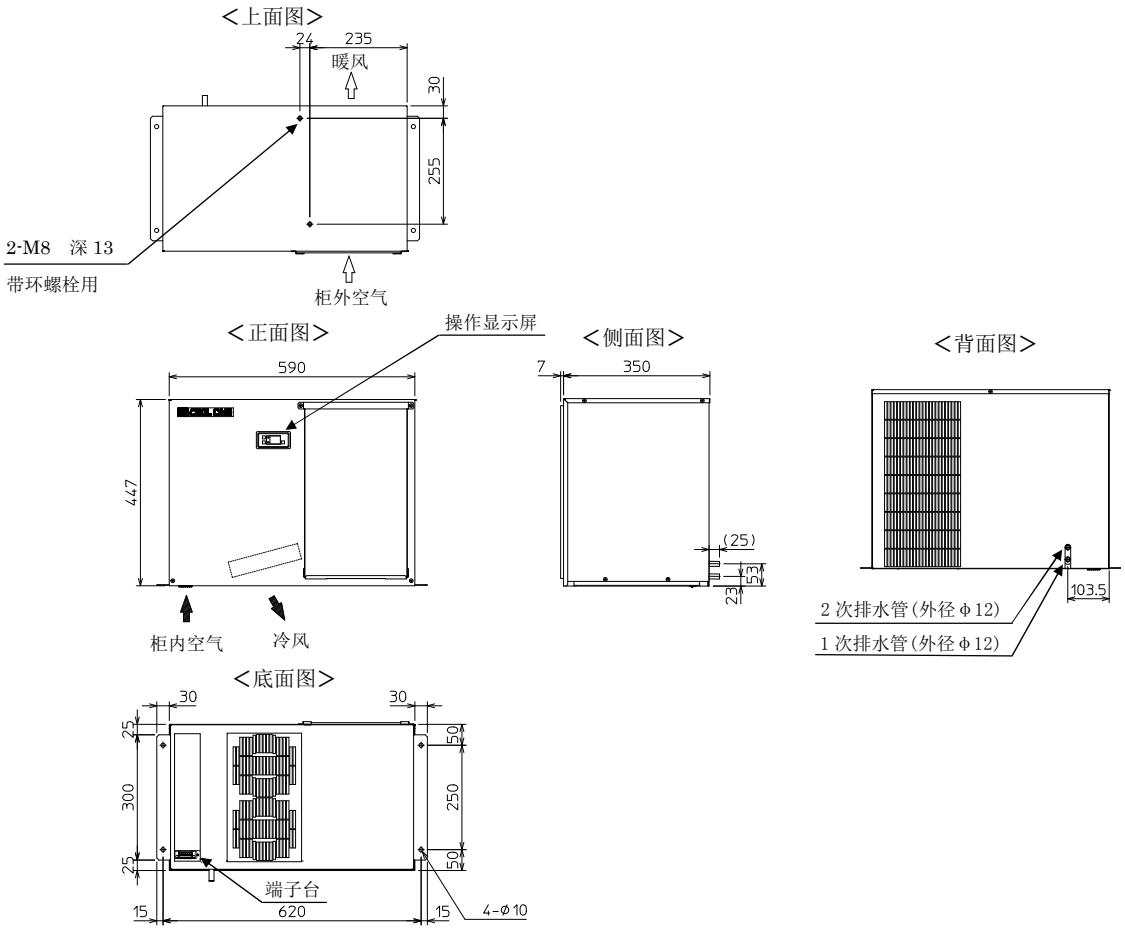

8．保修期间

出厂后 1 年。
但因本公司责任范围外的原因而发生故障时，需要有偿修理。

9．氟利昂的回收

氟利昂作为制冷剂被使用在控制柜用空调。
为了保护环境，抑制氟利昂类向大气中排出，请按照当地的法令对氟利昂类进行回收和处理。

氟利昂作为制冷剂被使用在控制柜用空调，按照氟利昂回收・破坏法(平成 13 年 法律第 64 号)，该氟利昂被指定为第一种特定制品。因此要回收氟利昂类，必须根据改正氟利昂回收・破坏法(平成 19 年 10 月施行)进行处理。氟利昂类会导致全球温暖化和臭氧层的破坏，为了控制氟利昂类在大气中的排出，请务必依法回收氟利昂类。而且在平成 27 年 4 月施行的氟利昂类排出抑制法案中，所有者的管理责任也被明确标记。
控制柜用空调的管理以及废弃中，对于氟利昂类的回收注意事项和实施事项，请参看下面内容。如有不明之处，请咨询生产厂家。

■为了保护地球环境，必须遵守有关法律规定的以下内容。
・任何人不得将控制柜用空调里装入的氟利昂擅自排入到大气中。
■废弃控制柜用空调时，空调的所有者必须要遵守以下内容。
①必须委托政府承认登记的氟利昂类专门回收单位来回收。
②回收氟利昂类时，必须提交有关法律所规定的文件。
③必须要承担回收氟利昂类时所产生的费用。
■制冷剂编号和装入量，一定要在贴在空调上的铭牌上表示。
■控制柜用空调并不适用于家电回收利用法所规定的商品范围。

□所有者的管理责任
■机器的点检
控制柜用空调，简易的定期点检是必要的。
日常点检：温度点检、外观点检
1 年 4 回以上：杂音、产品外观的损伤、腐蚀、发锈、油污、有霜等的确认
对点检实施者并没有限制。
■漏泄防止措施、禁止不修理即充填
发现制冷剂漏泄，要迅速地采取必要的措施来制止漏泄，并尽快与厂家联络。
■点检等的记录
包含上述的点检，机器的修理、氟利昂的充填・回收的履历，必要要记录和保存。

OHM ELECTRIC CO., LTD.
OHM ELECTRIC
总公司 / 客服中心
〒431-1304 静岡県浜松市北区細江町中川 7000-21
TEL：053-522-5572　　FAX：053-522-5573

第 1 版本说明书是 2015 年 4 月发行版本。